

User Manual of Product 1:

TOSHIBA ML-EM34P(SS) Smart Countertop Microwave, Sensor Reheat, Works With Alexa & Remote Control, Kitchen Essentials, Mute Function&ECO; Mode, 1100W, 1.3 Cu Ft, With 12.4" Turntable, Stainless Steel

User Manual of Product 2:


TOSHIBA AC25CEW-SS Large 6-Slice Convection Toaster Oven Countertop, 10-In-One with Toast, Pizza and Rotisserie, 1500W, Stainless Steel, Includes 6 Accessories

TOSHIBA

MICROWAVE OVEN INSTRUCTION MANUAL

ML-EM34P(SS)

Please review this instruction manual before operating.

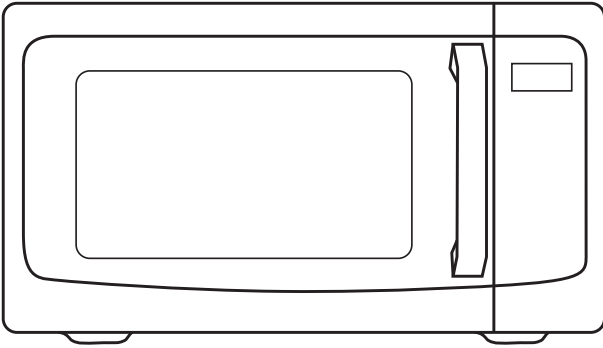

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Important safety instructions	EN-03
Grounding instructions.....	EN-07
Radio interference	EN-09
Utensils.....	EN-10
Materials you can use in microwave oven	EN-11
Materials can not be used in microwave oven	EN-13

PRODUCT SETTING

Setting up your oven	EN-14
----------------------------	-------

INSTRUCTION FOR USE

Before using for the first time	EN-18
Operation	EN-19
1. Clock setting.....	EN-20
2. Kitchen timer.....	EN-20
3. Microwave cook.....	EN-21
4. Speedy cooking	EN-23
5. Weight defrost function.....	EN-24
6. Time defrost function.....	EN-25
7. Popcorn.....	EN-25
8. Potato	EN-26

9. Reheat.....	EN-27
10. Multi-section cooking	EN-27
11. Inquiring function.....	EN-28
12. Lock function for children.....	EN-28
13. Eco function.....	EN-29
14. Mute function.....	EN-29
Cleaning.....	EN-31

MAINTENANCE

Trouble shooting	EN-33
One year limited warranty	EN-34



NOTE


BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.
It is important not to defeat or tamper with the safety interlocks.

- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

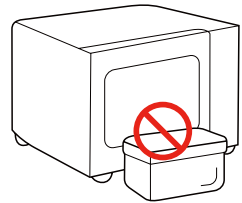

- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
- (1). DOOR (bent)
 - (2). HINGES AND LATCHES (broken or loosened)
 - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

MODEL	ML-EM34P(SS)
RATED VOLTAGE	120V~ 60Hz
RATED INPUT POWER(MICROWAVE)	1500W
RATED OUTPUT POWER(MICROWAVE)	1100W
OVEN CAPACITY	1.3 cu.ft.
TURNTABLE DIAMETER	Ø12.4 inch
EXTERNAL DIMENSIONS	20.4x16.6 x12.4inch
NET WEIGHT	Approx. 35.05lbs



NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy. When using your appliance, follow basic safety precautions, including the following:



Read all instructions before using the appliance.



Read and follow the specific:
"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 1.



This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 7.



Install or locate this oven only in accordance with the installation instructions provided.





To reduce the risk of fire in the oven cavity:


1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes.


IMPORTANT SAFETY INSTRUCTIONS

Do not leave paper products, cooking utensils, or food in the cavity when not in use.


 As with any appliance, close supervision is necessary when used by children.


 This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.

 Keep cord away from heated surfaces.

 When cleaning surfaces of door and oven that comes together on closing the door, use only mild,

nonabrasive soaps, or detergent applied with a sponge or soft cloth.


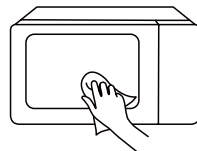



 Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.


IMPORTANT SAFETY INSTRUCTIONS


To reduce the risk of injury to persons:


1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.
4. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
5. Use extreme care when inserting a spoon or other utensil into the container.

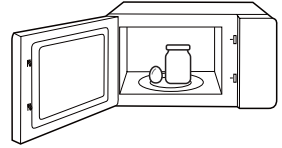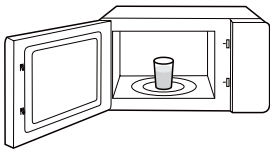


 Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.

 Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.


 Do not operate this oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.


 Do not cover or block any openings on the oven.

 Do not store or use this appliance outdoors. Do not


IMPORTANT SAFETY INSTRUCTIONS

use this oven near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

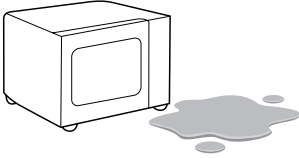

 Do not immerse cord or plug in water or any other liquid.



 Do not let cord hang over edge of table or counter.

SAVE THESE INSTRUCTIONS

HOUSEHOLD INDOOR USE ONLY

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

GROUNDING INSTRUCTIONS



WARNING

Electric Shock Hazard:


Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord sets or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding -type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1).Clean door and sealing surface of the oven.
 - (2).Reorient the receiving antenna of radio or television.
 - (3).Relocate the microwave oven with respect to the receiver.
 - (4).Move the microwave oven away from the receiver.
 - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

This device complies with part 18 of the FCC Rules.

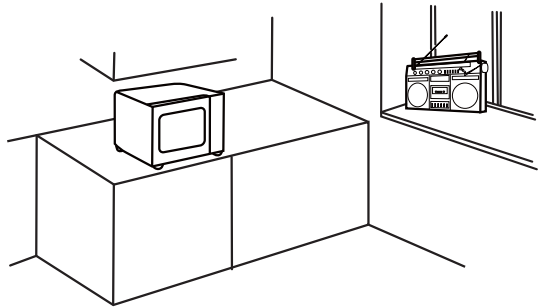

FCC RF Exposure Requirements

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter and must be installed to provide a separation distance of at least 20cm from all persons.

UTENSILS



Personal Injury Hazard:


Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven.**"


There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:



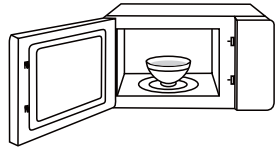



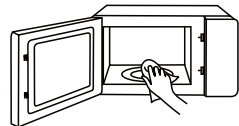





 

 

1. Fill a microwave-safe container with 1 cup of cold water (8.5 oz) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.











KEEP THE CAVITY CLEAN







 









MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. 
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. 
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. 
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. 
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. 
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking. 
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. 
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming. 

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. 
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. 
 Thermometers	Microwave-safe only (meat and candy thermometers). 
 Wax paper	Use as a cover to prevent splattering and retain moisture. 

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS
 <p>Aluminum tray</p>	May cause arcing. Transfer food into microwave-safe dish. 
 <p>Food carton with metal handle</p>	May cause arcing. Transfer food into microwave-safe dish. 
 <p>Metal or metal trimmed utensils</p>	Metal shields the food from microwave energy. Metal trim may cause arcing. 
 <p>Metal twist ties</p>	May cause arcing and could cause a fire in the oven. 
 <p>Paper bags</p>	May cause a fire in the oven. 
 <p>Plastic foam</p>	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. 
 <p>Wood</p>	Wood will dry out when used in the microwave oven and may split or crack. 

SETTING UP YOUR OVEN

NAMES OF OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:




Glass Tray

(Can be used under all functions)



Instruction Manual

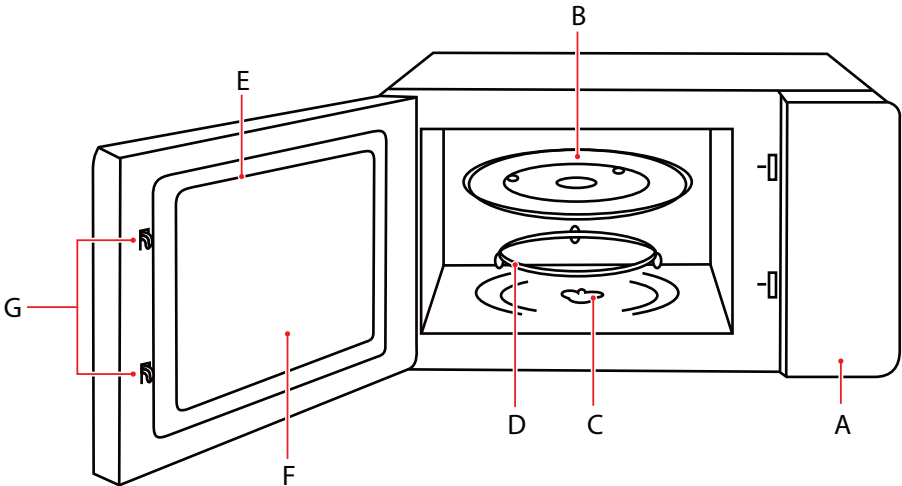

- A. Control panel
- B. Glass tray
- C. Turntable shaft
- D. Turntable ring assembly

- E. Door assembly
- F. Observation window
- G. Safety interlock system

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION

Cleaning the cooking compartment and putting the turntable in place.



For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.

Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

How to put the turntable in place:

1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ③.

Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the center of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

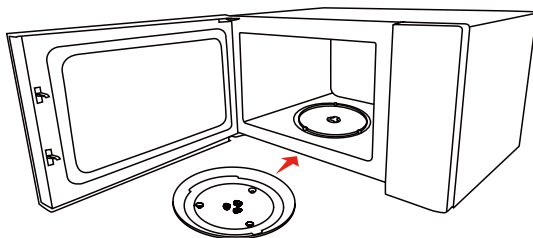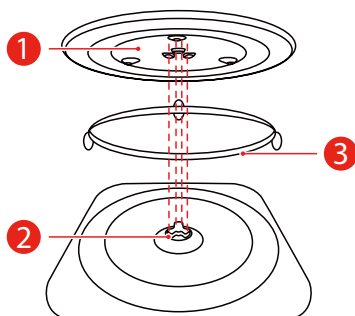

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 3.0 ft.
 - b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top and 1.0 inch in the rear.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Operation of microwave oven may cause interference to your radio or TV reception.
Please place the oven as far away from radios and TV as possible.

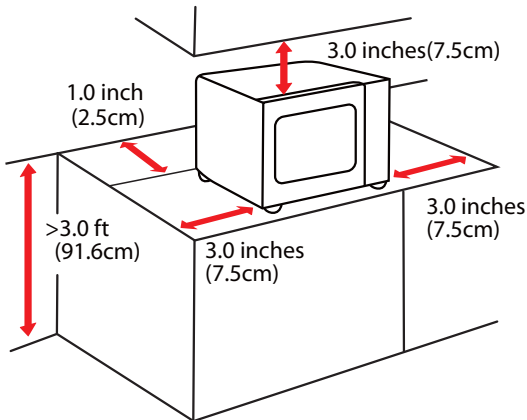


2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

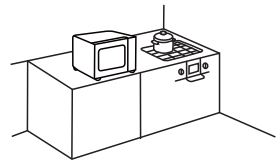

The accessible surface may be hot during operation



SETTING UP ALEXA ON YOUR MICROWAVE OVEN

Your microwave oven can be controlled with Alexa by using any Alexa-enabled device such as Echo or Echo Dot. To control your microwave oven using Alexa, you'll need to set up your microwave and connect to Alexa. To do so:

1. Download the latest version of the Alexa App and "MSmartLife" App from the app store or Google Play.
2. Plug the microwave oven into a power outlet that is grounded.
3. Add devices in "MSmartLife" App(Refer to MSmartLife App Instruction)
 - a. Click (+)on the APP card page.

Note: Before adding a new device, make sure the microwave is powered.
 - b. Enter the correct WiFi password and click on the next step;
 - c. Select Add [microwave oven] from the device list, add this model in the selection: ML-EM34P(SS);
 - d. According to the operation guidelines, the user needs to perform the corresponding operation confirmation on the device, and click [the next step] after the operation is completed;
 - e. Waiting for connection, if the connection fails, please follow the APP guidelines for the next operation;
 - f. Click[finish], the device adds successfully.
4. Set up Echo with Alexa app (Refer to Alexa App Instruction)

Link MSmartLife account to Alexa


 - a. Tap "Toshiba iMicrowave" in the Skills& Games, then search. Select and tap [ENABLE] to enable the Toshiba iMicrowave.
 - b. You will be redirected to the account link page.Type in your MSmartLife account and password ,then tap [Login] to link your MSmartLife account.
5. Control your smart devices throught Echo.

Discover devices

Echo needs to discover your smart devices before it controls them, you can Say "Alexa , discover devices" to Echo.

Echo will discover devices which have already been added in the "MSmartLife "App. you can also tap [DISCOVER] to discover the smart devices.

Control devices by voice commands.

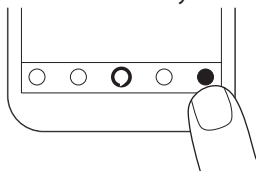

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

The appliance may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**IMPORTANT SAFETY INSTRUCTIONS**" beforehand on page 3.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.




NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

CONTROL PANEL AND FEATURES

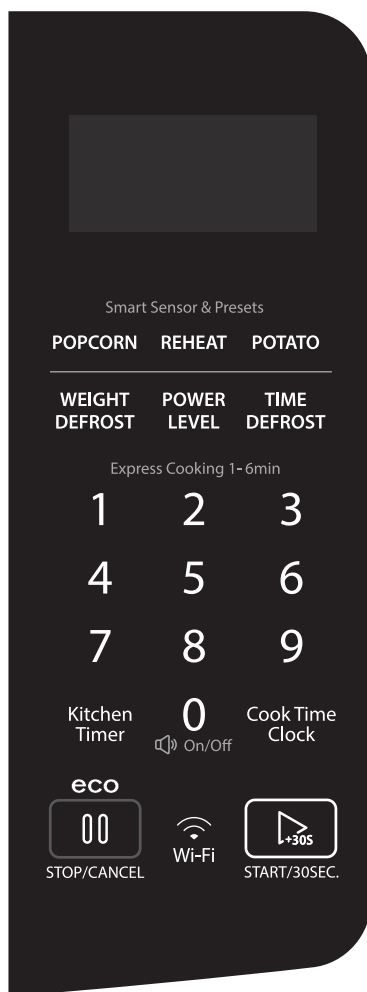

You can use your microwave oven without setting it up for Alexa control. However, we highly recommend using your microwave oven with Alexa control to unlock its full potential.

1. CLOCK SETTING

When the microwave oven is plugged into a outlet, the oven will display " 0:00 "

- a Press " Cook Time/Clock ", LED will display 00:00. The first hour figure will flash; ":" and the other "0" will be lighted.

Cook Time
Clock

- b Press the number keys and enter the correct time. For example, time is 10:12 now, please press "1,0,1,2" in turn.

Express Cooking 1-6min
1 2 3

- c Press " Cook Time/Clock" to finish clock setting. ":" will flash and the clock will be lighted.

Cook Time
Clock

- d If the numbers input are not within the range of 1:00--12:59, the setting will be invalid until valid numbers are input.



NOTE

- In the process of clock setting, if the " STOP/CANCEL " button is pressed or if there is no operation within 1 minute, the oven will go back to the former state automatically.

2. KITCHEN TIMER

- a Press " Kitchen Timer ", LED will display 00:00, clock indicator will be lighted.

Kitchen
Timer

- b Press the number keys and enter the correct timer.(The maximum time is 99 minutes and 99 seconds).If it exceeds the range, it does not respond to the input and at the same time beeps two hints.

Express Cooking 1-6min
1 2 3

- c Press " START/30SEC. " to confirm setting, LED will display the current time by counting down. Clock indicator will **light**.


START/30SEC.

- d) When the kitchen time arrives, clock indicator will go out. The buzzer will ring one time.
- e) At the end of cooking, the bee rings and returns to standby status.



• Kitchen Timer is a timer.
That is to say it processes the function of alarming clock.

3. MICROWAVE COOK

- a) Press "Cook Time/Clock" twice, LED will always bright display "00:00". Microwave indicator will be lighted.

Cook Time
Clock

- b) Press number keys to input the cooking time; the maximum cooking time is 99 minutes and 99 seconds.

Express Cooking 1-6min

1 2 3

- c) Press "POWER LEVEL" once, LED will display "PL10". The default power is 100% power. Now you can press 0-10 number keys to adjust the power level. Eleven power levels are available.

POWER
LEVEL

Express Cooking 1-6min

1 2 3

- d) Press "START/30SEC." to start cooking. Microwave indicator will flash.



START/30SEC.

- e) At the end of cooking, the bee rings and returns to standby status.

LEVEL	POWER	DISPLAY
10	100%	PL10
9	90%	PL9
8	80%	PL8
7	70%	PL7
6	60%	PL6
5	50%	PL5

LEVEL	POWER	DISPLAY
4	40%	PL4
3	30%	PL3
2	20%	PL2
1	10%	PL1
0	0%	PL0

Example: to cook the food with 50% microwave power for 15 minutes.


- Press "Cook Time/Clock" twice. "00:00" displays.



- Press "1", "5", "0", "0" in order.



- Press "POWER LEVEL" once, then press "5" to select 50% microwave power.

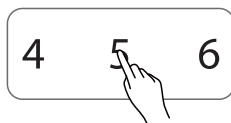

- Press "START/30SEC." to start cooking.



NOTE

- In the process of cooking, if the "STOP/CANCEL" button is pressed or if there is no operation within 1 minutes, the oven will go back to the former setting automatically.

Cook by time

- "Alexa, microwave for X."

To cook by time, say "Alexa, microwave for X", where X is the amount of time you'd like to cook for.

For example, to cook for 5 minutes, say "Alexa, microwave for 5 minutes." Or, to cook for 2 minutes and 39 seconds, say "Alexa, microwave for 2 minutes and 39 seconds."

• “Alexa, add X to the microwave.”

When your microwave is in use, you can ask it to cook for additional time by saying, “Alexa, add X to the microwave,” where X is the amount of time you’d like to add. For example, to add 2 minutes to the cooking time while the microwave is already running, say “Alexa, add 2 minutes to the microwave.”

Cook by power level

• “Alexa, microwave for X on power Y.”

By default, your microwave oven will cook at Power 10 (maximum power). To cook at a specific power, say “Alexa, microwave for X on power Y,” where X is the amount of time you’d like to cook for and Y is the power level.

For example, to cook at power 5 for 3 minutes, say “Alexa, microwave for 3 minutes on power 5.”

You can also ask your microwave oven to cook at high, medium, or low power.

For example, to cook on medium power for 5 minutes, say “Alexa, microwave for 5 minutes on medium.”

4. SPEEDY COOKING

a In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press " START/30SEC. " to increase the cooking time; The maximum cooking time is 99 minutes and 99 seconds.



or



b In waiting state, instant cooking at 100% power level with 30 seconds' cooking time can be started by pressing " START/30SEC. ". Each press on the same button will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.



c Press " Cook Time/Clock" twice and adjust cooking time, then press " START/30SEC. " to start cooking with full microwave power.



- d At the end of cooking, the bee rings and returns to standby status.



- Under microwave and time defrost states, press " START/30SEC. " button to increase cooking time by 30 seconds.
- Under sensor menu cooking and weight defrost state, time cannot be added by pressing " START/30SEC. " button.

5. WEIGHT DEFROST FUNCTION

- a Press " WEIGHT DEFROST ", LED will display "dEF1".Thawing by species indicator will be lighted.

**WEIGHT
DEFROST**

- b Press numerical buttons to input weight to be defrosted.
Input the weight ranged should be between 4~70 OZ.

Express Cooking 1-6min

1 2 3

- c If the weight input is not within 4~70OZ, the input will be invalid.

- d Press " START/30SEC. " to start defrosting and LED countdown display cooking time.



START/30SEC.

- e At the end of cooking, the bee rings and returns to standby status.

- "Alexa, defrost X (pounds, ounces, or grams)."

To defrost a specific quantity of food, say "Alexa, defrost X pounds." Alternatively, you can specify ounces or grams.

For example, to defrost 1 pound of food, say "Alexa, defrost 1 pound." Your microwave oven will run using the appropriate time and power setting.

6. TIME DEFROST FUNCTION

- a Press " TIME DEFROST ", LED will display "dEF2".



TIME
DEFROST

- b Press numerical buttons to input defrost time to be defrosted. Input the time ranged is between 0:01~99:99.



Express Cooking 1-6min
1 2 3

- c Press " START/30SEC. " to start defrosting. The default microwave power is PL3. The power cannot be adjusted.



START/30SEC.

- d At the end of cooking, the bee rings and returns to standby status.

• "Alexa, defrost for X."

To defrost food for a specific amount time, say "Alexa, defrost for X ", where X is the amount of time you'd like to cook for.

For example, to defrost for 10 minutes and 30 seconds, say "Alexa, defrost for 10 minutes and 30 seconds." Your microwave oven will start defrosting for 10 minutes and 30 seconds.

7. POPCORN

- a Press " POPCORN " repeatedly until the weight you needed appears in the display , "Oz " light. For example, press " POPCORN " twice, "3.2" displays.



POPCORN

- b Press " START/30SEC. " to cook, "Oz" disappears.



START/30SEC.

- c At the end of cooking, the bee rings and returns to standby status.

TIMES(PRESS "POPCORN")	WEIGHT	DISPLAY
Once	2.75 Oz	2.75
Twice	3.2 Oz	3.2

Popcorn

• "Alexa, microwave 1.5 ounces of popcorn."

To microwave popcorn, say "Alexa, microwave X ounces of popcorn ".Your microwave oven will determine the time to cook your popcorn appropriately.

For example, to microwave oven 2.2 ounces of popcorn, say "Alexa, microwave 2.2 ounces of popcorn ".

8. POTATO

a Press " POTATO " repeatedly until the Quantity you needed appears in the display, " 1 ", " 2 ", " 3 ", " 4 ", ("2 "means 2 potatoes), When the weight of the LED display is the same as the weight of the food to be cooked, stop pressing the button.



b Press " START/30SEC " to cook. LED countdown display cooking time.



c At the end of cooking, the bee rings and returns to standby status.

TIMES(PRESS "POTATO ")	QUANTITY	DISPLAY
Once	1	1
Twice	2	2
three times	3	3
four times	4	4

Things to try

• "Alexa, microwave the potato"

Alexa: how many do you want to cook?

User: one/two/three/four (potatoes).

Alexa: ok, starting now. / starting potato.

Alexa, microwave 1/2/3/4 potato.

9. REHEAT

a Press "REHEAT", LED will display "SC-1", "🔥" are light.

REHEAT

b Press "START/30SEC." to cook, LED flashing display "SC01", humidity sensing menu logo "🔥" flashing display, waiting for sensing, countdown display remaining cooking time.



START/30SEC.

c At the end of cooking, the bee rings and returns to standby status.

TIMES(PRESS "REHEAT")	WEIGHT	DISPLAY
Once	8.0~16.0 Oz	SC-1

 
10. MULTI-SECTION COOKING

At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section. When the first stage finish, the buzzer will sound **once** and the next stage will begin cooking.

Example: if you want to cook with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes. The cooking steps are as following.

• Press "Cook Time/Clock" twice, then press "5", "0", "0" to set 5 minutes.


Cook Time
Clock



• Press "POWER LEVEL" once.

POWER
LEVEL

 • Press number button "8" to set 80% microwave power.



• Press "Cook Time/Clock" **twice**, then press "1", "0", "0", "0" to set 10 minutes.

Cook Time
Clock



- Press "POWER LEVEL " once.



- Then press number button "6" to set 60% microwave power.



- Press " START/30SEC. " start cooking.



- Auto menu and reheat menu cannot be set as one of the multi-section.
- When microwave cooking is the second part of multiple cooking, you must press the cooking clock.

11. INQUIRING FUNCTION

- a In cooking state, press " Cook Time/Clock ", the clock will displays for three seconds. After that,the oven will turn back to the clock state.

 


- b In the microwave cooking state, press " POWER LEVEL " to inquire microwave power level the current microwave power will be displayed.(No microwave fire can be queried during thawing cooking or the cooking of the automatic menu, humidity induction menu). After three seconds, the oven will turn back to the previous state.




12. LOCK FUNCTION FOR CHILDREN

- a Lock: In waiting state, press " STOP/CANCEL " 3 seconds, buzzer will ring once, the oven will enter tee children-lock state, LED will display " : : : ", and " " light.



 - b Children-lock state, press " STOP/CANCEL " 3 seconds, buzzer will ring once and the oven will quits the children-lock state.



13. ECO FUNCTION

- a** Dump screen: In standby state, press Stop/Cancel key, buzzer, screen extinguished, enter ECO mode.



- b** Awakening: In ECO mode, opening the furnace door or pressing any key can awaken the display and enter the standby state; In ECO mode, the first button pressing is to wake up the display.

14. MUTE FUNCTION

Press the number key "0" for 3 seconds, there will be a "beep", the oven will open or close the quietly function.



NOTE

- In the sound shutdown state, all keys have no sound response. Including the end of the cooking note.

ALEXA: THINGS TO TRY

Bacon	Alexa, microwave 1/2/3/4/5/6 bacon.
Coffee	Alexa, reheat 1/2/3 cup of coffee.
Butter	Alexa, microwave 8/16/24 ounce of butter.
Chocolate	Alexa, microwave 4/8 ounce of chocolate.
Marshmallow	Alexa, microwave 5/10 ounce of marshmallow.
Fish	Alexa, defrost 4~32 ounce of fish.
Meat	Alexa, defrost 4~70 ounce of meat.
Chicken	Alexa, defrost 4~70 ounce of chicken.
Bread	Alexa, defrost 4~24 ounce of fish.
Vegetable	Alexa, defrost 4~32 ounce of vegetables.
Sensor-Reheat (SC- 1)	Alexa, reheat dinner plate.
Baked Beans (SC- 2)	Alexa, reheat baked beans.
Scrambled Eggs (SC- 3)	Alexa, reheat scrambled eggs.
Oatmeal (SC- 4)	Alexa, reheat oatmeal.
Pizza Reheat (SC- 5)	Alexa, reheat pizza.
Fish(SC- 6)	Alexa, reheat fish.

meat (SC- 7)	Alexa, reheat meat.
Fresh Vegetable (SC- 8)	Alexa, reheat the fresh vegetable.
Frozen Vegetable (SC- 9)	Alexa, reheat frozen vegetable.
Frozen Entree (SC-A)	Alexa, reheat frozen entree.
Pasta(no cover) (SC- b)	Alexa, reheat pasta.

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information below. Wash new sponge cloths thoroughly before use.

 
Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels

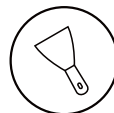

Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

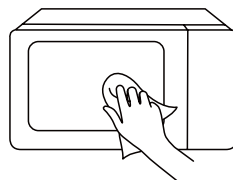

APPLIANCE FRONT PLATE

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

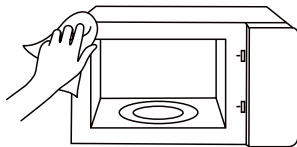

APPLIANCE CAVITY

Hot soapy water or vinegar solution:


Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

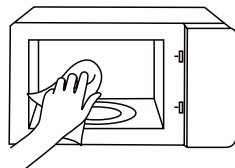

RECESS IN THE COOKING COMPARTMENT

Damp cloth:


Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

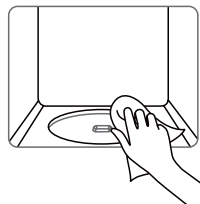

TURNTABLE AND ROLLER RING

Hot soapy water:

When placing the turntable back into its recess, it must engage properly.

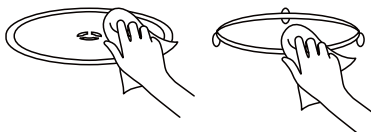

DOOR PANEL

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

MAINTENANCE

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	<ul style="list-style-type: none">a. Electrical cord for oven is not plugged in.b. Door is open.c. Wrong operation is set.	<ul style="list-style-type: none">a. Plug into the outlet.b. Close the door and try again.c. Check instructions
Arcing or sparking	<ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. The oven is operated when empty.c. Spilled food remains in the cavity.	<ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Do not operate with oven empty.c. Clean cavity with wet towel.
Unevenly cooked foods	<ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Food is not defrosted completely.c. Cooking time, power level is not suitable.d. Food is not turned or stirred.	<ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Completely defrost food.c. Use correct cooking time, power level.d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	<ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Food is not defrosted completely.c. Oven ventilation ports are restricted.d. Cooking time, power level is not suitable.	<ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Completely defrost food.c. Check to see that oven ventilation ports are not restricted.d. Use correct cooking time, power level
Improper defrosting	<ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Cooking time, power level is not suitable.c. Food is not turned or stirred.	<ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Use correct cooking time, power level.c. Turn or stir food.

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United State.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customercare@us.toshiba-lifestyle.com

855-204-5313

Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : _____

Serial Number : _____

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer' s warranty rights.

SAVE THIS FOR YOUR RECORDS

Made in China

PN:16170000A88345

#DetailsMatter

Customercare@us.toshiba-lifestyle.com
855-204-5313

TOSHIBA Toaster Oven Instruction

AC25CEW-SS



TOSHIBA

Welcome to the world of **TOSHIBA**

BEFORE OPERATING THIS PRODUCT,
READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE

CONTENTS

IMPORTANT SAFEGUARDS

BASIC SAFETY PRECAUTIONS
BEFORE FIRST USE

PRODUCT INSTRUCTION

NAMES OF PARTS
CONTROL PANEL

OPERATION

HOW TO USE
FUNCTION INSTRUCTION
CARE AND CLEANING

IMPORTANT SAFEGUARDS



BASIC SAFETY PRECAUTIONS

When using electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to " off " , then remove plug from wall outlet.

IMPORTANT SAFEGUARDS



BASIC SAFETY PRECAUTIONS

13. Do not use appliance for other than intended use.
14. Use extreme caution when removing tray or disposing of hot grease.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
16. Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
17. A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any them on top of the appliance when in operation.
18. Extreme caution should be exercised when using containers constructed of other than metal or glass.
19. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
20. Do not place any of the following materials in the oven: (that is, paper, cardboard, plastic and like).
21. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
22. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. ~~Attempt~~ to modify the plug in any way. (for appliance provided two-wire polarized plug)
23. Caution-To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.(If the appliance is of the grounded type)
24. Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.

IMPORTANT SAFEGUARDS



BASIC SAFETY PRECAUTIONS

25. Avoid contacting moving parts.
26. For household use only.

CAUTION: Do not insert your fingers into any gaps or holes; it may cause injuries.

SAVE THESE INSTRUCTIONS

HOUSEHOLD INDOOR USE ONLY

BEFORE FIRST USE

1. Remove all accessories and shipping materials packed inside the Oven.
2. Wash the Rack and Pan in warm soapy water. Wipe the inside of the Oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
3. Place Oven on a flat counter or other stable surface **DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.**
4. Make sure the Crumb Tray is properly installed before using.



For the first time only, Set the Temperature Knob to MAX, the function setting on toast and the timer to 15 minutes. This will burn off any oils still on the Oven.

NOTE The oven may smoke during this process. This is normal for a new


PRODUCT INSTRUCTION

NAMES OF PARTS


When using electrical appliance, basic safety precautions should always be followed, including the following:

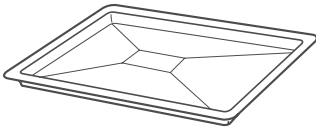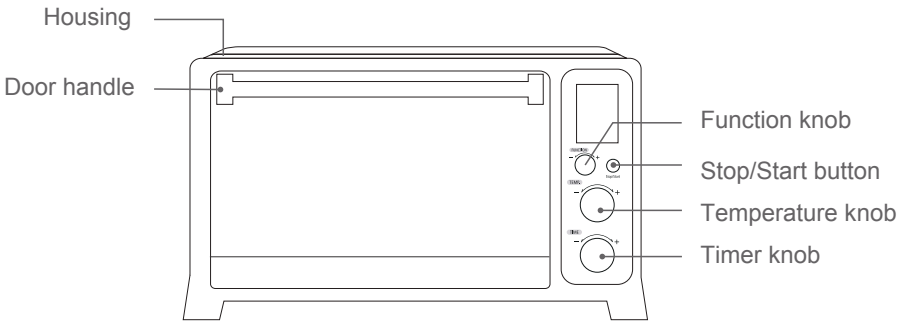


Baking Pan

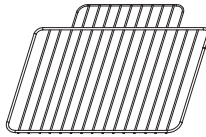


Baking Rack

 

Crumb Tray

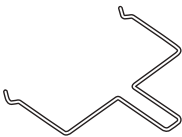

Rotisserie Kit

 

Rack clamp



Rotisserie Kit

OPERATION


HOW TO USE

CAUTION:
the oven surfaces are hot during and after use general instructions


1. Place the Baking Rack in position that will accommodate the height of the food to be cooked.
2. The food must be put into the baking pan to avoid the fire danger that caused by the accumulation of food chipping on the heating pipes.
Make sure that you always use an ovenproof container in the oven, never use plastic or cardboard containers in the Oven.
3. Clean the heating pipe periodically
4. Never use glass or ceramic pans or lids.
5. DO NOT let juices run to the bottom of the oven. Use the Crumb Tray when cooking.
6. Set the temperature as suggested by the recipe or as desired.
7. Securely shut the door and set the cooking time to begin operating the oven.

When the oven is electrified, the buzzer will ring once. The default function is TOAST. In the process of cooking , pressing " Stop/Start " can stop cooking.

CONTROL PANEL

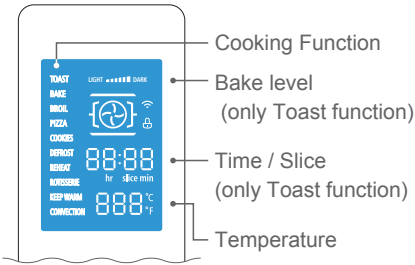

COOKING STEP

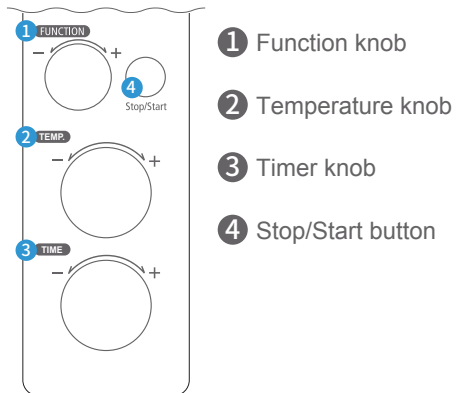

FUNCTION INSTRUCTION

OVEN FUNCTION

COOKING FUNCTION	PRESET TEMP	TEMP RANGE	PRESET TIME	TIME RANGE
Toast		Fixed Temp		Fixed Time
Bake	450°F	150°F~450°F	30min	0.01~2Hour
Broil	350°F			
Pizza 6 inch	450°F		7min	1min~30min
Pizza 9 inch			8.5min	
Pizza 12 inch			9min	
Cookie	350°F		30min	0.01~2Hour
Defrost	180°F	100°F~180°F	1hour30min	
Reheat	350°F	150°F~450°F	30min	
Rotisserie			1hour	
Keep warm	180°F	100°F~180°F	1hour30min	
Convection	450°F	150°F~450°F	30min	



TOAST


Fixed temperature & time
 Preset power level : 4
 Power level range : 1-6 level
 Preset toast quantity : 4
 Toast quantity range : 1-6 slice



BAKE

Preset temperature : 450°F
 Temp range : 150°F- 450°F
 Preset time : 30min
 Time range : 0.01~2 Hour


FUNCTION INSTRUCTION

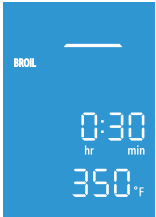

BROIL

Preset temperature : 350°F
Temp range : 150°F- 450°F
Preset time : 30min
Time range : 0.01~2 Hour

NOTE Do not preheat when using this function

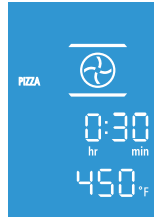

PIZZA

Preset temperature : 450°F
Temp range : 150°F- 450°F
Preset time : 30min
Time range : 0.01~2 Hour


NOTE Do not preheat when using this function



COOKIES

Preset temperature : 350°F
Temp range : 150°F- 450°F
Preset time : 30min
Time range : 0.01~2 Hour

NOTE Do not preheat when using this function

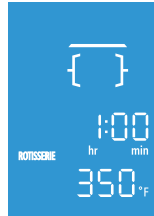


ROTISSERIE

Preset temperature : 350°F
Temp range : 150°F- 450°F
Preset time : 1hour
Time range : 0.01~2 Hour




DEFROST

Preset temperature : 180°F
Temp range : 100°F- 180°F
Preset time : 1hour 30min
Time range : 0.01~2 Hour

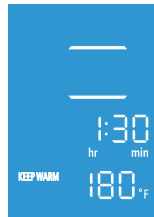

KEEP WARM

Preset temperature : 180°F
Temp range : 100°F- 180°F
Preset time : 1hour 30min
Time range : 0.01~2 Hour

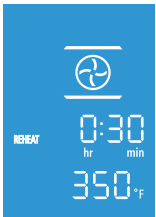

REHEAT

Preset temperature : 350°F
Temp range : 150°F- 450°F
Preset time : 30min
Time range : 0.01~2 Hour



CONVECTION

Preset temperature : 450°F
Temp range : 150°F- 450°F
Preset time : 30min
Time range : 0.01~2 Hour

FUNCTION INSTRUCTION

ROTISSERIE FUNCTION

1. Remove the Baking Rack from the oven and set aside.
2. Place the Baking Pan in the lowest level of the oven.
This will catch all the drippings from the food that is on the Rotisserie Forks as it cooks. Do Not attempt to use the Rotisserie Function without placing the Baking Pan in the correct position of the oven.
3. Set the Function knob to " ROTIS " .
4. Select the length of time you want to Rotisserie the food.
5. Rotate the Temperature knob clockwise to desired temperature.

ROTISSERIE FUNCTION USING THE ROTISSERIE FORKS

1. Secure the food with weight centered on the forks.
2. Slide the Holding Forks onto each of the forks and press firmly into the food, piercing the food to hold in place on the forks. Insert the Holding Forks at different angles to hold the food more firmly. Tighten the screws, turning clockwise so that the holding forks will stay in place during the Rotisserie cooking session.
3. Insert the pointed end of the Rotisserie forks into the Rotisserie Socket on the inside right side of the oven.

FUNCTION INSTRUCTION

4. Lift the Rotisserie Forks on the left side just a bit to allow the notch to fit into the Rotisserie Bracket on the left side of the oven.
5. Set the Temperature knob and the Time knob to begin operating the oven.
6. Once the cooking time has been complete and you have checked the internal temperature of the food to ensure that it has cooked properly, you can remove the Rotisserie Forks with the Rotisserie Helper Handle.
7. Hold the handle in your right hand and support handle in your left hand.
8. Place the hooks on the Helper Hander underneath the Rotisserie Forks.
9. Lift the left side of the Rotisserie Forks out of the Bracket first and pull slightly toward.
10. Gently remove the right pointed side of the Rotisserie Forks from the Rotisserie Socket and remove the food on the forks out of the oven.
11. Place the food on a heat safe plate or dish when you have removed from the oven. Let it cool slightly before attempting to remove the holding forks and Rotisserie Forks from the food
12. To remove the Holding Forks, turn the screws counterclockwise and pull the Holding.



Warning: Hot Surface!
Avertissement: Surface Chaude!

CARE AND CLEANING

1. Before cleaning unplug the toaster oven and allow it to cool completely.
2. Wash all the attachments with mild, soaped water including the rack and the baking tray.
3. Do not use abrasive cleansers, scrubbing brushes and chemical cleaner as this will cause damage to the non-stick coating of baking tray.
4. Using a wet cloth to wipe the inner of the oven.
5. To clean the door by using a wet cloth saturated with detergent or soap.
6. Never immerse the unit in water or other liquid.
7. Any other servicing should be performed by an authorized service representative.

SPECIFICATION

MODEL	AC25CEW-SS	POWER	1500W
CUBAGE	25L	L*W*H	18.9x15.6x10.8 inch
VOLTAGE	120V, 1Ph	Rated Energy Consumption	1.5KW/H
AC FREQUENCY	60Hz		

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United States.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

(855) 204-5313
Midea America Corp
5 Sylvan Way,
Parsippany, NJ 07054
customerservice@us.toshiba-lifestyle.com

Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number: _____

Serial Number: _____

SAVE THIS FOR YOUR RECORDS

Made in China

TOSHIBA

Horno tostador

Instrucciones

AC25CEW-SS



TOSHIBA

Bienvenido al mundo de **TOSHIBA**

ANTES DE UTILIZAR ESTE PRODUCTO, LEA, ENTENDA Y SIGA ESTAS INSTRUCCIONES.

ASEGÚRESE DE GUARDAR ESTA LISTA DE LIBROS PARA SU CONSULTA EN EL FUTURO

CONTENIDO

SALVAGUARDIAS IMPORTANTES

MEDIDAS DE SEGURIDAD BÁSICAS
ANTES DEL PRIMER USO

INSTRUCCIONES DEL PRODUCTO

NOMBRES DE PIEZAS
PANEL DE CONTROL

FUNCIONAMIENTO

CÓMO UTILIZAR
INSTRUCCIÓN DE LA FUNCIÓN
CUIDADO Y LIMPIEZA

SALVAGUARDIAS IMPORTANTES



MEDIDAS DE SEGURIDAD BÁSICAS

Cuando utilice aparatos eléctricos, siempre debe seguir las precauciones básicas de seguridad, incluyendo las siguientes:

1. Leer instrucciones antes de usar.
2. Para protegerse de cualquier peligro eléctrico, NO coloque la unidad o el cable en agua o en ningún otro líquido.
3. No toque las superficies calientes. Use los mangos o asas.
4. Desenchufe la unidad de la toma de corriente cuando no esté en uso y antes de limpiarla. Deje enfriar siempre antes de fijar o retirar cualquier pieza.
5. El uso de accesorios no recomendados por el fabricante del aparato puede causar lesiones.
6. A continuación, enchufe el cable a la toma de corriente. Para desconectar, gire cualquier control a "off", luego retire el enchufe de la toma de corriente.
7. No deje que el cable cuelgue del borde de la mesa o mostrador, ni toque la superficie caliente.
8. No coloque el horno tostador dentro de un horno caliente o cerca de un quemador de gas caliente o eléctrico.
9. No utilice al aire libre
10. No opere ningún aparato con un cable o enchufe dañado o después de que el aparato funcione mal o se haya dañado de alguna manera. Devuelva el electrodoméstico al centro de servicio autorizado más cercano para su examen, reparación o ajuste. Guarde únicamente los accesorios suministrados con esta unidad dentro del horno cuando no esté en uso.

SALVAGUARDIAS IMPORTANTES



MEDIDAS DE SEGURIDAD BÁSICAS

11. Se puede producir un incendio si el aparato está cubierto o toca material inflamable, incluyendo cortinas, telones, paredes y similares, cuando está en funcionamiento. No coloque ningún objeto encima del aparato cuando esté en funcionamiento.
12. No coloque ningún cartón, papel o plástico dentro del horno.
13. Ningún recipiente colocado dentro del horno debe ser hermético. Además, necesitan tener espacio suficiente para permitir la expansión de los fluidos.
14. No limpie con almohadillas para fregar metales. Las piezas pueden romper la almohadilla y tocar las partes eléctricas que implican un riesgo de descarga eléctrica.
15. Los alimentos de gran tamaño o los utensilios de metal no se deben insertar en un horno tostado, ya que pueden crear un incendio o riesgo de descarga eléctrica.
16. No cubra la bandeja para migas ni ninguna parte del horno con papel metálico.
17. Se debe tener extrema precaución al mover un aparato que contenga aceite caliente u otros líquidos calientes. Tenga mucho cuidado al retirar la bandeja o eliminar la grasa caliente.
18. No almacene ningún objeto o material dentro del horno sin uso, aparte de los accesorios recomendados por el fabricante.
19. No cubra la bandeja de migas ni ninguna otra parte del horno con láminas de metal. Esto causará un sobrecalentamiento del horno.
20. Se necesita supervisión cuando cualquier aparato eléctrico es utilizado por niños o cerca de ellos.
21. Se debe tener extrema precaución al mover un aparato que contenga aceite caliente u otros líquidos calientes. Tenga mucho cuidado al retirar la bandeja o eliminar la grasa caliente.

SALVAGUARDIAS IMPORTANTES



MEDIDAS DE SEGURIDAD BÁSICAS

22. Este aparato tiene un enchufe polarizado (una pata es más ancha que la otra). Para reducir riesgo de descarga eléctrica, el enchufe está diseñado para encajar en un tomacorriente polarizado de una sola manera. Si el enchufe no encaja por completo en el tomacorriente, inviértalo. Si aún así no encaja, póngase en contacto con un electricista. No trate de modificar el enchufe de manera alguna.

(Para aparatos equipados con un enchufe polarizado de dos cables.)

23. Atención - Para asegurar una protección continua contra descargas eléctricas, sólo conectar a tomacorrientes con conexión a tierra adecuada. (Si el aparato es del tipo a tierra.)

24. Desconectar de la toma de corriente cuando no se use, antes de poner o sacar partes, y antes de limpiar. Dejar enfriar antes de tocar.

25. Evite el contacto con las partes móviles.

26. Solo para uso doméstico.

27. No utilice el aparato para otro uso que no sea el previsto.

28. No limpie con almohadillas para fregar metales. Las piezas pueden romper la almohadilla y tocar las partes eléctricas, creando un riesgo de descarga eléctrica.

29. Se debe tener extrema precaución cuando se utilicen recipientes con otros materiales que no sean de metal o vidrio.

PRECAUCIÓN: No introduzca el dedo en las aberturas o agujeros, podría causar el riesgo de lesiones.

GUARDE ESTAS INSTRUCCIONES

SOLO PARA USO DOMÉSTICO

ANTES DEL PRIMER USO

1. Retire todos los accesorios y materiales de envío embalados dentro del horno.
2. Lave la rejilla y la bandeja en agua jabonosa tibia. Limpie el interior del horno con un paño húmedo o una esponja. Seque con toallas de papel para asegurarse de que la unidad esté seca antes de usarla.
3. Coloque el Horno en un mostrador plano u otra superficie estable. **NO HAGA FUNCIONAR EN EL MISMO CIRCUITO CON OTRO APARATO.**
4. Asegúrese de que la bandeja de migas esté instalada correctamente antes de usarla.

 

Sólo por primera vez, ajuste el mando de temperatura en MAX, la configuración de la función en tostar y el temporizador a 15 minutos. Esto quemará cualquier aceite que quede en el horno.

NOTA El horno puede echar humo durante este proceso. Esto es normal en un horno nuevo.


INSTRUCCIONES DEL PRODUCTO

NOMBRES DE PIEZAS


Cuando utilice aparatos eléctricos, siempre debe seguir las precauciones básicas de seguridad, incluyendo las siguientes:

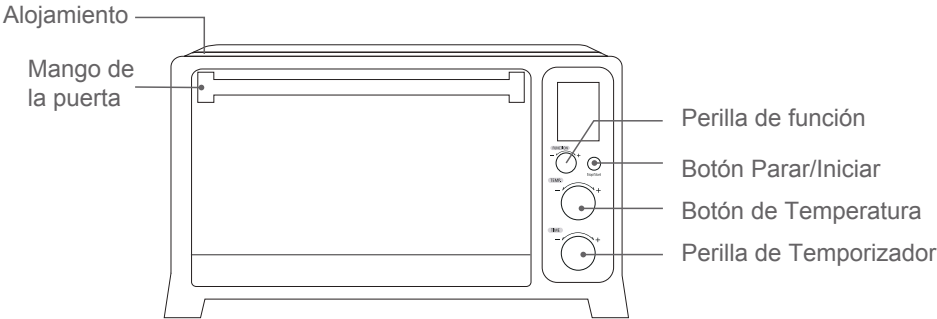


Bandeja para hornear

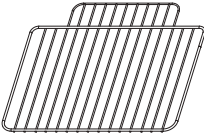


Rejilla para hornear

 

Bandeja de para migas

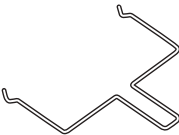

Kit para asar

 

Kit para asar



Kit para asar

FUNCIONAMIENTO

CÓMO UTILIZAR


PRECAUCIÓN:

las superficies del horno están calientes durante y después del uso.


1. Coloque la rejilla para hornear en la posición que se adapte a la altura de los alimentos a cocinar.
2. Coloque los alimentos en el estante. Asegúrese de que siempre usa un recipiente para horno en el horno, nunca use recipientes de plástico o cartón en el horno.
3. Nunca utilice recipientes o tapas de vidrio o de cerámica.
4. NO deje que los jugos corran hasta el fondo del horno. Utilice la bandeja de goteo y la bandeja de migas al cocinar.
5. Ajuste la temperatura según lo sugerido por la receta o como se desee.
6. Cierre firmemente la puerta y ajuste el tiempo de cocción para comenzar a utilizar el horno.

Cuando el horno está conectado, el timbre suena una vez. La función predeterminada es TOSTAR. En el proceso de cocción, presionar "Parar/Iniciar" puede detener la cocción.

PANEL DE CONTROL

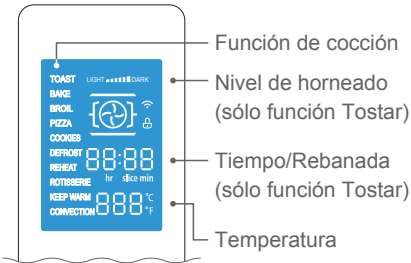


PASO PARA COCINAR

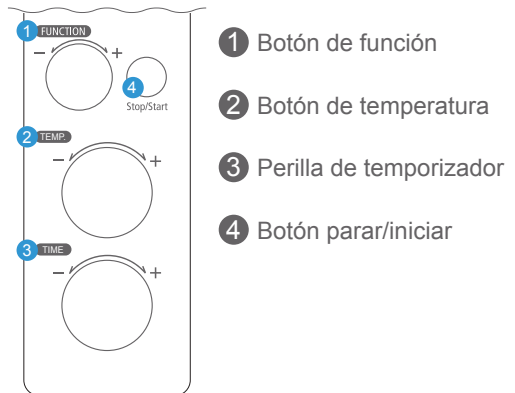

INSTRUCCIÓN DE LA FUNCIÓN

FUNCIÓN DEL HORNO

FUNCIÓN DE COCCIÓN	TEMP PREESTAB.	RANGO TEMP	TIEMPO PREESTAB.	INTERVALO DE TIEMPO
Tostar		Temp. fija		Temp. fija
Hornear	450°F	150°F~450°F	30min	0,01~2Horas
Asar	350°F		7min	1min~30min
Pizza 6 pulgadas	450°F		8.5min	
Pizza 9 pulgadas			9min	
Pizza 12 pulgadas			30min	
Galletas	350°F	100°F~180°F	1hora 30min	0,01~2Horas
Descongelar	180°F	150°F~450°F	30min	
Recalentar	350°F	100°F~180°F	1hora 30min	
Asado		150°F~450°F	30min	
Mantener caliente	180°F	150°F~450°F	30min	

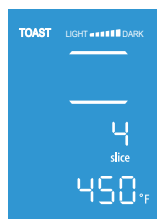

TOSTAR


Temperatura y tiempo fijos
 Nivel de potencia preestablecido: 4
 Rango de nivel de potencia: Nivel 1-6
 Cantidad de tostadas preestablecida: 4
 Cantidad de tostadas: 1-6 rebanadas



HORNEAR

Temp. preestablecida: 450°F
 Rango temp.: 150°F - 450°F
 Tiempo preestablecido: 30min
 Intervalo de tiempo : 0.01~2h

FUNCTION INSTRUCTION

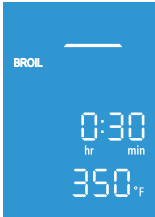

ASAR

Temp. preestablecida: 350°F
Rango temp.: 150°F - 450°F
Tiempo preestablecido: 30min
Intervalo de tiempo : 0.01~2h

NOTA No precaliente cuando use esta función



PIZZA

Temp. preestablecida: 450°F
Rango temp.: 150°F - 450°F
Tiempo preestablecido: 30min
Intervalo de tiempo : 0.01~2h


NOTA No precaliente cuando use esta función



GALLETAS

Temp. preestablecida: 350°F
Rango temp.: 150°F - 450°F
Tiempo preestablecido: 30min
Intervalo de tiempo : 0.01~2h

NOTA No precaliente cuando use esta función

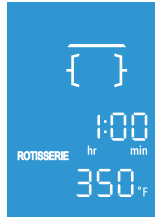


ASADO

Temp. preestablecida: 350°F
Rango temp.: 150°F - 450°F
Tiempo preestablecido: 1h
Intervalo de tiempo : 0.01~2h




DESCONGELAR

Temp. preestablecida: 180°F
Rango temp.: 100°F - 180°F
Tiempo preestablecido: 1h30min
Intervalo de tiempo : 0.01~2H

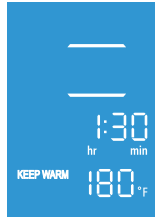

MANTENER CALIENTE

Temp. preestablecida: 180°F
Rango temp.: 100°F - 180°F
Tiempo preestablecido: 1h30min
Intervalo de tiempo : 0.01~2H

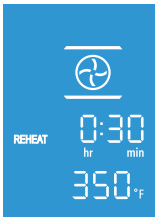

RECALENTARA

Temp. preestablecida: 350°F
Rango temp.: 150°F - 450°F
Tiempo preestablecido: 30min
Intervalo de tiempo : 0.01~2h



CONVECCIÓN

Temp. preestablecida: 450°F
Rango temp.: 150°F - 450°F
Tiempo preestablecido: 30min
Intervalo de tiempo : 0.01~2h

INSTRUCCIÓN DE LA FUNCIÓN

FUNCIÓN DE ASADO

1. Retire la rejilla del horno y déjela a un lado.
2. Coloque la bandeja de hornear en el nivel más bajo del horno. Esto atraparé todos los goteos de la comida que está en las horquillas para asar cuando cocine. No intente utilizar la función del asador sin colocar la bandeja de hornear en la posición correcta del horno.
3. Ajuste el mando de Función a "ROTIS".
4. Seleccione la duración de tiempo que desea asar el alimento.
5. Gire la perilla de temperatura hacia la derecha hasta la temperatura deseada.

FUNCIÓN DE ASADO UTILIZANDO LAS HORQUILLAS DE ASADO

1. Asegure el alimento con el peso centrado en las horquillas.
2. Deslice las horquillas de sujeción en cada uno de los tenedores y presione firmemente en los alimentos, perforando los alimentos para colocarlos en las horquillas. Inserte las horquillas de sujeción en ángulos diferentes para sostener los alimentos más firmemente. Apriete los tornillos, girando en el sentido de las agujas del reloj para que las horquillas de sujeción se mantengan en su lugar durante la sesión de asado.
3. Inserte el extremo puntiagudo de las horquillas para asar en el casquillo del asador en el lado derecho interior del horno.

INSTRUCCIÓN DE LA FUNCIÓN

4. Levante las horquillas para asar en el lado izquierdo un poco para permitir que la muesca encaje en el soporte de las horquillas en el lado izquierdo del horno.
5. Ajuste la perilla de temperatura y la perilla de tiempo para comenzar a utilizar el horno.
6. Una vez que haya terminado el tiempo de cocción y haya comprobado la temperatura interna de los alimentos para asegurarse de que se ha cocinado adecuadamente, puede quitar las horquillas del asador con el mango auxiliar del asador.
7. Sostenga el mango en la mano derecha y apoye la manija en la mano izquierda.
8. Coloque los ganchos en el soporte debajo de las horquillas para asar.
9. Levante el lado izquierdo de las horquillas fuera del soporte y tire ligeramente.
10. Retire suavemente el lado apuntado a la derecha de las horquillas para asar de la toma del asador y retire los alimentos de las horquillas del horno.
11. Coloque los alimentos en una placa o plato de calor seguro cuando se haya retirado del horno. Deje enfriar un poco antes de intentar sacar las horquillas de sujeción y las horquillas para asar de la comida.
12. Para quitar las horquillas de sujeción, gire los tornillos en sentido contrario a las agujas del reloj y tire de la sujeción.



CAUTION
hot surface

Warning: Hot Surface!
Advertencia: ¡Superficie Caliente!
Avertissement: Surface Chaude!

CUIDADO Y LIMPIEZA

1. Antes de limpiar, desenchufe el horno tostador y déjelo enfriar completamente.
2. Lave todos los accesorios con agua, incluyendo la rejilla y la bandeja para hornear.
3. No utilice limpiadores abrasivos, cepillos de limpieza y limpiadores químicos, ya que esto puede dañar el revestimiento antiadherente de la bandeja para hornear.
4. Utilice un paño húmedo para limpiar el interior del horno.
5. Limpie la puerta con un paño húmedo saturado con detergente o jabón.
6. Nunca sumerja la unidad en agua u otro líquido.
7. Cualquier otro servicio debe ser realizado por un representante de servicio autorizado.

ESPECIFICACIONES

MODELO	AC25CEW-SS	POTENCIA	1500W
CAPACIDAD	25L	L*An*Al	18.9×15.6×10.8 pulg.
TENSIÓN	120V, 1Ph	Consumo de energía nominal	1.5KW/H
RECUENCIA CA	60Hz		

GARANTÍA LIMITADA POR UN AÑO

Este producto cuenta con una garantía por defectos de materiales y fabricación por el período de un año a partir de la fecha de compra. Esta garantía es válida para el comprador minorista original desde la fecha de compra inicial y no es transferible. Guarde su comprobante de venta original.

IMPORTANTE:

1. Esta garantía no cubre daños resultantes de accidentes, mal uso o abuso, falta de cuidado responsable, fijar cualquier accesorio no provisto con el producto, pérdida de partes o someter al aparato a cualquier voltaje diferente al especificado. (Lea las instrucciones con atención).
2. Esta garantía es invalido si este producto se utiliza para con excepción de los propósitos privados de casa.
3. Esta garantía es invalido si este producto se utiliza fuera de Estados Unidos.

Si requiere servicio durante el período de garantía, empaque la unidad apropiadamente. Recomendamos el uso de la caja y los materiales de embalaje originales.

Para asistencia adicional por favor contacte nuestro servicio de asistencia al cliente bajo el número:

(855) 204-5313

Midea America Corp

5 Sylvan Way,

Parsippany, NJ 07054

customerservice@us.toshiba-lifestyle.com

Midea America Corp. expresamente rechaza cualquier responsabilidad por daños resultantes o pérdidas accidentales causadas por el aparato. Algunos estados no permiten esta exclusión o limitación de pérdidas resultantes o accidentales, por lo que la limitación de responsabilidad antes mencionada puede no aplicarse a usted. Esta garantía le otorga derechos legales, y usted también puede tener otros derechos que pueden variar de estado en estado.

El número de serie se encuentra en el fondo del gabinete. Le aconsejamos que recorda ésto en el espacio abajo para la referencia en el futuro.

Número de modelo: _____

Número de serie: _____

GUARDE ESTO PARA SUS REGISTROS

Hecho en China