 



English

Instruction Manual

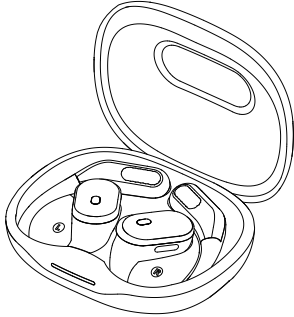

Please read the instructions before use

 Connect

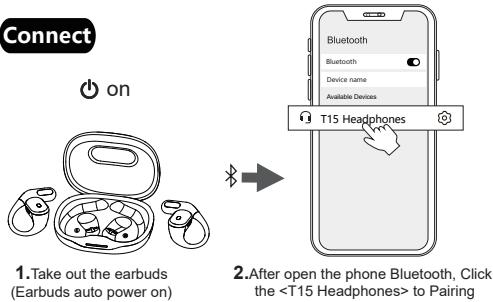


Reset

If earbuds has any connection or function problems, please reset the earbuds

1. Delete the BT pairing information on the phone.
2. Put the earbuds into the charging case to charge.
3. Take out the earbuds and wait for 20 seconds.

(If the above operation does not work, please try again)

 Operation

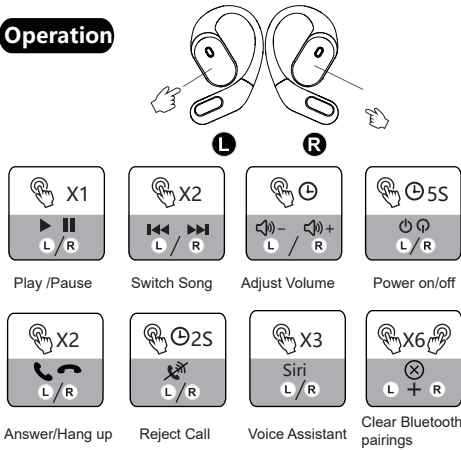

X1: Click Once ⌚ Long press
Only when it is not connected, it can be turned on or off

Problem handling

① Can be connected but there is no sound:

Long press the right ear + volume.

② One of earbuds cannot be charge:

Clean the charging contact of the earbuds and the charging case.

③ One of the earbuds cannot be connected:

Reset the earbuds.

If the earbuds cannot be charged or has no sound, you can send an email to contact us and we will reply you within 24 hours



Please clean the charging contacts of the earbuds and charging case frequently to avoid charging failures.

Safety Instructions

1. Keep the product away from extremely hot and cold environments, it will damage the battery and circuit.
2. Avoid liquid immersion into the product.
3. Do not disassemble the product.
4. Do not use concentrated chemical products or detergents to clean the product.
5. Use only 5V/1A power supply. Connecting the power supply voltage too high may cause serious damage.
6. Do not randomly discard or place the product near fire or high emperature to avoid the danger of explosion.

