 


amazonbasics

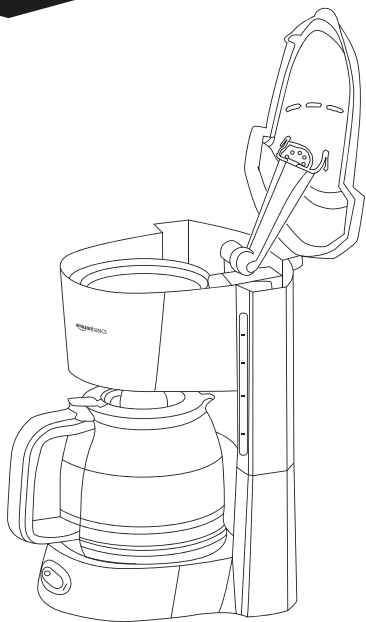

Coffee Maker, 5-Cup with Glass Carafe
Cafetera, 5 Tazas Con Jarra De Vidrio
Cafetière, 5 Tasses Avec Carafe En Verre
B071JM378P

**WARNING: RISK OF FIRE OR ELECTRIC SHOCK. DO NOT OPEN!**

The lightning symbol refers to “dangerous voltage”; the exclamation symbol refers to maintenance instructions. See below.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THIS COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

**ADVERTENCIA: RIESGO DE INCENDIO O DESCARGA ELÉCTRICA. ¡NO ABRIR!**

El símbolo de rayo se refiere a “voltaje peligroso”; el símbolo de exclamación se refiere a instrucciones de mantenimiento. Véase a continuación.

ADVERTENCIA: PARA REDUCIR EL RIESGO DE INCENDIO O DESCARGA ELÉCTRICA, NO EXTRAIGA ESTA CUBIERTA. NO CONTIENE PIEZAS REPARABLES POR EL USUARIO. LAS REPARACIONES SÓLO DEBEN REALIZARSE MEDIANTE PERSONAL DE SERVICIO AUTORIZADO.

**AVERTISSEMENT: RISQUE D'INCENDIE OU D'ÉLECTROCUTION. NE PAS OUVRIR!**

Le symbole de l'éclair indique la présence d'une “tension dangereuse”; le point d'exclamation renvoie aux instructions d'entretien. Voir ci-dessous.

 
AVERTISSEMENT: AFIN DE RÉDUIRE TOUT RISQUE D'INCENDIE OU D'ÉLECTROCUTION, NE PAS RETIRER CE COUVERCLE. AUCUNE PIÈCE INTERNE N'EST RÉPARABLE PAR L'UTILISATEUR. TOUTE RÉPARATION DOIT ÊTRE EXCLUSIVEMENT EFFECTUÉE PAR DU PERSONNEL TECHNIQUE AGRÉÉ.

English	4
Español	11
Français	18

Coffee Maker, 5-Cup with Glass Carafe

Contents

Before getting started, ensure the package contains the following components

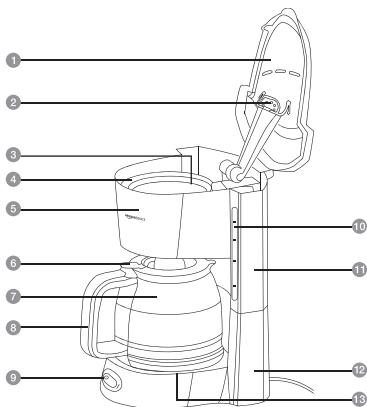

- | | | | |
|---|-------------------------|----|-----------------------------|
| 1 | Lid | 8 | Carafe handle |
| 2 | Showerhead | 9 | Power switch with indicator |
| 3 | Removable filter | 10 | Water gauge |
| 4 | Removable filter basket | 11 | Water tank |
| 5 | Housing | 12 | Base |
| 6 | Carafe lid | 13 | Keep-warm plate |
| 7 | Carafe | | |

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- Read all Instructions.
- For household use only.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse electrical parts in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always fill the water tank before connecting the appliance to a power outlet.
- To disconnect, turn any control to **O** (off), then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Before pouring coffee, always make sure the lid is securely in place.
- Scalding may occur if the lid is removed during the brewing cycle.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot carafe on cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean the carafe with cleansers, steel wool pads, or other abrasive material.

SAVE THESE INSTRUCTIONS

- A short power-supply cord (or detachable power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords may be used with care.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Intended Use

 
- This product is intended for brewing coffee and it is meant for household use only.

Before First Use

- It is recommended to run 2 or 3 brewing cycles (without coffee).

Operation

Filter placement instructions

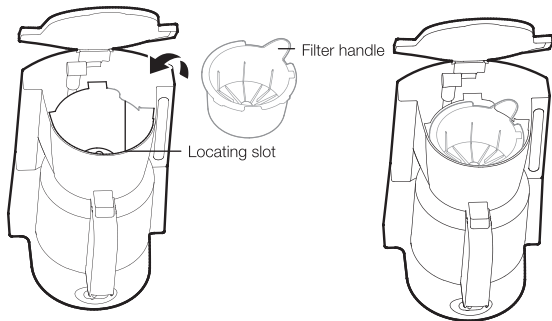

Instructions: When placing the filter, make sure the filter is laid flat and the handle is fixed in the locating slot.

Brewing coffee

- Open the lid and carefully pour clean water into the tank.
- Fill the tank between the **2** and **5/Max** marks.
- Place the removable filter (or a suitable paper filter) in the removable filter basket.
- Fill the filter with medium grind coffee powder (Max. 35 g).
- Close the lid.

- Make sure the carafe is in the center of keep-warm plate.
- Connect the plug to a power outlet.
- Set the power switch to I. The indicator on the switch will light up and the product will start brewing coffee.
- When the brewing is done, the product will automatically switch to the "keep-warm" function to maintain the coffee at an optimal temperature.
- To interrupt the keep-warm function and turn off the product, set the power switch to O.

Note: We recommend not to let the "keep-warm" function run for longer than 2 hours.

Note: The product may emit a distinct noise (similar to boiling water but louder) when the water tank is close to becoming empty.

Get to Know Your Coffee Maker

Anti-Drip function

With this function, you can safely remove the carafe while the coffee is brewing. The safety valve will prevent the coffee from spilling out.

When you place the carafe back on the base, the coffee will start dripping again.

Note: To keep the coffee from overflowing, place the carafe back within 10 seconds. If necessary, turn off the product before (or after) removing the carafe.

Keep-Warm function

When the brewing is done, the product will automatically switch to "keep-warm" function to maintain the coffee at an optimal temperature.

Dry-operation protection feature

When the temperature becomes too high, the product will shut off.

It will restart minutes later after having cooled down and it will keep doing so until it is manually turned off.

Cleaning and Maintenance

-  **WARNING** Before cleaning, always turn the product off and disconnect it from the power outlet.
- Let the product cool down before cleaning.
- Wipe the housing with a soft cloth and mild detergent and then dry.
- The carafe should be cleaned with warm water and a mild detergent or with a soft brush or sponge. DO NOT put it in the dishwasher.

Descaling

1. Fill the water tank with a mixture of 1/3 white vinegar and 2/3 water.
 2. Run 2 or 3 brewing cycles (without adding coffee powder).
 3. Dispose of the mixture and fill the water tank with clean water.
 4. Run 2 or 3 brewing cycles to clean away the descaling mixture.
 5. Alternatively, use a commercial descaling product and follow the instructions of the manufacturer.
- Time intervals for descaling depend on both the hardness of the water in your area and the frequency of use.
 - If you brew coffee once or twice a day, do as follows:

Water hardness	Frequency
Soft	once every 6 months
Medium	every 2-3 months
Hard	every 6-8 weeks

Specifications

Voltage / frequency: 120 V~, 60 Hz

Weight: 2.69 lbs

Rated power: 650 W

Capacity: 5 cups /25 oz./ 740 ml

Disposal



Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.

Feedback and Help

Love it? Hate it? Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.



amazon.com/review/review-your-purchases#



amazon.com/gp/help/customer/contact-us



amazon.com/AmazonBasics

MADE IN CHINA

HECHO EN CHINA

FABRIQUÉ EN CHINE

V08-01/20