

INSTRUCTION MANUAL



STAINLESS STEEL TOASTER



MODEL **300006ZWE**

PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATING
YOUR PRODUCT AND RETAIN IT FOR FUTURE USE

IMPORTANT SAFETY GUIDELINES ==

Always take basic safety precautions, including the following:

1. Do not put your toaster in or near water, do not use it in a bathroom, and do not use it outdoors.
2. The toaster should only be used by or under the supervision of a responsible adult.
3. Position the toaster upright on a firm, level, heat-resistant surface, near a power socket and out of reach of children.
4. Do not use the toaster near or below curtains or other combustible materials and watch it carefully, as bread, if overcooked, can catch fire.
5. The area round the toasting slot will get hot during use - do not touch!
6. Route the mains lead so that it does not overhang counters where it could be accidentally caught.
7. Ensure the toasting slot is not covered during toasting or while the toaster is hot.
8. If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread. Do not use anything sharp, or you will damage the element.

9. Do not toast buttered items or make toasted sandwiches in the toaster.
10. Do not use torn, curled, or misshapen slices, as you may jam the toaster.
11. Unplug the toaster after use, and let it cool down before cleaning and storing away.
12. Clean the crumbs out of your toaster frequently to avoid build-up, which is unhygienic and could cause a fire hazard.
13. Do not use the toaster unless the crumb tray is closed.
14. Keep the toaster and mains lead away from hotplates, hobs, and burners.
15. Do not use the toaster for anything other than toasting bread products.
16. Do not use the toaster if it is damaged or malfunctions. If the mains lead is damaged, the toaster must be returned in order to avoid a hazard.
17. This appliance can be used by children aged 8 and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning its safe use and understand the hazards involved. Children may not play with the appliance. Children may not

 
carry out cleaning or user maintenance unless they are over 8 and supervised.

18. Keep the appliance and its cord out of the reach of children under 8.
19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
20. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
21. When the appliance is not in use and before cleaning, unplug it from the socket.
22. To protect against the risk of electrical shock, do not immerse the unit, cord, or plug in water or other liquid.
23. The appliance is only intended for the purpose described in the user manual. Do not use the appliance or any part of it other than for the intended use to avoid risk.
24. The use of accessories which are not recommended or sold by the manufacturer may lead to injury.
25. This appliance is for household use only,

SPECIFICATIONS

Model No.	300006ZWE
Voltage	110-120 V
Frequency	60 Hz
Power	1550W

PARTS

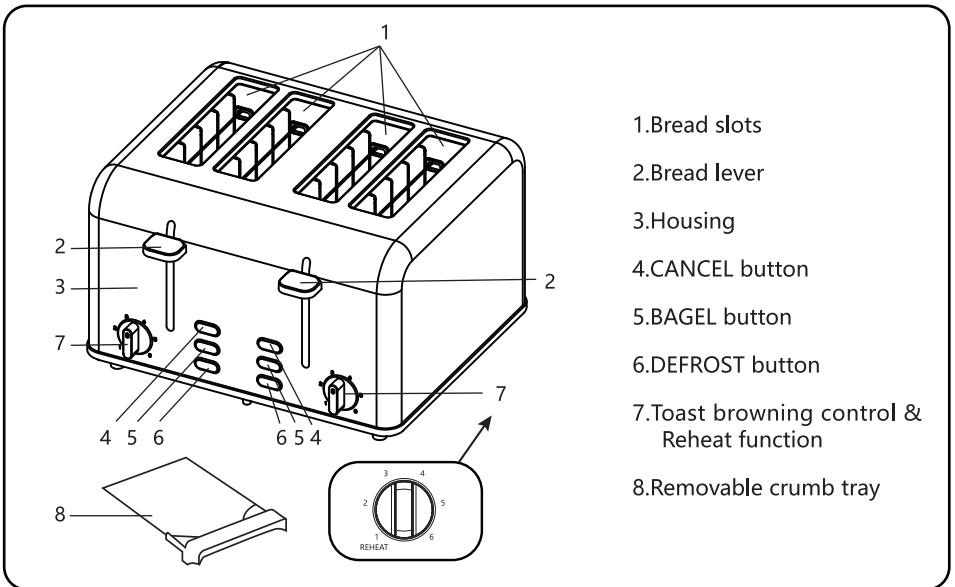

BEFORE THE FIRST USE

1. Unpack the appliance carefully and check that no parts are damaged or missing.
Caution: It is important to carefully remove all packing and shipping materials (in the slots and under the bread lever); do not remove any warning rating label on the appliance.
2. Wipe the outside of your toaster with a damp cloth.
3. Plug in the toaster without inserting any food into the bread slots and push the bread lever all the way down until it locks. (The lever will not lock if the toaster is not plugged into a power source.) The first toasting process will preheat the new elements and burn off any dust which may have accumulated during storage or manufacturing. It is normal for this burn-off to create an odor.

 
MAKING TOAST

1. Select a location for the toaster. The location should be:
 - A flat, heat-resistant, non-flammable surface.
 - At least 3 inches away from walls and the back of the countertop.
 - At least one foot away from any cabinet or shelving that may be above the toaster.
 - Away from flammable materials, such as curtains and wall fabric.
 - Away from a gas stove flame or electric element.
2. Insert the removable crumb tray into the crumb tray slot.
3. Make sure that the bread lever is in the uppermost position before plugging in the power cord.
4. Turn the browning control knob to the required setting from 1 (reheat) to 6. The higher the number, the browner the toast.
5. Plug the toaster into a power socket. Put the bread centrally into the toasting slot (maximum thickness 20 mm).
6. Press the bread level fully down; the cancel button lights up at the same time. The lever will not lock in position unless the toaster is connected to the electricity supply. The toaster starts to heat now.
7. When the toast is done, it will pop up and the toaster will turn off.
8. Function buttons:

Cancel button: The cancel button is always on during the heating process. To stop the toaster before the toasting cycle has finished, press the cancel button to pop the toast up.

Defrost button: Press the button, and the light will come on. When toasting frozen bread, the toasting time will be adjusted automatically to give the same browning level you get with unfrozen bread.

Bagel button: Press the button, and the light will come on. The appliance will toast only one surface of the slice of bread.

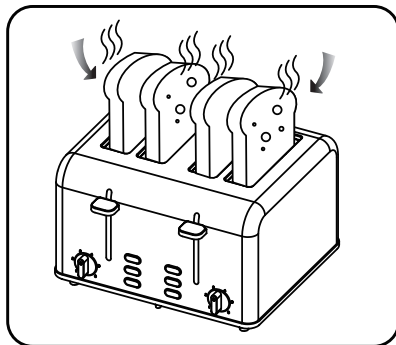

Reheat function: Turn the toast browning control to the "REHEAT" position to reheat the bread without additional toasting on this setting.

9. Hints and tips:

- If toasting four slices, they should be of similar size, thickness, and freshness.
- Old (yesterday's) bread contains less moisture so makes crisper toast.
- Old or thin bread cooks faster than fresh or thick bread, so use a lower setting.
- Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread so should be toasted on a lighter setting.

CLEANING AND MAINTENANCE

1. Allow the appliance to cool before cleaning.
2. Before cleaning, always turn off the appliance and unplug it from the power supply.
3. Do not immerse the appliance and power cord in water or other liquid or wash them in the dishwasher.
4. Wipe the toaster with a damp cloth and a little dishwashing detergent. Do not use any abrasive scouring agents, steel wool, metal object, hot cleaning agents, or disinfectants, since they can damage the appliance.
5. To remove jammed bread slices, unplug the toaster, turn it over, and shake lightly. Never attempt to remove jammed bread slices with sharp or pointed tools or silverware.
6. Remove crumbs and small pieces of bread from the crumb tray regularly. To do this, pull the crumb tray out with a damp cloth, then dry it thoroughly and push it back into the appliance.

Warning: Crumbs will accumulate in the crumb tray and could catch fire if it is not emptied periodically.

7. The appliance must be completely dry before you use it again.

 
TROUBLESHOOTING

Nothing happens when I press the bread lever or buttons:

- Make sure the power cord is correctly plugged into the electrical outlet.
- Make sure the power cord is not damaged in any way.
- Make sure the electrical outlet is operative by plugging in another appliance. If it is not, please check the circuit breakers or fuses in your home.

STORAGE

1. Never wrap the cord around the outside of the toaster.
2. Wrap the cord neatly around the 'cord storage' provided on the underside of the toaster.
3. When not in use, unplug from the mains electrical supply and store the toaster in a dry, safe place, out of reach of children.

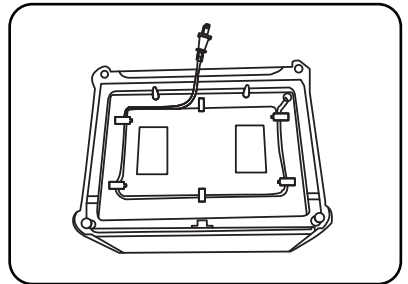

WARRANTY: 1 YEAR



AIGOSTAR INC
489 Yorbita Rd, City of Industry, CA 91744(UNIT A)

[HTTP://WWW.AIGOSTARUSA.COM](http://www.aigostarusa.com)
MADE IN P.R.C