



Finish Care and Cleaning Instructions

LifeShine® Finishes:		
Brushed Nickel	Classic Brushed Nickel	Brushed Gold
Classic Stainless	Polished Nickel	Polished Brass
Satine	Stainless	Bronzed Gold

General Cleaning Instructions:

A damp cloth and mild liquid dishwashing soap may be used for a limited amount of time, followed by rinsing with water and drying with a soft cloth. Most common household cleaners (including mild abrasives) can be used, when used in accordance with the manufacturers' instructions for use. However, all cleaners should be rinsed off thoroughly with water immediately after cleaning your faucet. Avoid using any harsh cleansers (e.g., lime scale removers) or pads/sponges that are unsafe for polished metallic surfaces. Most green, fibrous pads/-sponges contain microscopic mineral particles that can scratch a faucet's finish. Cleaner manufacturers may change their formulations at any time; therefore, Moen does not recommend any specific cleaner.

Moen suggests the periodic application of a quality furniture polish for matte or textured finishes . Alternatively non-abrasive wax, such as car wax or furniture wax may be used. Furniture polish or wax may result in a slight color change, but will not harm the finish. Polish or wax can be tested on a less visible surface first.

For faucets with clear knob style handles, cleaners should be approved for acrylics and used in accordance with the manufacturers' instructions for use. Cleaners should be rinsed off thoroughly with water immediately after cleaning.

Removing Dried Water Spots:

To remove water spots a 50/50 blend of household vinegar and water can also be used, followed by rinsing with water and drying with a soft cloth.

Failure to comply with these cleaning instructions may void Moen’s warranty.



Non-LifeShine® Finishes:

Chrome Brushed Chrome Platinum

General Cleaning Instructions:

A damp cloth and mild liquid dishwashing soap may be used, followed by rinsing with water and drying with a soft cloth. Most common household cleaners (including mild abrasives for Brushed Chrome and Platinum) can be used, when used in accordance with the manufacturers’ instructions for use. However, all cleaners should be rinsed off thoroughly with water immediately after cleaning your faucet. Avoid using any harsh cleansers (e.g., lime scale removers) or pads/sponges that are unsafe for polished metallic surfaces. Most green, fibrous pads/sponges contain microscopic mineral particles that can scratch a faucet’s finish. Cleaner manufacturers may change their formulations at any time; therefore, Moen does not recommend any specific cleaner.

Moen suggests the periodic application of a quality non-abrasive wax, such as car wax or furniture wax, especially for matte or textured finishes (e.g., Brushed Chrome or Platinum).

For faucets with clear knob style handles, cleaners should be approved for acrylics and used in accordance with the manufacturers' instructions for use. Cleaners should be rinsed off thoroughly with water immediately after cleaning.

Removing Dried Water Spots:

A 50/50 blend of household vinegar and water can also be used for a limited amount of time, followed by rinsing with water and drying with a soft cloth.

Failure to comply with these cleaning instructions may void Moen’s warranty.

Non-LifeShine® Finishes:

Glacier Ivory Matte Black Mediterranean Bronze
Oil Rubbed Bronze Oil Rubbed Bronze with Microban
Old World Bronze Wrought Iron

General Cleaning Instructions:

A damp cloth and mild liquid dishwashing soap may be used, followed by rinsing with water and drying with a soft cloth. Most common household cleaners (including mild abrasives) can be used, when used in accordance with the manufacturers’ instructions for use. However, all cleaners should be rinsed off thoroughly with water immediately after cleaning your faucet. Avoid using cleaners containing abrasives (including abrasive sponges or steel wool), organic solvents (e.g., alcohols), or other harsh cleansers (e.g., lime scale removers). Cleaner manufacturers may change their formulations at any time; therefore, Moen does not recommend any specific cleaner.

For faucets with clear knob style handles, cleaners should be approved for acrylics and used in accordance with the manufacturers' instructions for use. Cleaners should be rinsed off thoroughly with water immediately after cleaning.

Removing Dried Water Spots:

A 50/50 blend of household vinegar and water can also be used for a limited amount of time, followed by rinsing with water and drying with a soft cloth.

Failure to comply with these cleaning instructions may void Moen’s warranty.



Finish Care and Cleaning Instructions

Non-LifeShine® Finishes:

Spot Resist Brushed Nickel

Spot Resist Stainless Spot Resist Stainless with Microban

General Cleaning Instructions:

A damp cloth and mild liquid dishwashing soap may be used, followed by rinsing with water and drying with a soft cloth. Never use cleaners containing abrasives (including abrasive sponges or steel wool), ammonia, bleach or sodium hypochlorite, organic solvents (e.g., alcohols) or other harsh chemicals (e.g., lime scale removers) to clean to Spot Resist® finish, as they may damage the finish.

For faucets with clear knob style handles, cleaners should be approved for acrylics and used in accordance with the manufacturers' instructions for use. Cleaners should be rinsed off thoroughly with water immediately after cleaning.

Removing Dried Water Spots:

A 50/50 blend of household vinegar and water can also be used for a limited amount of time, followed by rinsing with water and drying with a soft cloth.

Failure to comply with these cleaning instructions may void Moen’s warranty.

