

User Manual of Product 1:

Command Outdoor Light Clips, Damage Free Hanging Outdoor Light Clips with Adhesive Strips, No Tools Wall Clips for Hanging Outdoor Lights and Cables, 16 Clear Clips and 20 Command Strips (Pack of 4)

User Manual of Product 2:

 
Amazon Basics Outdoor Patio String Lights, S14 Bulb, 48 Feet, Black

- **Not recommended on rough surfaces, such as cement board, brick or rough-sawn wood.**
- **Failure to follow instructions carefully may cause damage.**

No recomendado usar en superficies rugosas, como cemento, ladrillo o madera sin terminar. El no seguir las instrucciones pueden causar daños.


17017CLR-AWES
command.com

APPLY APLICAR

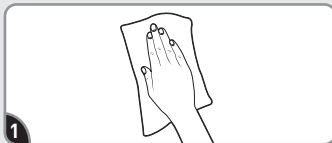

Works best on smooth surfaces. Apply to a clean and dry surface. To clean, use a dry cloth to remove dirt. Do not use household cleaners.

 Funciona mejor en superficies lisas. Aplique en una superficie limpia y seca. Para limpiar use un paño seco para quitar la suciedad. No utilice limpiadores de uso doméstico.

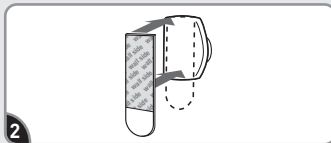


Separate strips. Remove blue liner. Press adhesive to clip.

Separe las tiras. Retire el protector azul. Presione el adhesivo en el clip.



Remove black liner. Press firmly to surface for 30 seconds per clip.

 Retire el protector negro. Presione cada clip a la pared por 30 segundos.

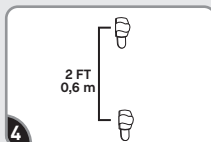

Use one clip for every 2 feet of lights.

 
Use un clip para 0,6 m de extensión de luces.



Wait 1 hour before hanging lights.

Esperar 1 hora antes de colgar las extensión de luces.

REMOVE RETIRAR

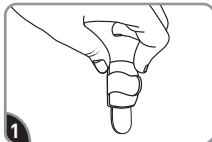


Gently hold clip in place.

Sostenga el clip en su lugar.



Never pull the strip towards you! Always pull straight down.

 ¡Nunca jale la tira hacia usted! Siempre jale directamente hacia abajo.

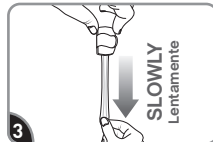

Stretch the strip slowly against the wall at least 6 inches to release.

Estire la tira lentamente contra la pared por lo menos 15 cm para soltar.

Clips can be reused with Command® Outdoor Small Refill Strips.

Los clips se pueden volver a usar con las tiras de exteriores pequeñas de repuesto Command®.

▲ CAUTION: Do not hang over beds or on wallpaper. Do not hang valuable or irreplaceable items or framed pictures. Apply 15° to 125°F. Holds -20° to 125°F.

Limited Warranty and Limitation of Liability (for product sold in USA): This product will be free from manufacturing defects. If defective, your exclusive remedy shall be, at 3M's option, product replacement or refund. 3M will not be liable for any loss or damage arising from this product, whether direct, indirect, special, incidental or consequential.

▲ PRECAUCIÓN: No cuelgue sobre camas o utilice en pared tapiz. No cuelgue artículos valiosos o irremplazables o imágenes con marco. Aplicar entre -9° y 50°C Sujeta entre -29° y 50°C

Garantía limitada y límite de responsabilidad (para producto vendido en E.U.A.): Este producto no tendrá defectos de fabricación. Si tiene defectos, su única solución será, a opción de 3M, el reemplazo del producto o el reembolso del precio de compra. 3M no será responsable de ninguna pérdida o daño que se deriven de este producto, ya sea directos, indirectos, especiales, fortuitos o resultantes.



IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**

- b) Do not use these products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- d) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails. Install only using the mounting means provided.
- e) Do not let lamps rest on the supply cord or on any wire.
- f) Do not use this product for other than its intended use.
- g) Do not hang objects from cord, wire, or light string.
- h) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- i) Do not cover the product with cloth, paper or any material not part of the product when in use.
- j) This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- k) Read and follow all instructions that are on the product or provided with the product.
- l) Installing bulbs: Ensure that the base of the bulb is fully threaded into the socket by rotating clockwise. The base of the bulb should be sealer securely to the top of the socket.

m) **SAVE THESE INSTRUCTIONS**

Use and Care Instructions

- a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- b) If the product is placed on a tree, the tree should be well secured and stable.
- c) Before using or reusing, inspect product carefully. Discard any product that have cut, damaged or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
- d) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- e) When not in use, store neatly in a cool, dry location protected from sunlight.

IMPORTANT SAFETY INSTRUCTIONS

User Servicing instructions

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Risk of fire. Do not replace attachment plug. Discard product if the attachment plug is damaged.
- Disconnect the lighting string or decorative outfit from the outlet before removing a lamp and replacing it with the ornament.
- This seasonal use product is not intended for permanent installation or use.
- Unscrew old bulb by rotating counterclockwise and removing from socket.
- Installing bulbs: Ensure that the base of the bulb is fully threaded into the socket by rotating clockwise. The base of the bulb should be sealer securely to the top of the socket.
- Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
- This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Replace bulb with only 120 Volt, 11 Watt S14 or G60 type bulb.


Replacement Bulb Specifications		
	S14 Bulbs	G60 Bulbs
Image		
Type	Appliance/Signs-S14	Globe-G60
Construction	Incandescent	Incandescent
Bulb Base	E26 (Medium)	E26 (Medium)
Wattage	11	11
Voltage	120	120

If connecting to a lighting string that does not have a Wattage (W) rating (found on the tag within 6 inches of the plug) calculate the wattage as follows: Multiply the current (___A) which is on the flag-type tag by 120.

For example: Lighting string is rated 120V, 60Hz, 0.2 Amps. $0.2 \times 120 = 24$ Watts. Add the wattage of each light string together for a total of 420 Watts or less.
(Do not exceed 420 Watts)

CAUTION

 - To reduce the risk of fire use only type S14 or type G60 lamps, 11 watts maximum.

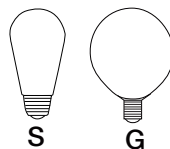

- To reduce the risk of fire do not deliberately reposition either lamp holder contact.
- To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leave or branch coverings of metal or materials which look like metal. And b) Do not mount or support strings in a manner that can cut or damage wire insulation.

1 Year Limited Warranty

The Product is warranted against defects in materials and workmanship under normal use and service for a period of one (1) year from the date of original purchase when delivered to you in new condition in its original container. Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover accessories or consumables, such as light bulbs, as to which there shall be no warranty or replacement.

This limited warranty covers all defects encountered in normal use of the Product and does not apply to the following cases:

1. Loss of or damage to the Product due to abuse, neglect, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, improper use, failure to follow operating or maintenance instructions prescribed in AmazonBasics safety instructions or other documentation. Dropping the Product, scratches, and abrasions will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the user's manual or other documentation for the Product.
2. Use of other parts or supplies (other than those sold by AmazonBasics) that cause damage to the Product
3. If the Product has had its model number or dating defaced, altered or removed.

 
Model No. GC-DC-26-W



Weatherproof Outdoor Patio String Lights, 48 Feet (For S14 and G60 Bulbs)

⚠ WARNING: Read ENTIRE manual before using this product. Failure to do so may result in serious injury or harm.

⚠ SAVE THIS MANUAL. Keep this manual for assembly, operating, maintenance, inspecting and cleaning purposes.

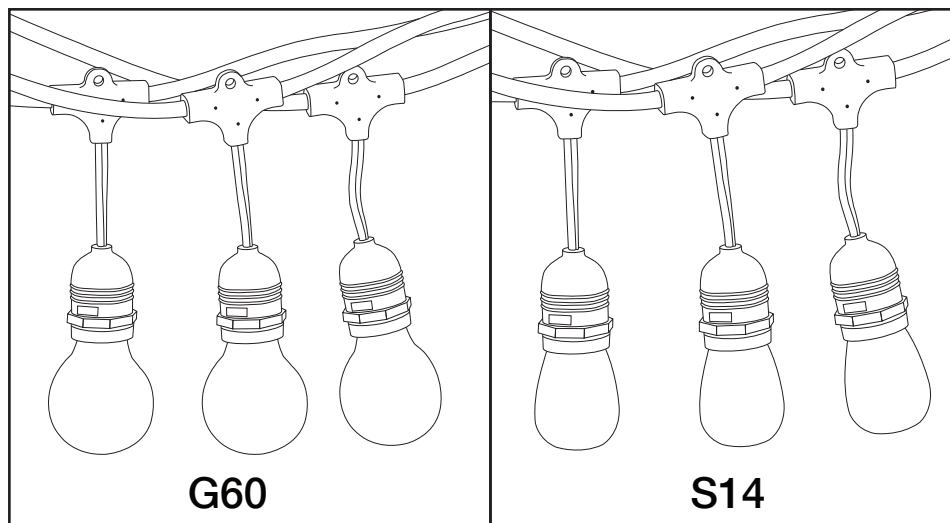

While unpacking this product, make sure the item is complete and undamaged. Please contact Amazon support if any parts appear to be missing or broken.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

⚠️ WARNINGS AND SAFETY INFORMATION

1. To reduce risk of electric shock, DO NOT connect or disconnect when wet.
2. DO NOT use with extension cord near water or where water may accumulate.
3. Keep lamps at least 16 feet (4.8m) from pools and spas
4. Keep plugs and receptacles dry; DO NOT submerge
5. When connecting multiple sets, protect connections from direct exposure to rain and water. DO NOT allow connection to become wet.
6. Lighting strings are rated for 120V, 60 Hz; DO NOT EXCEED 1560 total watts, all string combined. Do not connect more than nine (9) 48-Foot strings together or exceed 135 total bulbs.
7. Female connector is to be used ONLY for additional light sets.

⚠️ **CAUTION:** DO NOT use bulbs with a wattage rating higher than 11 Watts.

ⓘ **NOTICE:** The warnings and precautions included in this manual do not cover all conceivable scenarios and outcomes. The operator must exercise caution and common sense when installing and operating this product.

INSTALLATION

 
 
 
(Hardware, hooks, cable ties and guiding wire are not included.)

⚠️ CAUTION:

1. DO NOT secure cords with staples or nails.
2. If changing to a new location, remove bulbs before installation.
3. INSPECT set up and product condition before each use.
4. Keep bulbs at least 3 inches from other objects.


Installation without guide wire:

Ensure the String Light is securely fastened to a building or structure in three locations: (1) the first bulb, (2) The 6th or 7th bulb, and (3) the last bulb/the end of EACH connected String Light.

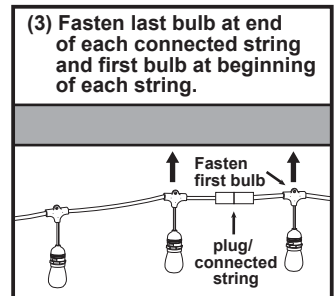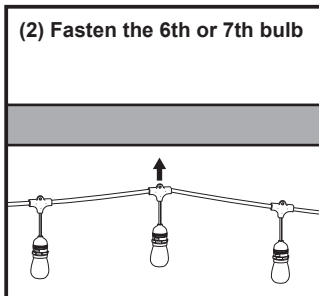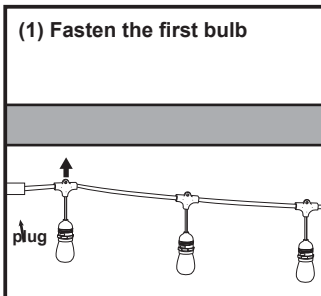


Installation with guide wire:

 If you are installing the String Lights using a guide wire, use an S-hook or cable tie and connect every bulb backing to the guide wire using the hole located on the top of the socket.

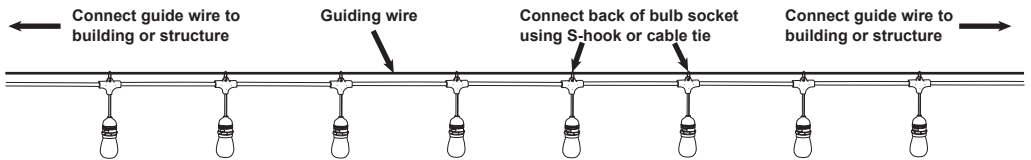

 ⚠ NOTICE: When connecting multiple cords together, create a knot with the cord ends as shown below or use a plug protector to prevent the plugs from pulling apart during use.

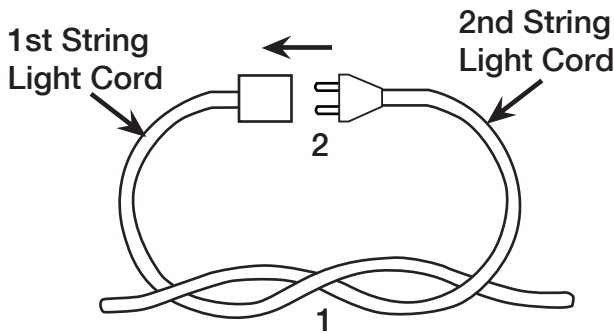

CARE INSTRUCTIONS:

Clean String Light only with a dry, soft cloth. Do NOT use abrasive cleaners.

TROUBLESHOOTING




Issue	Possible Source	Resolution
Light did not come on initially or no longer comes on.	1. Bulb is burnt out/damaged 2. Bulb is not properly installed 3. String Light is not plugged in	1. Replace bulb 2. Reinstall bulb 3. Plug String Light into outlet

INSTALLING/REPLACING LIGHT BULBS

⚠ WARNING: To prevent serious injury, unplug String Light from electrical outlet before installing/replacing bulbs. Please allow bulb to cool down before touching.

Installing Bulbs:

   1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Unscrew old bulb by rotating counterclockwise and removing from socket.
3. Install new bulb. Ensure that the base of the bulb is fully threaded into the socket by rotating clockwise. The base of the bulb should be sealed securely to the top of the socket. This will prevent moisture from entering the socket.

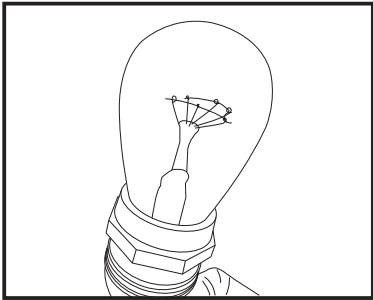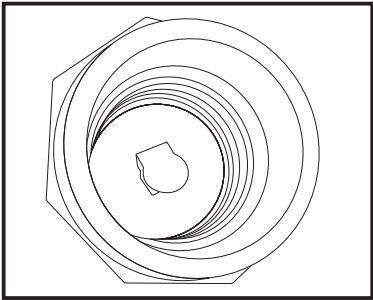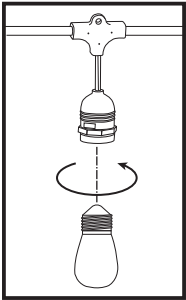

⚠ WARNING: Ensure that your replacement bulb fits securely into the bulb socket. Incorrectly fitting bulbs will not seal socket properly and may cause injury or death from shattered glass or electric shock.

Replacing Bulbs:

Prior to purchase of replacement bulbs, please make sure to meet the below specifications. S14 and G60 replacement bulbs may be available at local hardware stores or on Amazon.com.

Replacement Bulb Specifications		
	S14 Bulbs	G60 Bulbs
Image		
Type	Appliance/Signs-S14	Globe-G60
Construction	Incandescent	Incandescent
Bulb Base	E12-Candelabra	E12-Candelabra
Wattage	11	11
Volts	120	120

⚠ CAUTION: Replace lamp with only 120 Volt, 11 Watt S14 or G60 Incandescent type lamp (provided with product).

