 


Travel Steamer

USER MANUAL

Model: GH02

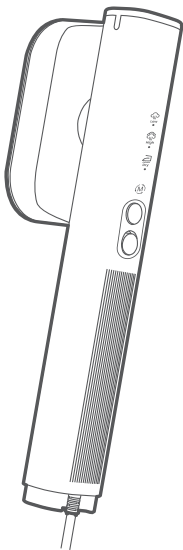


SAFETY INSTRUCTIONS


⚠️ READ AND FOLLOW ALL INSTRUCTIONS BEFORE USE

- Supports 110–240V worldwide voltage. No voltage converter is needed, but a plug adapter may be required depending on the local outlet type.
- Always unplug the device before filling with water, cleaning, or when not in use for extended periods.
- Use only with the provided power adapter. Do not immerse the unit in water or expose to rain.
- Ensure your hands are dry when handling the plug or power switch.
- Please do not touch the steamer nozzle or emitted steam during operation to avoid scalding.
- Do not place the steam nozzle directly on desks or fabrics for extended periods during use.
- Always turn off the steamer and allow it to cool before placing it on a stable, heat-resistant surface.
- Keep the steamer away from children, pets, and flammable materials.
- Operate only in dry, well-ventilated areas. Avoid using near sinks or humid spaces.
- Please do not add essential oils, perfumes, solid fragrances, or any chemicals to water tank.
- Regularly empty the water tank after use to prevent mineral buildup.
- Never leave the steamer unattended while plugged in.
- For any abnormality or malfunction, immediately discontinue use, unplug, and contact our customer service team for assistance.
- Do Not Steam While Wearing.

KNOW YOUR PRODUCT

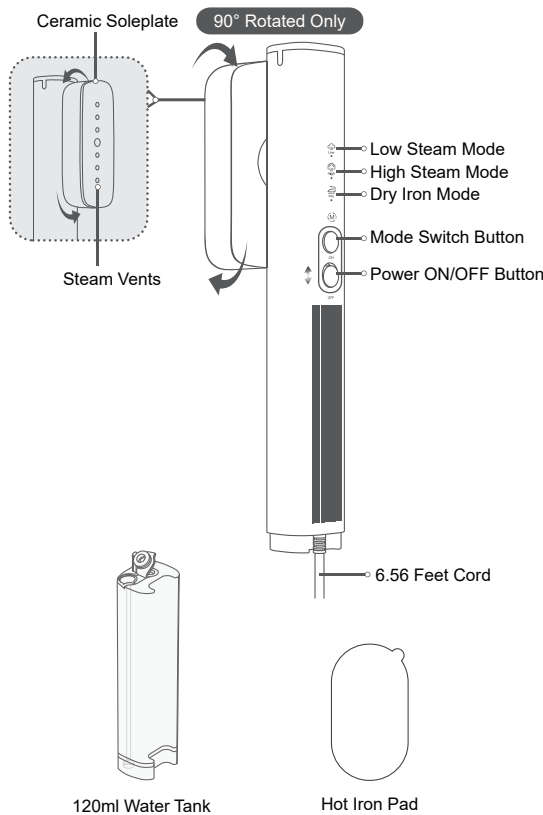

USING YOUR STEAMER

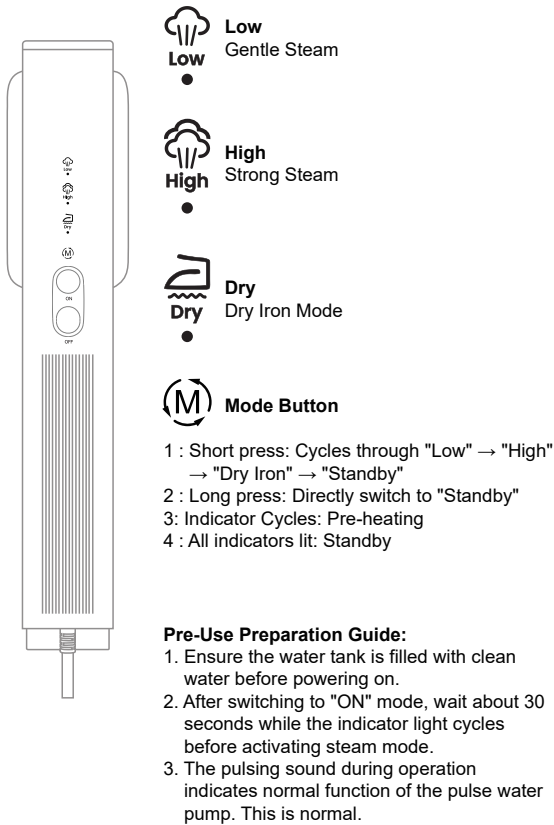

120ML Water Tank



TECHNICAL SPECIFICATIONS

Model: GH02
Power: 1000W
Voltage: 100V-240V~50Hz/60Hz
Length: 2m/6.56ft

POWER & PLUG SAFETY WARNING

Before use, especially when traveling or staying in a hotel, please make sure that:

- The local outlet is compatible with the product.
- The adapter, extension cord, or power strip supports 1000W or higher.
- The plug is fully inserted and securely connected.
- The outlet or adapter is not loose, damaged, aged, or poorly fitted.

Hotel Use Reminder
When using the product overseas or in a hotel, make sure the outlet or plug adapter is rated for **more than 1000W and fits securely**. Hotel outlets may be aged, loose, poorly contacted, or power-limited. Before use, make sure the plug is **fully inserted and connected**.

Do not use
Do not use loose, damaged, low-quality, aged, or under-rated adapters, power strips, extension cords, or outlets. This may cause poor contact, overheating, tripping, smoke, burning, product damage, or other safety hazards.

Stop using the product immediately and unplug it if you notice:

- Smoke, burning smell, or abnormal heat
- A hot plug, outlet, or adapter
- Burn marks or deformation on the unit
- Power tripping, power failure, or abnormal operation
- Continuous water leakage or abnormal spraying

Do not continue using the product or attempt to repair it yourself. Please contact customer service for assistance.

PACKAGE CONTENTS

- 1 x Hand-held Steamer
- 1 x Hot Iron Pad
- 1 x User Manual

MAINTENANCE & STORAGE

- 1. Daily Care**
Empty the water tank completely after each use to prevent residue. Wipe the steam nozzle and exterior with a soft, dry cloth.
- 2. Storage**
Unplug, cool down, and ensure fully dry. Store upright in a cool, dry place away from direct sunlight. Loosely coil the cord - avoid sharp bends.

WARRANTY & COMPLIANCE

- 1. Defective Product?**
Contact our customer service team with your order number for immediate troubleshooting.
- 2. Past Amazon's 30-Day Return Window?**
Contact us with your order number, and we will resolve the issue within 24 hours.
- 3. Warranty Time?**
This product includes a 1-year standard warranty. For quality-related issues, contact our customer service team.

TROUBLESHOOTING

If you are unable to resolve the issue with the provided information or if your problem is not listed, contact our customer service team for more assistance.

Issue	Solution
No Steam	• Ensure the water tank is filled with water. • Wait 30 seconds for full preheating (all lights lit) • Ensure the steamer is not in dry iron mode
Water Leakage	• Tighten the tank cap securely. • Hold the steamer upright during use.
Weak Steam Output	• Check for nozzle blockages • Use purified water to avoid scaling
Pulsing Sound on Operation	• Indicate normal function of the pulse water pump.
Water Tank Stains	• It is residue from pre-delivery quality inspections and will not affect normal use

YOUR GLOBAL TRAVEL PARTNER

Universal Input Voltage 100-240V~50/60Hz				
FRANCE 220V-240V	ITALY 220V-240V	GERMANY 220V-240V	BRITAIN 220V-240V	SPAIN 220V-240V
JAPAN 100V	AMERICA 110V	CANADA 110V	MEXICO 120V	BRAZIL 110V-220V
KOREA 220V	EL SALVADOR 220V	THAILAND 220V	GREECE 230V	KENYA 240V
Material	Suitable for direct contact	Not suitable for direct contact	Dry Ironing Tips	
Cotton	○		Turn garments inside-out and iron with continuous motion to prevent scorch marks.	
Linen	○			
Denim	○			
Polyester	○		Move quickly & Place a cloth barrier to avoid hardening or melting.	
Nylon		○		
Silk		○	Avoid dry steaming! Always use a cloth or hold the steamer 5-10cm away to protect delicate fibers.	
Cashmere		○		
Wool		○		