

# *Kalamera*



## **INSTRUCTION MANUAL**

Compressor Wine Cooler

18-Bottle / 30-Bottle / 46-Bottle / 54-Bottle / 157-Bottle

MODEL: KRC-18SZB / KRC-30SZB / KRC-46DZB / KRC-54SZB / KRC-157DZB


Please read carefully and follow all safety rules and operating instructions.

## **Content**

<b>1. Your Wine Cooler.....</b>	<b>3</b>
<b>2. Technical Data.....</b>	<b>8</b>
<b>3. Safety Precautions.....</b>	<b>10</b>
<b>4. Important Precautions.....</b>	<b>10</b>
<b>5. Installation Instructions.....</b>	<b>11</b>
<b>6. Operating Your Wine Cooler.....</b>	<b>15</b>
<b>7. Care and Maintenance.....</b>	<b>15</b>
<b>8. Trouble Shootings.....</b>	<b>16</b>
<b>9. Warranty.....</b>	<b>17</b>

# Your Wine Cooler

KRC-18SZB

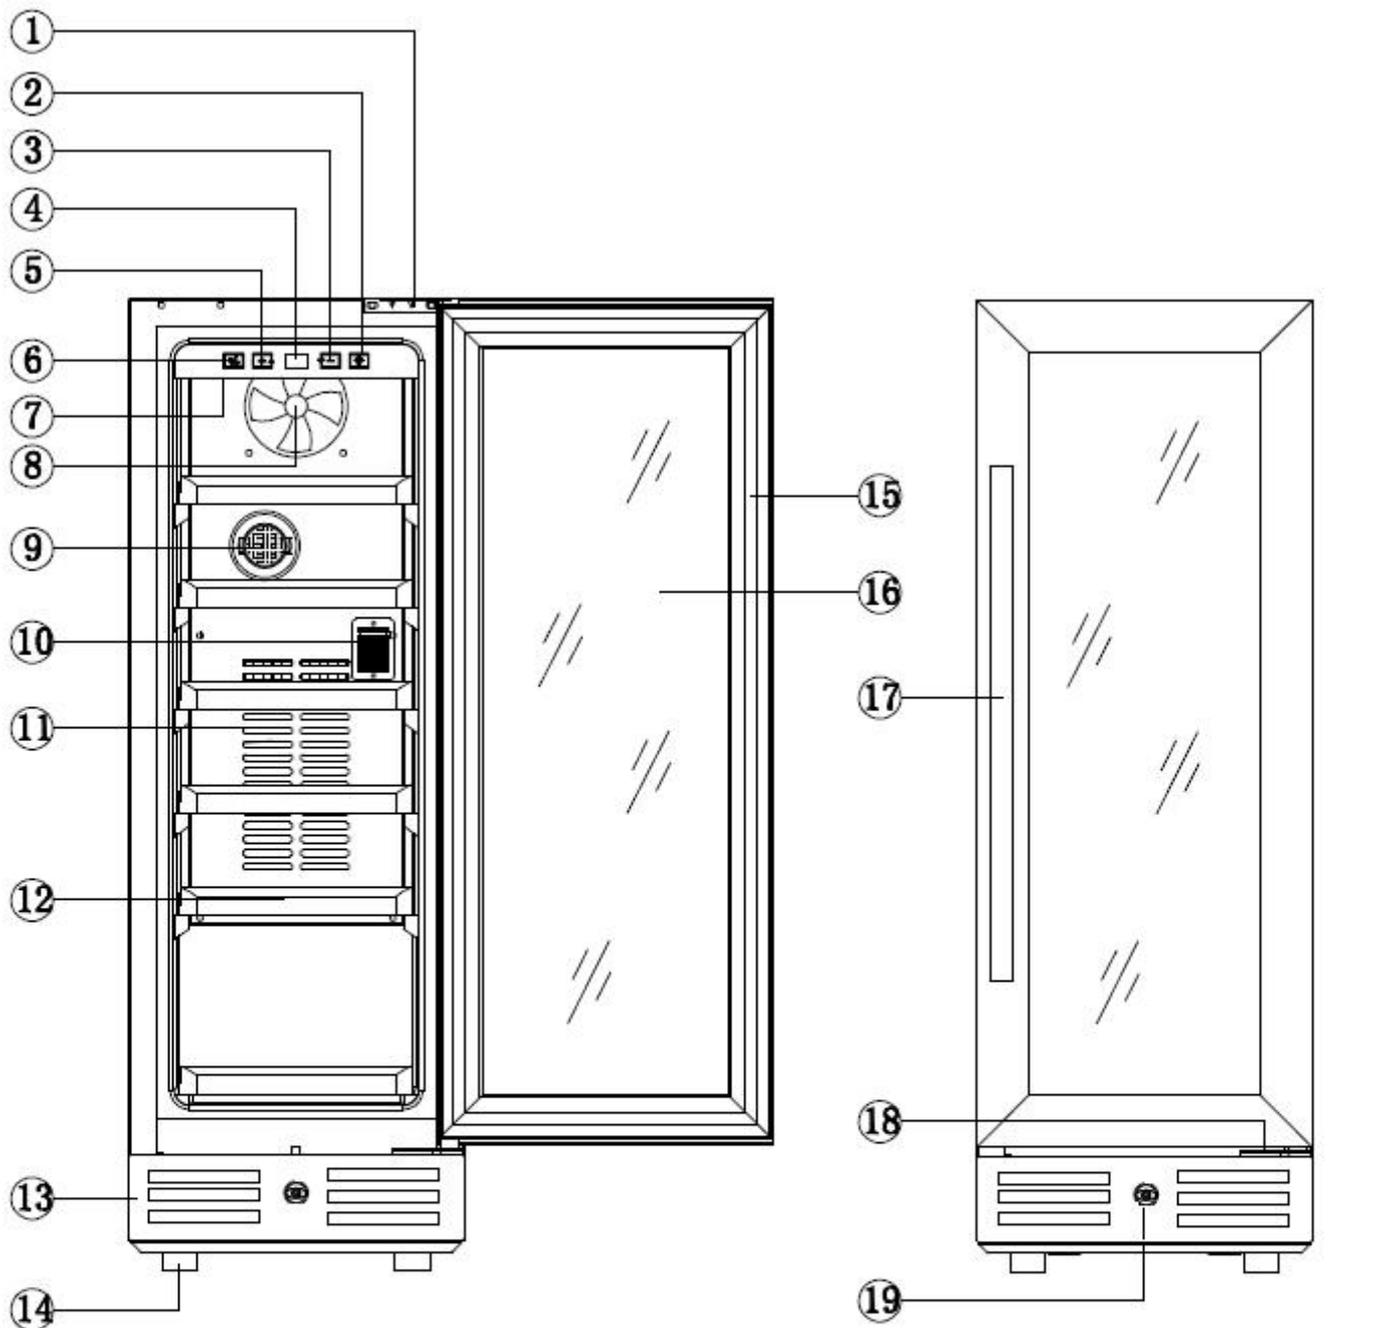


- 1 、 Right upper Hinge
- 2 、 Light switch
- 3 、 Temperature setting
- 4 、 Temperature display
- 5 、 Temperature setting
- 6 、 Temperature switch
- 7 、 Light

- 8 、 Fan
- 9 、 Carbon filter
- 10、 NTC point
- 11、 Exhaust window
- 12、 Shelf
- 13、 Exhaust window
- 14、 Foot

- 15、 Door seal
- 16、 Glass
- 17、 Handle
- 18、 Lower Hinge
- 19、 Lock

# KRC-30SZB

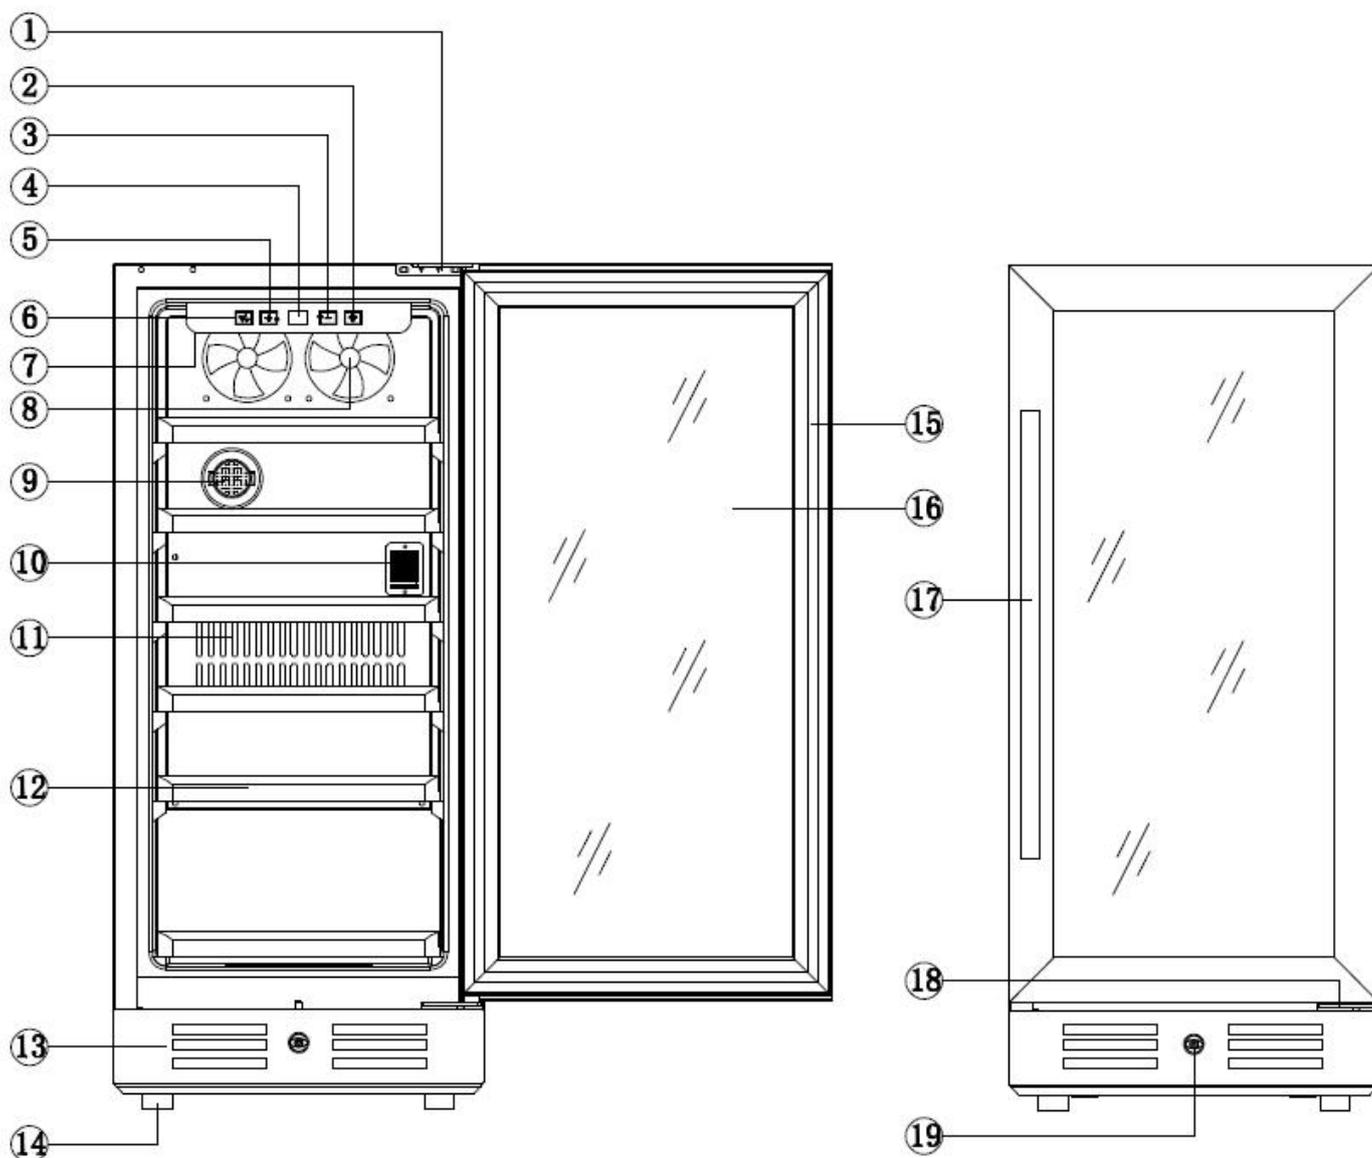


- 1 、 Right upper Hinge
- 2 、 Light switch
- 3 、 Temperature setting
- 4 、 Temperature display
- 5 、 Temperature setting
- 6 、 Temperature switch
- 7 、 Light

- 8 、 Fan
- 9 、 Carbon filter
- 10、 NTC point
- 11、 Exhaust window
- 12、 Shelf
- 13、 Exhaust window
- 14、 Foot


- 15、 Door seal
- 16、 Glass
- 17、 Handle
- 18、 Lower Hinge
- 19、 Lock

# KRC-46DZB

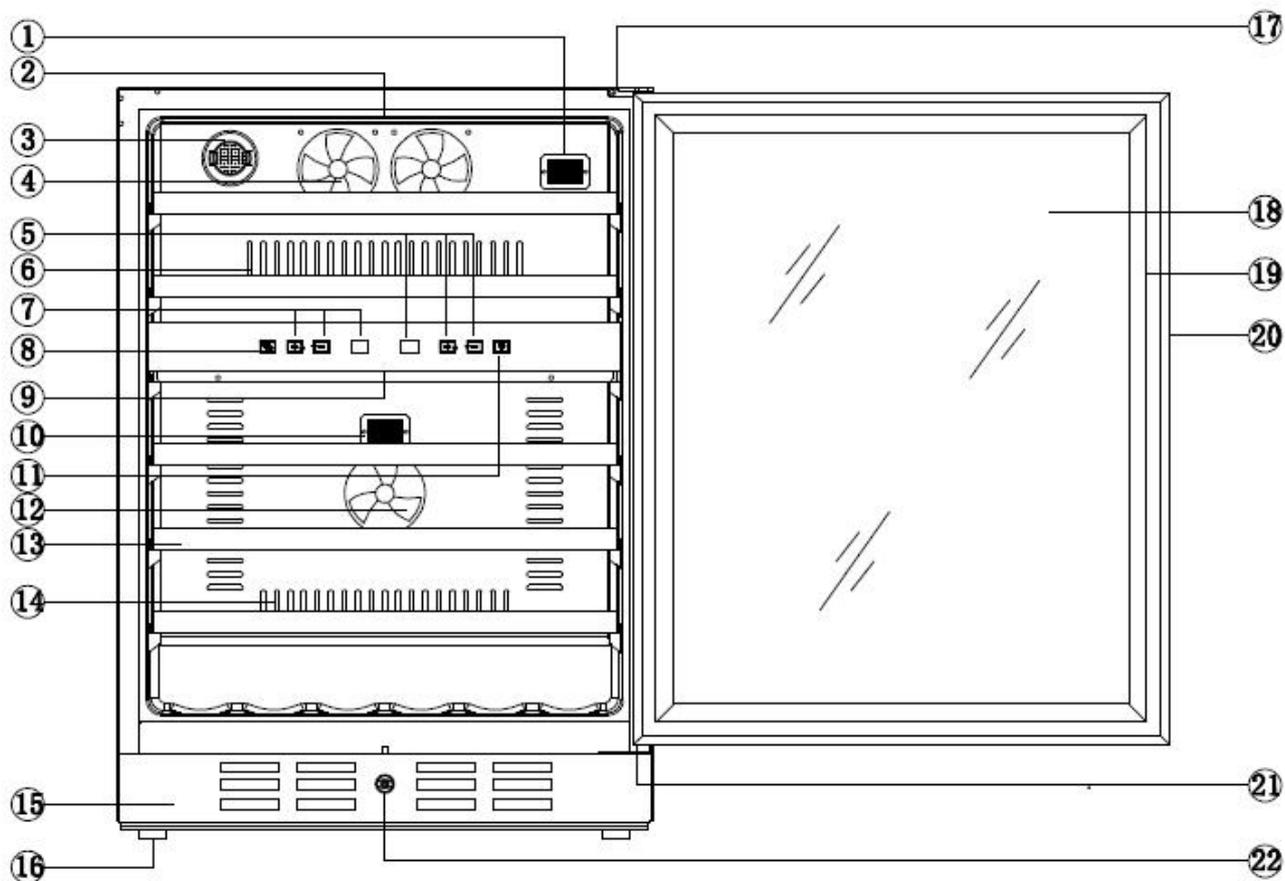

- |                            |                            |                    |                 |
|----------------------------|----------------------------|--------------------|-----------------|
| 1 、 Upper zone NTC point   | 7 、 Upper zone temperature | 13、 shelf          | 19、 Door seal   |
| 2 、 Upper zone Light       | 8 、 Temperature switch     | 14、 Exhaust window | 20、 Handle      |
| 3 、 Carbon filter          | 9 、 Lower zone Light       | 15、 Exhaust window | 21、 Lower Hinge |
| 4 、 Fan                    | 10、 Lower zone NTC point   | 16、 Foot           | 22、 Lock        |
| 5 、 Lower zone temperature | 11、 Light switch           | 17、 upper Hinge    |                 |
| 6 、 Exhaust window         | 12、 Lower zone Fan         | 18、 Glass          |                 |

# KRC-54SZB

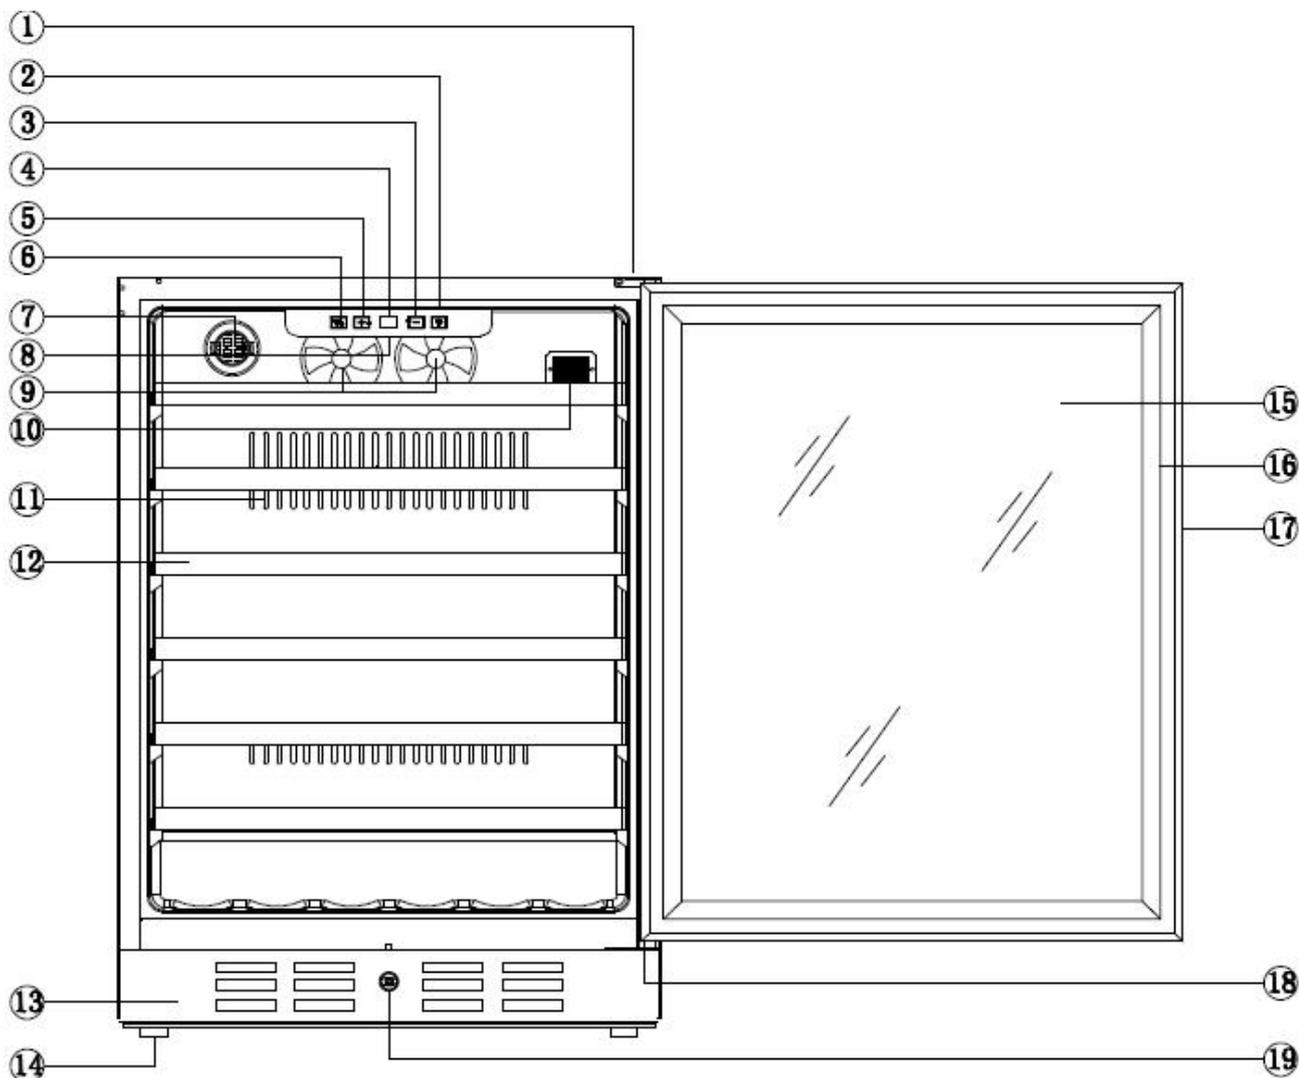


- 1、upper Hinge
- 2、Light switch
- 3、Temperature setting
- 4、Temperature display
- 5、Temperature setting
- 6、Temperature setting
- 7、Carbon filter

- 8、Light
- 9、Fan
- 10、NTC point
- 11、Exhaust window
- 12、Shelf
- 13、Exhaust window
- 14、Foot

- 15、Glass
- 16、Door seal
- 17、Handle
- 18、Lower Hinge
- 19、Lock

# KRC-157DZB

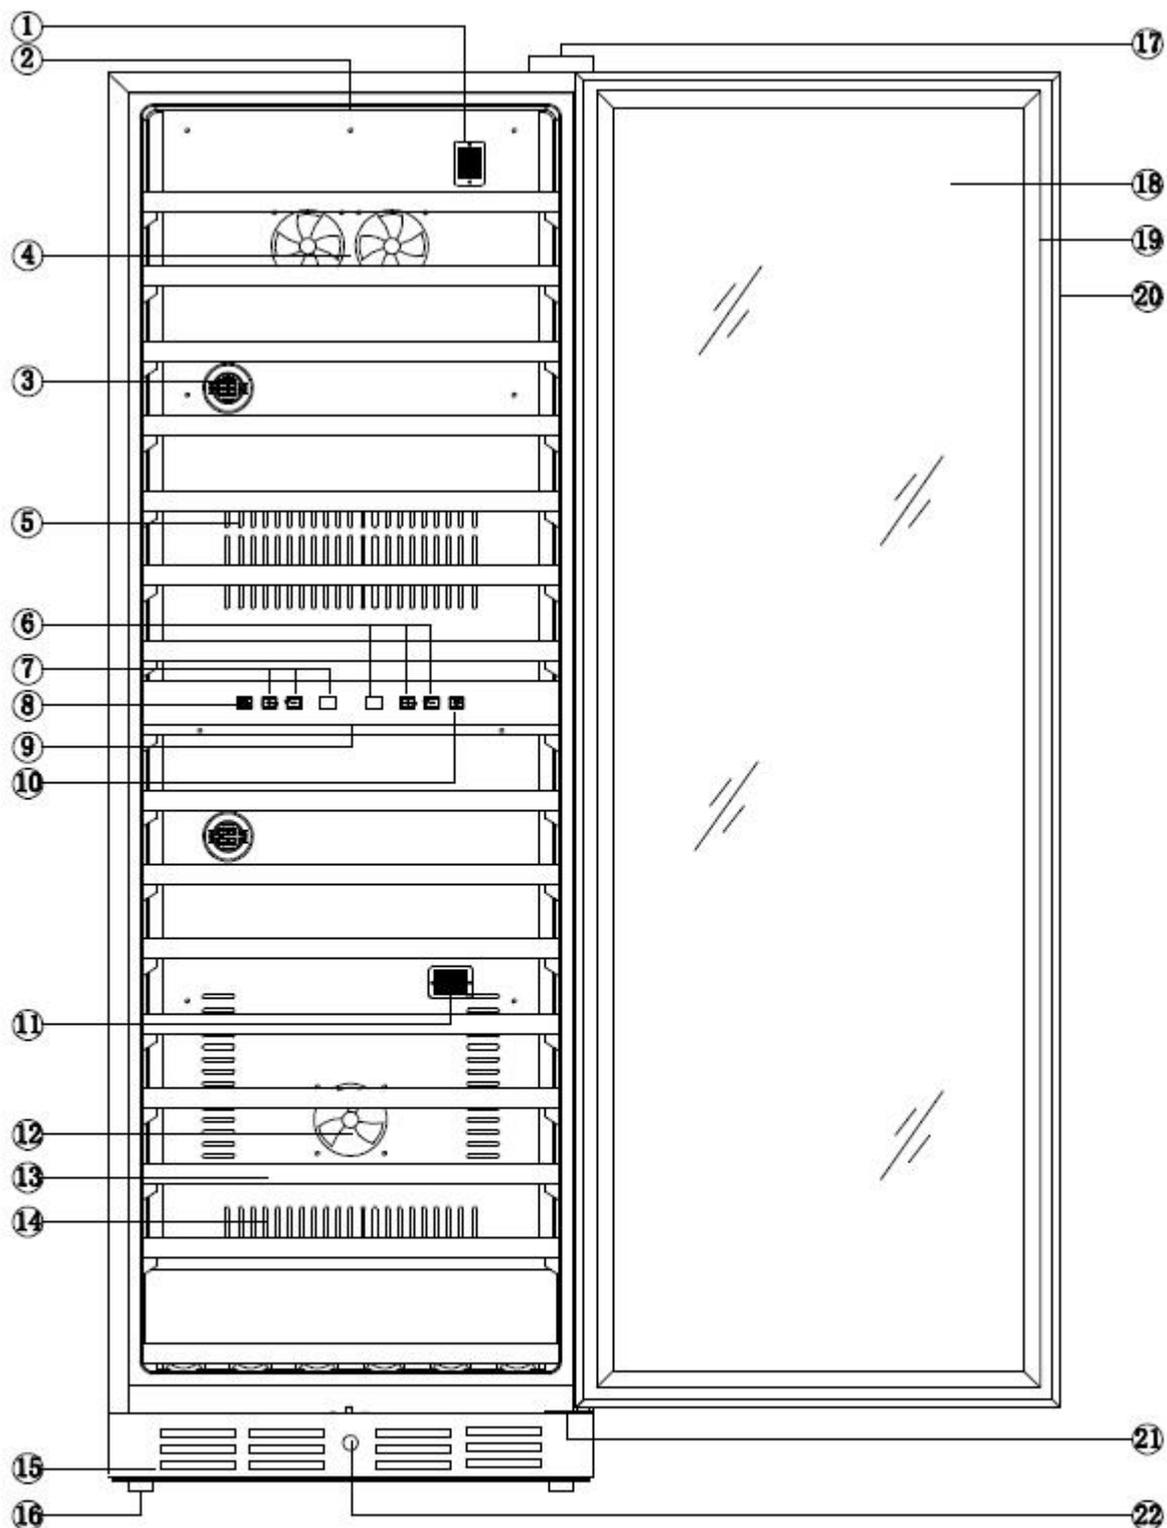

- |                          |                          |                   |                |
|--------------------------|--------------------------|-------------------|----------------|
| 1、Upper zone NTC point   | 7、Upper zone temperature | 13、shelf          | 19、Door seal   |
| 2、Upper zone Light       | 8、Temperature switch     | 14、Exhaust window | 20、Handle      |
| 3、Fan                    | 9、Lower zone Light       | 15、Exhaust window | 21、Lower Hinge |
| 4、Carbon filter          | 10、Light switch          | 16、Foot           | 22、Lock        |
| 5、Exhaust window         | 11、Lower zone NTC point  | 17、upper Hinge    |                |
| 6、Lower zone temperature | 12、Lower zone Fan        | 18、Glass          |                |


## **Technical Data**

Model No.	KRC-18SZB	KRC-30SZB
Capacity	70L	90L
Voltage	110-120V	110-120V
Rated Current	1.2A	1.2A
Frequency	60Hz	60Hz
Protection Class	I	I
Climate Class	T/ST/N/SN	T/ST/N/SN
Input Power	90W	90W
Power Consumption(KW.h/24h)	0.55 KW.h/24h	0.59 KW.h/24h
Temperature Control Range	40°F-66°F	40°F-66°F
Net Weight	63.9 lbs	72.8 lbs
Gross Weight	85.1 lbs	95.3 lbs
Product Size(W×H×D)	11.6 x 33.9 x 22.4 inches	14.9 x 33.9 x 22.4 inches
Packing Size(W×H×D)	17.9×43.7×28.6 inches	21.1×43.7×28.6 inches


Model No.	KRC-46DZB	KRC-54SZB
Capacity	150L	150L
Voltage	110-120V	110V
Rated Current	1.2A	1.2A
Frequency	60Hz	60Hz
Protection Class	I	I
Climate Class	T/ST/N/SN	T/ST/N/SN
Input Power	90W	90W
Power Consumption(KW.h/24h)	0.91 KW.h/24h	0.84 KW.h/24h
Temperature Control Range	Upper zone:40-50°F Lower zone: 50-66°F	40-66°F
Net Weight	104 lbs	104 lbs
Gross Weight	144.7 lbs	144.7 lbs
Product Size(W×H×D)	23.4 x 33 x 22.4 inches	23.4 x 33 x 22.4 inches
Packing Size(W×H×D)	29.7 x 43.2 x 28.6 inches	29.7 x 43.2 x 28.6 inches

Model No.	KRC-157DZB
Capacity	450L
Voltage	110-120V
Rated Current	2.3A
Frequency	60Hz
Protection Class	I
Climate Class	T/ST/N/SN
Input Power	130W
Power Consumption(KW.h/24h)	1.52 KW.h/24h
Temperature Control Range	Upper zone:40-50°F Lower zone: 50-66°F
Net Weight	221.8 lbs
Gross Weight	258 lbs
Product Size(W×H×D)	23.4 x 69.6 x 26.8 inches
Packing Size(W×H×D)	26.8 x 76.2 x 30.1 inches


# Electrical Circuit Diagram

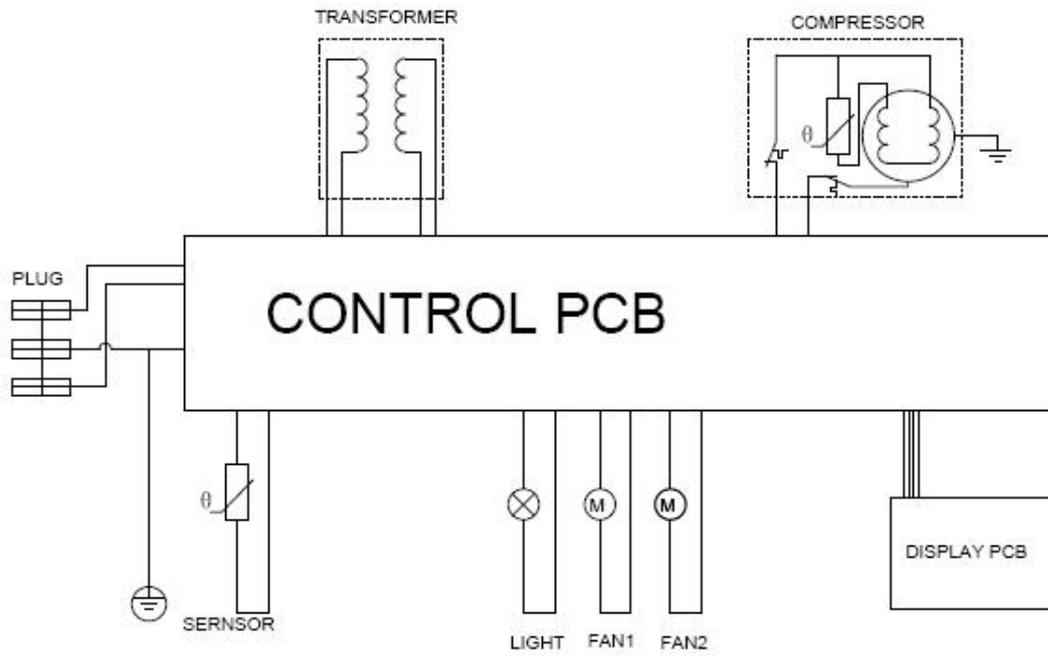

KRC-18SZB

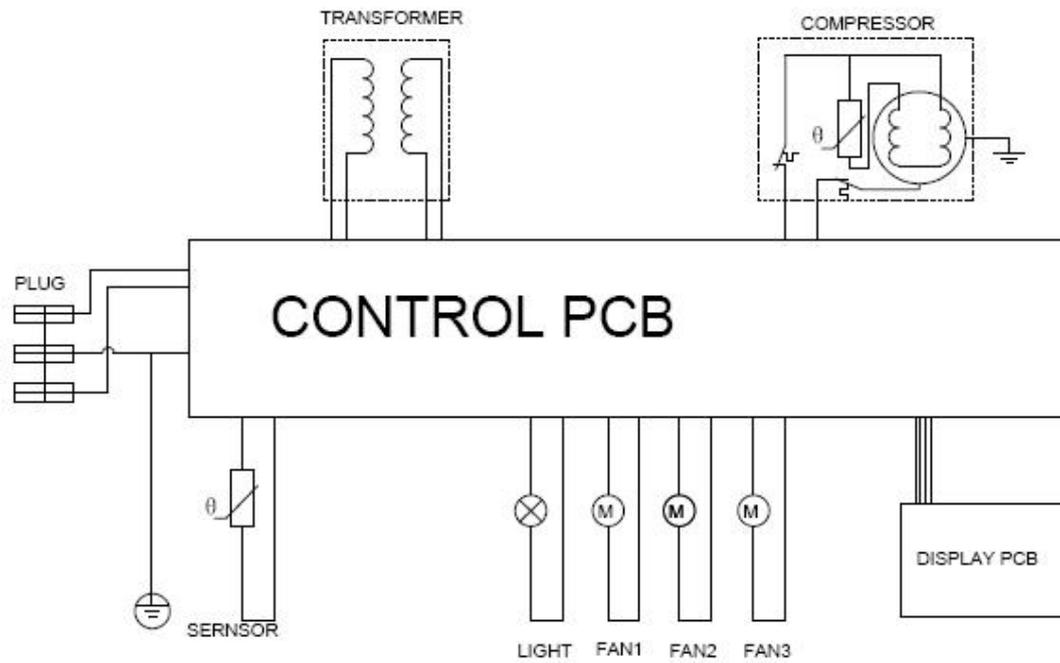

KRC-30SZB & KRC-54SZB

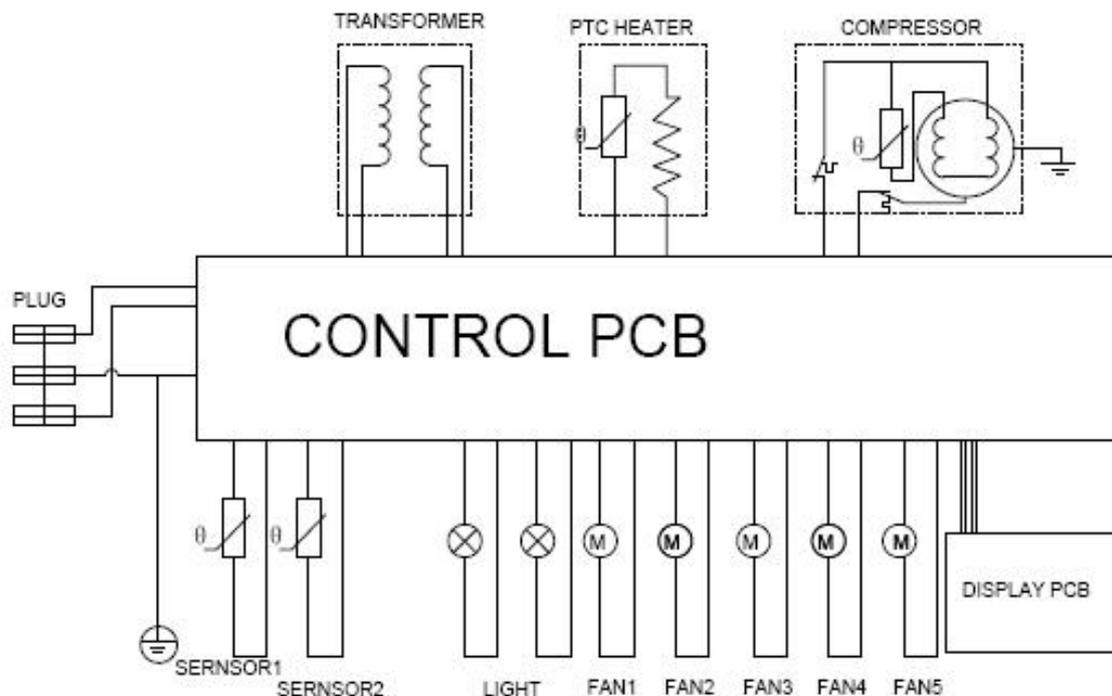

KRC-46DZB & KRC-157DZB

## Safety Precautions



To reduce the risk of fire, electrical shock, or injury when using your appliance, follows these basic precautions;

- **PLEASE READ** all instructions before installing, operating, or servicing the appliance.
- **Danger and Warning:** Failure to follow this safety statement will result in severe personal injury or death, property or equipment damage.
- **RISK OF CHILD ENTRAPMENT.** Before you throw away your old refrigerator or freezer, take off the doors and leave shelves in place so children may not easily climb inside. Keep children away from the wine cooler, avoid them put fingers in air outlet on the kick plate.
- **⚠️ SHOCK HAZARD** - Electrical Grounding required.
- Never attempt to repair or perform maintenance on the unit until the electricity has been disconnected.
- Never remove the round grounding prong from the plug and never use a two-prong grounding adaptor.
- Altering, cutting of power cord, removal of power cord, removal of power plug, or direct wiring can cause serious injury, fire or loss of property and life, and will void the warranty.
- Never use an extension cord to connect power to the unit.
- Always keep the working area dry.

## Important Precautions

- Do not lift unit by door handle.
- Do keep the door closed before installing into cabinet.
- Be sure the kick-plate on the front bottom is free from obstruction. Obstructing free airflow can cause the unit to malfunction and will void the warranty.
- Allow unit temperature to stabilize for 24 hours before use.
- Do not block any internal fans.
- Use only genuine supplier's replacement parts. Imitation parts can damage the unit, affect its operation or performance and may void the warranty.


## Installation Instructions

Before using your wine cooler:

- Remove the exterior and interior packing
- Before connecting the appliance to the power outlet, let it stand upright for approximately 2 hours. This will reduce the possibility of malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded.
- To level your appliance, adjust the front legs at the bottom of the appliance.

- **To install the door handle:**

For shipment, the door handle has been stored inside of the unit binding to the wood shelves. To install the handle, the door gasket should be gently pulled back where it covers the screw holes for the handle, then the handle should be attached by screwing into place with the two screws which are packed in the box with this Instruction Manual and other spare parts.


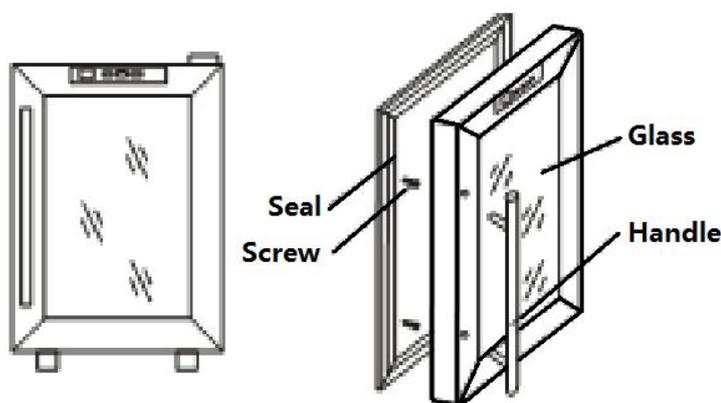


- **To reverse the door swing:**



As you received your wine cooler, the door swings open at the left. If you wish to reverse the swing so that the door opens from the right, it is most important to have at least one other person to help. **It is very dangerous to try to reverse the door swing by yourself**, without anybody's help the door might fall and the glass might be broken, which is terribly dangerous. **Model KRC-450B is not available to reverse the door.**

Now, unscrew the upper door hinge while the second person hold the door. Remove the upper hinge and carefully lift the door off the bottom hinge. Unscrew the bottom hinge and install it on the left side of the unit. Flip the door around so that the handle is on the right side and slip the door over the bottom hinge. Reattach the door by screwing the top hinge into the holes provided on the upper left surface of the unit. Make adjustments as necessary to be sure the door is aligned properly.



● Suggest cabinet dimension:

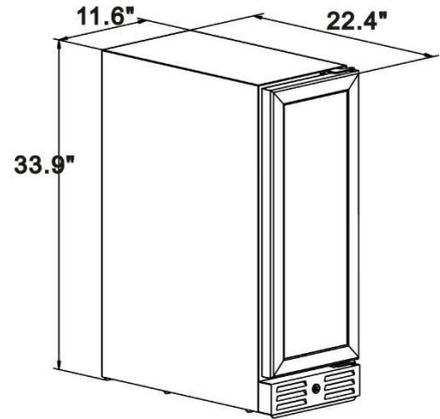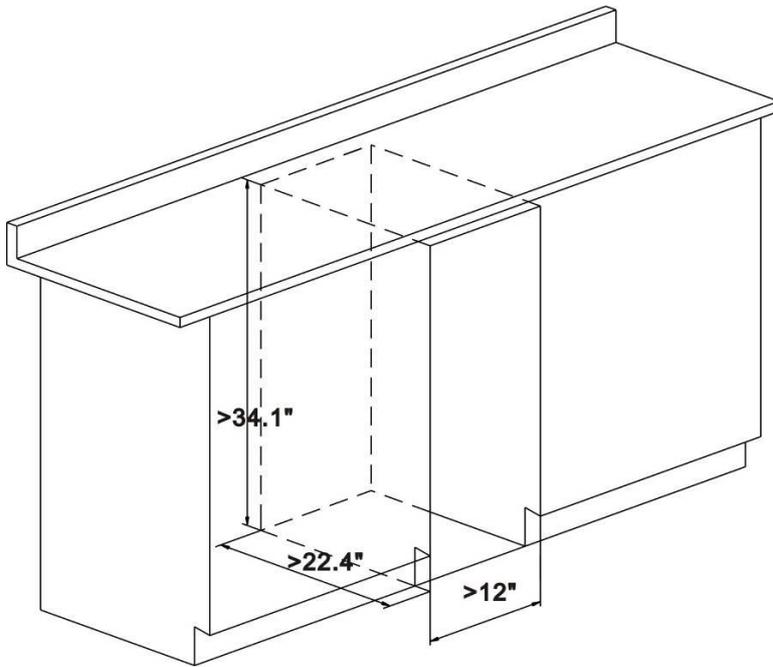



KRC-18SZB

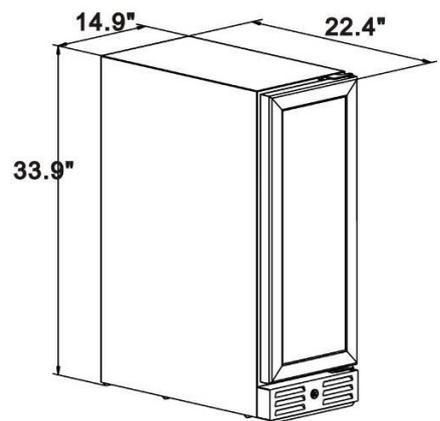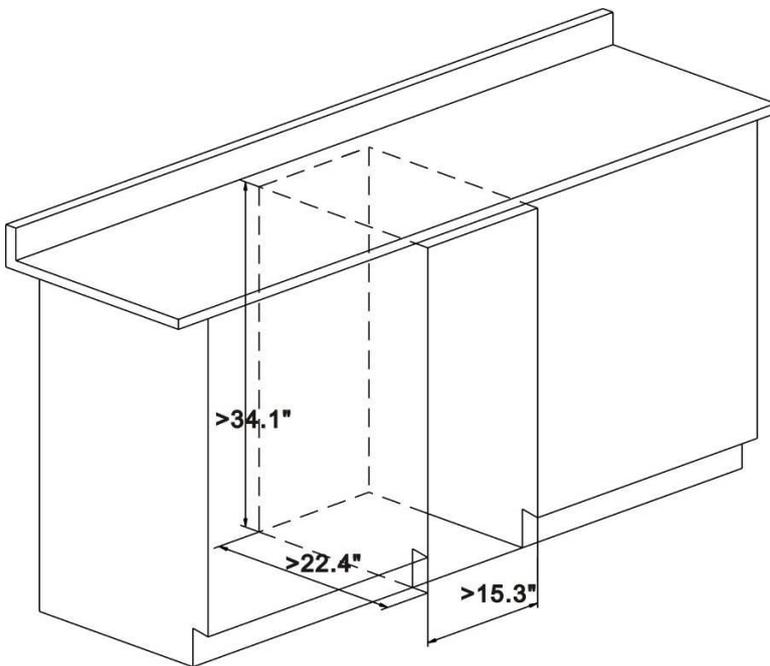

KRC-30SZB

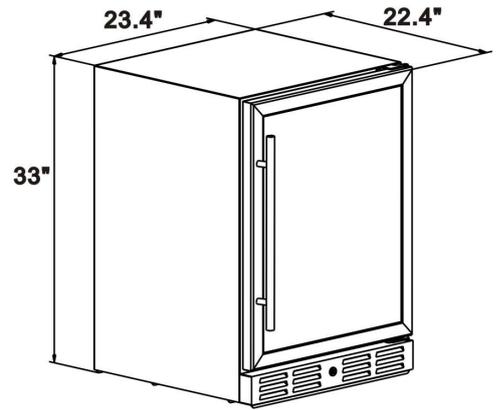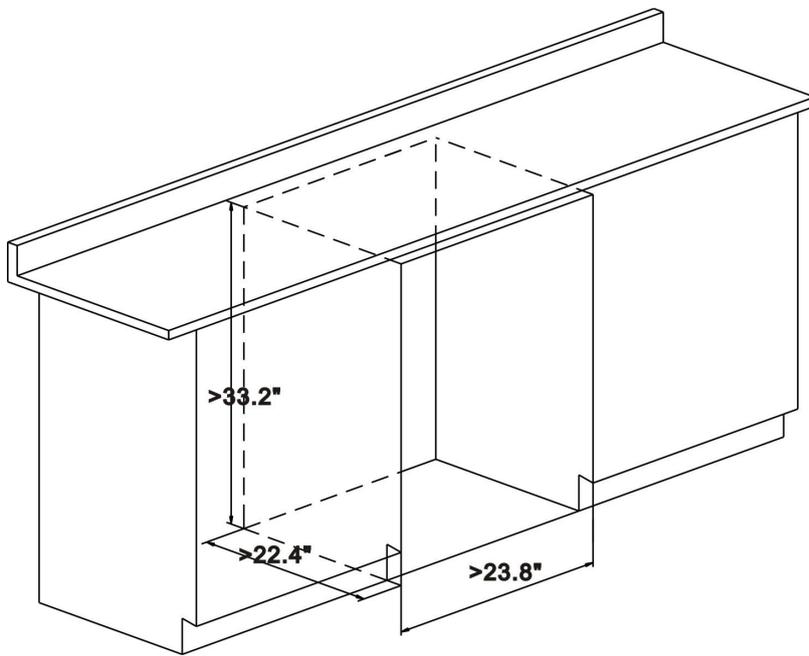





KRC-46DZB & KRC-54SZB

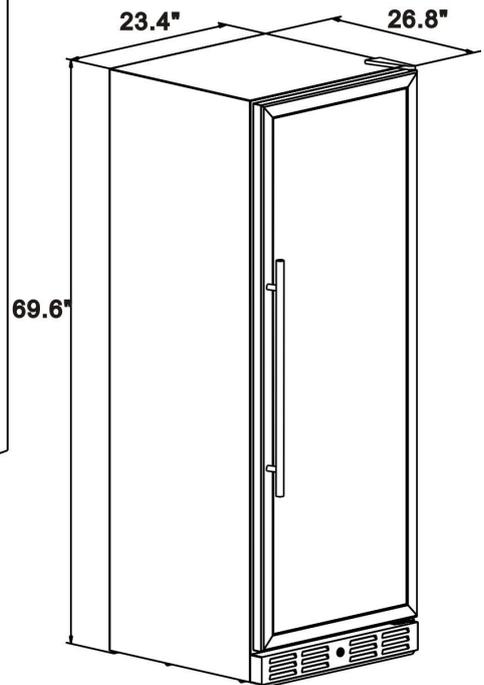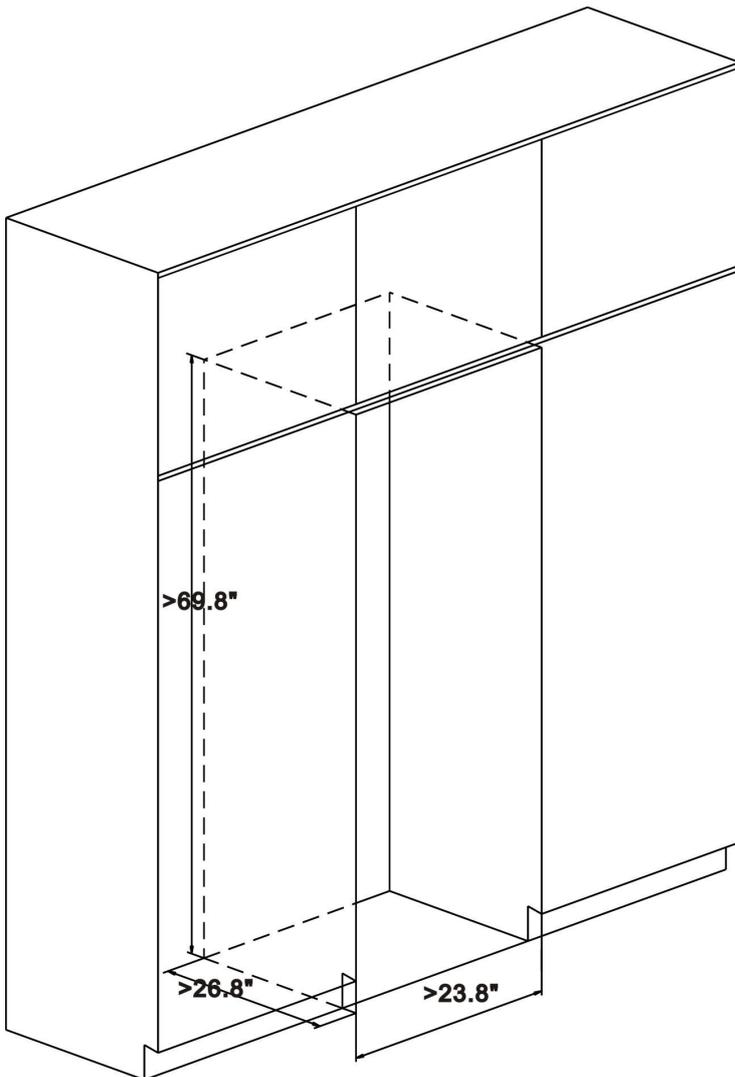




KRC-157DZB

● **Spare parts details:**

   KRC-18SZB & KRC-30SZB & KRC-46DZB & KRC-54SZB:

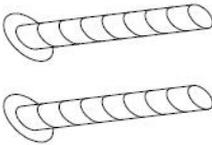Spare parts	Picture	Use
Upper hinge		To switch the door open from right.
Bottom hinge		To switch the door open from right.
Screw *2		For the handle installation.
Gasket *2		For the handle installation.
Key *2		To lock the door.
Big rubber plug *1		To cover the lock hole on the top of door.
Round rubber plug (KRC-18SZB & KRC-30SZB 2pcs, KRC-46DZB 3pcs)		To cover the holes on the left front corner of the body.

  KRC-157DZB:

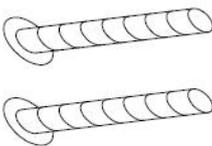
Spare parts	Picture	Use
Bottom hinge		To switch the door to open from right.(The original upper hinge could be applied in swing the door.)
Screw *2		For the handle installation.
Gasket *2		For the handle installation.
Key *2		To lock the door.

Big rubber plug *1		To cover the lock hole on the top of door.
--------------------	--	--

## **Operating Your Wine Cooler**
 
### **The Control Panel:**

#### **KRC-18Szb & KRC-30Szb & KRC-54Szb**



### **How to use the press-buttons on the Display Panel:**

- To control the temperature, press UP or DOWN button. Each press would adjust the temperature by 1°C between 5~18°C or 1°F between 40~66°F.
- To turn on or off the internal LED lighting, press LIGHT button on the right side.
- To switch the temperature display from Celsius Degree to be Fahrenheit Degree or vice versa, press C/F button.

#### **KRC-46Dzb & KRC-157Dzb**



- To control the upper zone temperature, press UP or DOWN button on the left side. Each press would adjust the temperature by 1°C between 5~10°C or 1°F between 40~50°F.
- To control the lower zone temperature, press UP or DOWN button on the right side. Each press would adjust the temperature by 1°C between 10~18°C or 1°F between 50~66°F.
- To turn on or off the internal LED lighting, press LIGHT button on the right side.
- To switch the temperature display from Celsius Degree to be Fahrenheit Degree or vice versa, press C/F button.

## **Care And Maintenance**

### **Cleaning your wine cooler**

- Unplug the wine cooler and remove the bottles.
- Wash the inside with warm water or baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- The outside of wine cooler should be cleaned with mild detergent or warm water.
- Draw out the water box at the bottom, and wash it.

### **Moving your wine cooler**

- Remove all the bottles.
- Securely tape down all loose items inside your wine cooler.
- Turn the leveling legs up to the base to avoid damage.
- Tape the door.
- Be sure the wine cooler stays in the upright position during transportation.

## **Trouble Shootings**

You can solve many common wine cooler problems easily, saving you the cost of a possible service call. Try the suggestion below to see if you can solve the problem before calling the service center.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>
Wine cooler do not operate.	Not plugged in using different voltage. The circuit breaker tripped or a blown fuse.
Wine cooler is not cold enough.	Check the temperature control setting. The door is open too often. The door is not closed completely. The door seal does not seal properly. The wine cooler does not have the correct clearance.
The light does not work.	Main control board does not work. PCB Problem. There is some problem with the plug.
Vibrations.	Check to assure that the wine cooler is leveled.
The wine cooler seems to make to much noise	The wine cooler is not leveled. Check the fan.
The door will not close properly.	The wine cooler is not leveled. The doors were reversed and not properly installed. The seal is weak. The shaves out of position.
LED could not display.	Main control board does not work. PCB Problem. There is some problem with the plug.
LED display error.	Weak quality of display. Temperature point is out off.
Buttons are not functional.	Temperature controller panel is damaged.

# KALAMERA LIMITED WARRANTY

## Full One Year Warranty

### Warranty Terms:

The manufacture warrants to the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of 1 year from the date of original purchase when this major appliance is operated and maintained according to instructions attached to or furnished with the product.

The purchaser must contact the manufacture Customer Service Department and provide a description of the defective part, including digital pictures if requested, with buying channel, serial number, order ID and the original purchase documentation as validation of warranty coverage date.

Once confirmed that your appliance is eligible for the warranty service, Kalamera Customer Service Department will contact you by mail or phone about the maintenance solution. Replacement parts and/or units will be new, re-manufactured or refurbished and is subject to the manufacturer's discretion. Kalamera is not responsible for damage resulting from shipper mishandling or improper packing. Do not return a defective product to the place of purchase. Product received without a return authorization number will be refused.

After receiving the unit, please do not remove, altered original model/serial number, that will influence the after-sale service. Please carefully keep the user manual and warranty card for future reference.

If you need service, first see the "Troubleshooting" section of the User Manual. After checking, you may find additional help by mailing or calling us.

Write down the following information about your product to better help you obtain assistance or service if you ever need. You can find this information on the model and serial number located on the product.

Dealer name \_\_\_\_\_  
Model number \_\_\_\_\_  
Serial number \_\_\_\_\_  
Purchase date \_\_\_\_\_

### Warranty Exclusions:

The warranty will not apply if damage is caused by any of the following:

1. Damage to the product due to misuse, mishandling and abuse.
2. Product not assembled or installed according to manufacturer's instruction.
3. Repairs by unauthorized persons or service centers with unauthorized spare parts.
4. Failure to provide reasonable and necessary maintenance.
5. Improper power supply such as low voltage, defective household wiring or inadequate fuses.
6. Accident, alteration, misuse or abuse of the appliance such as using non-approved accessories, inadequate air circulation in the room or abnormal operating conditions, such as extreme temperatures.
7. Damage in transit or when moving the appliance.
8. Use of force or damage caused by external influences.
9. Store improper things.
10. Normal wear and tear.
11. Cosmetic damage, including scratches, dents, chips, or other damage to the finish of your product, unless such damage results from defects in materials or workmanship and is reported to us within 30 days from the date of purchase.
12. Fire, water damage, theft, war, riot, hostility or acts of God such as hurricanes, floods, etc. In addition consequential damage and incidental damages, such as damage to person or property are not coverable under this warranty.
13. Partially or completely dismantled appliances.

To obtain service or information, please call 866-554-6688 or send email to

[service@kalamera.com](mailto:service@kalamera.com)

Product contents and specifications may change without notice.

Copyright © 2018 Kalamera Products

[www.kalamera.com](http://www.kalamera.com)

