

USER MANUAL

✓ FULL HD 4K/1080P

 


H88 - Mini Body Camera
(No image stabilization)



Video instruction

Scan the "QR" Code to view the Video Manual , which makes H88 easier to setup and use.



Customer Service

Scan "QR" Code enter your question, to realize your 1-year warranty or help you arrange the replacement.

● Shock Indicators

Indicator Code	Condition
Vibration Once	Camera / Wi-Fi Mode ON/OFF Start/Stop recording
Vibration Slow	Wi-Fi Mode on & disconnect
Vibration Stop	Wi-Fi Mode connect successfully

● Product main structure



● LED Indicators

Indicator Code	Condition
BLUE Light Solid	Standby
BLUE Light flashing	Record when not connected to WiFi
BLUE-GREEN Light flashing	Connect to WiFi in standby mode
GREEN Light Solid	Record in WiFi mode
RED Light	Charging light

● Quick Guide

Please check whether the SD card is installed before starting to use.

Long press the power button for 3 seconds to power on the device, product vibrates 1 time, the blue light turns on. In standby mode (**BLUE light solid**):

→ Press the video button once to start recording, and press the video button again to stop recording. (The **BLUE light flashes slowly during recording**)

→ When the camera is in **WIFI mode**, click the camera button on the phone once to take a photo.

Press and hold the power button to turn off the device.
The LED light goes out.

Special Attention

In standby mode:

→ (with card), the **blue** light is always on for 3 minutes without any operation, and the camera automatically shuts down.

→ (without card), the **blue** light flashes, the motor vibrates once every 3 seconds, and the camera automatically shuts down after 3 minutes.

After turning on **WiFi**, the **Blue-Green** light flashes, the motor vibrates once every 3 seconds, and the camera automatically shuts down after 3 minutes.

● Mobile App installation


→ **1080P H88** Camera WiFi connection

Step 1. Scan the QR code below to install "Sports DV" on Google Play and Apple Store.

Step 2. After camera ON, **press the power button twice quickly to switch on WIFI mode**. Ensure the **Blue-Green** LED keep flashing, which means Wi-Fi Mode has been turned on.

Step 3. Open the App, enter the mobile phone WiFi setting to connect the WiFi name beginning of "CAMH88_XXXX", the password is "12345678".

Step 4. After successfully connecting to WIFI, the **Green** LED will display by keep bright. Open the APP and click the camera icon in the middle to enter the actual camera operation.(When you need to turn off the Wi-Fi mode, press the button twice to turn it off manually.)

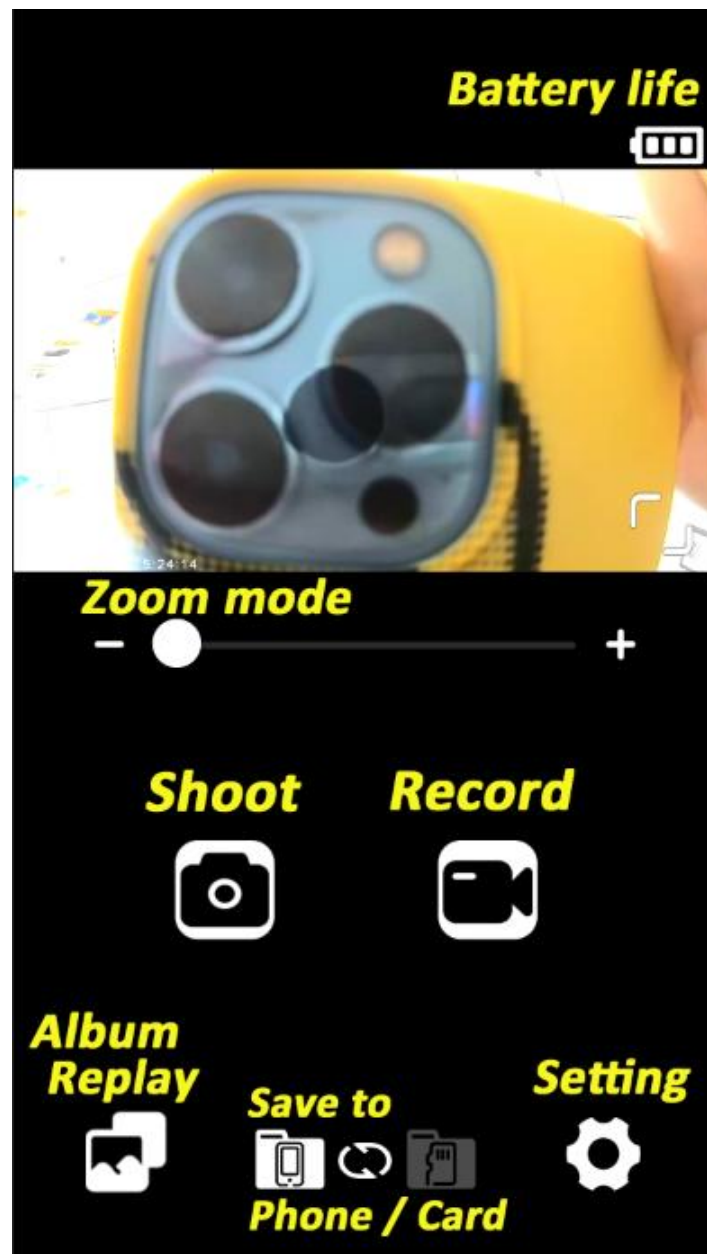

Note:

When choosing save to phone:

1.The recordings will only be saved into phone storage, that won't save to the card as a backup.

2.The default pixel is 720p, but the default pixel is 1080p when you choose "save to the card".

→ **4K H88** **Camera WiFi connection**

> 1. Download and install Viidure APP.

a. IOS is downloaded from the Apple Store by searching Viidure.

b. For foreign android systems, searching Viidure on GooglePlay to download.


> 2. In standby state, consecutively **press the WIFI button twice, it switches to WIFI mode**. The **Blue-Green** light flashes quickly, waiting for connection.

The camera will automatically shut down without connecting within 3 minutes.

3. Open the App, enter the mobile phone WiFi setting to connect the WiFi name beginning of "H88", the password is "12345678".


4. After connecting the WiFi successfully, the **Green**

light is always on. Click the camera icon in the middle of APP and enter the actual operation of the camera.

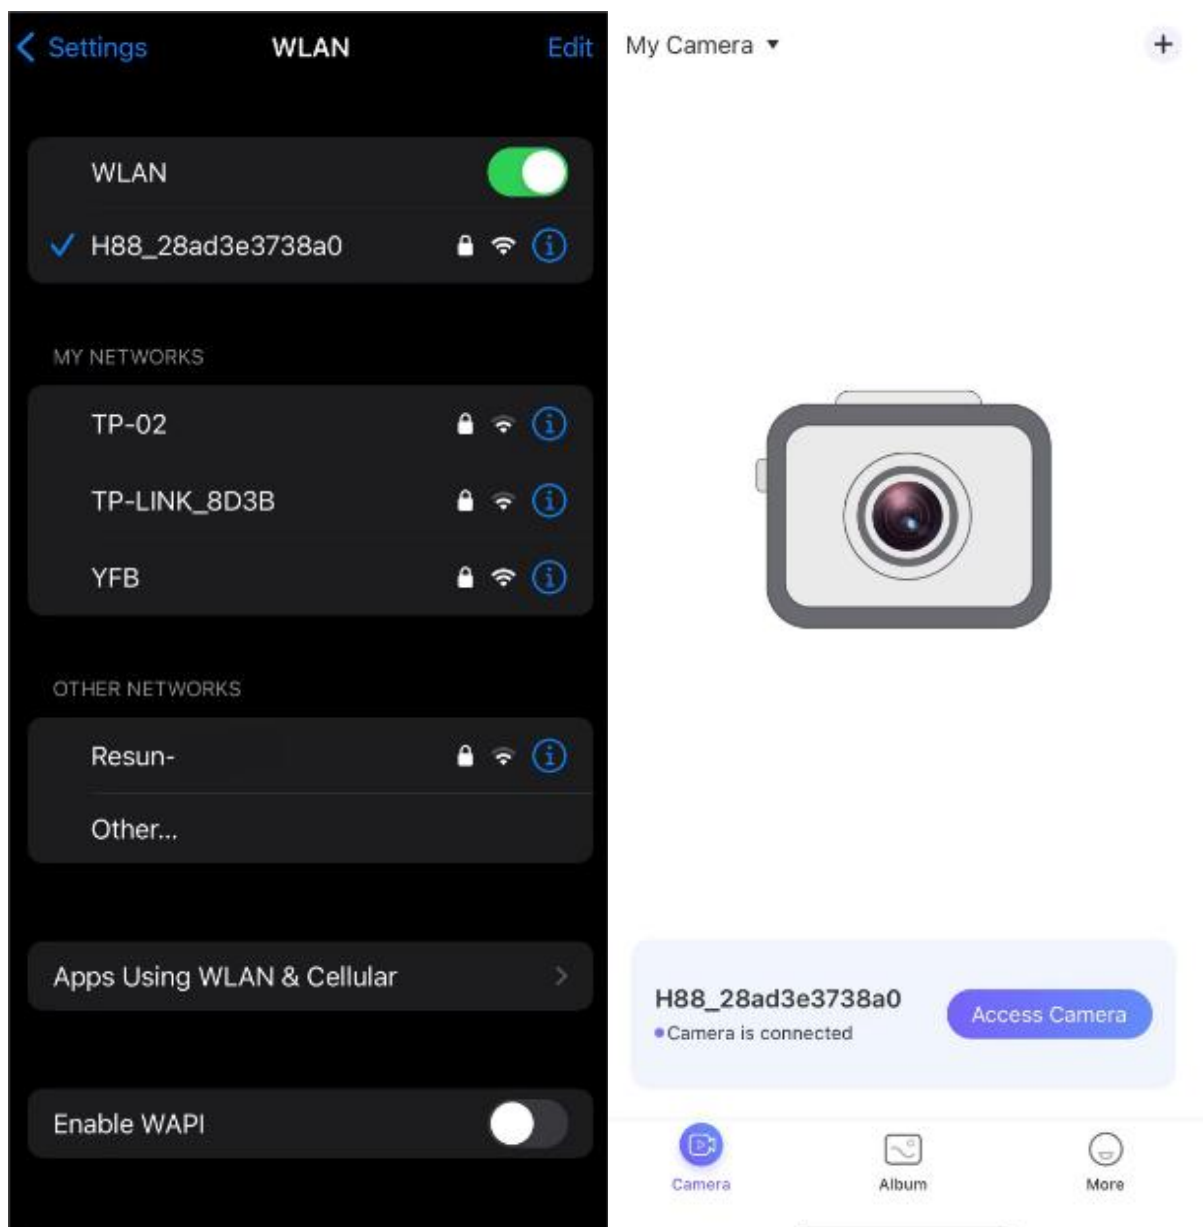

A. H88 WiFi Connection Tips:

(ignore the name of the Wi-Fi & the name of the App's name)

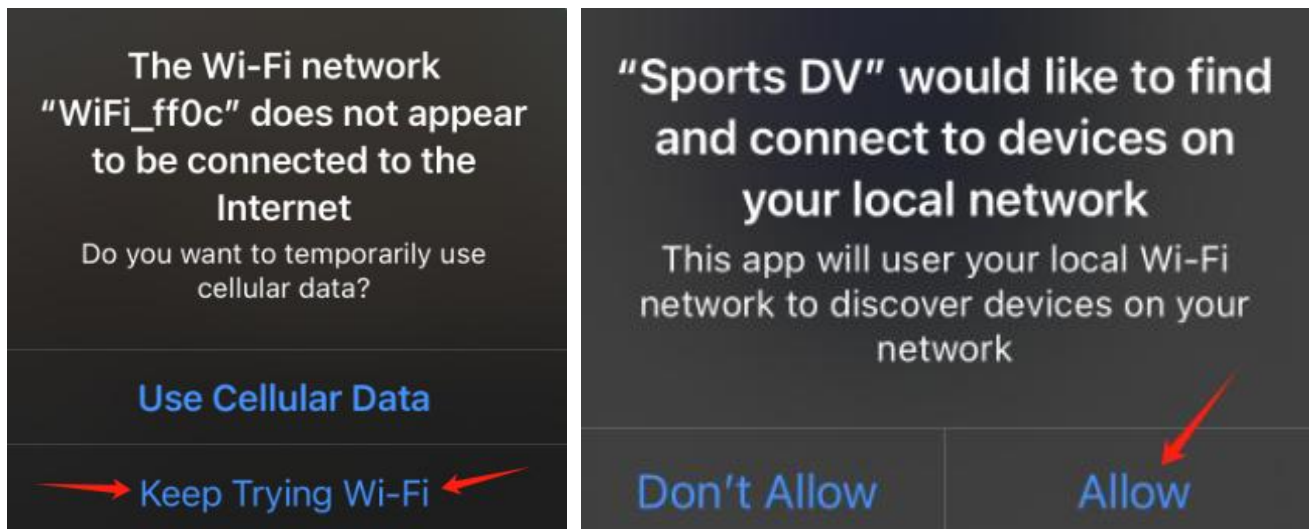

When your phone frequently disconnects, please follow the steps below:

1) It is recommended that you re-download the app and choose to allow the app to use the Wi-Fi, otherwise it will cause the app to be unable to connect to the Internet [wifi]

2) When you turn on the camera's hot-spot mode and connect to its Wi-Fi, please choose to still connect to this Wi-Fi without Internet, otherwise the connection will keep stopping because you did not provide permission to stay connected.

B.Important Settings on WiFi App:

1) Photo Taking (need to connect to phone first)

When the camera is in WIFI mode, tap the photo

button on the mobile phone APP once to capture a photo.

2) Loop Recording:(Adjust In App setting)

1080p Version: The camera's default video length is 3mins, can be adjust to 3/5/10 minutes.(Cannot be turned off)

4K Version: The camera's default video length is 3mins, can be adjust to 1-9 minutes.(Cannot be turned off)

3) Is that state normal in Wi-Fi mode?



Normal, Please don't worry, just still follow our steps to do, that won't affect the connection, please ignore it.

●Charging & Data Transfer

→ Connect the provided cable with a 5V 1A/2A adapter or power bank to charge the device. (The **RED** light turn

on & **RED** light turn off when fully charged.)

→ Connect the provided cable with Computer to read the data (A new flash-disk will show . Open the disk to view the files). You can play the video files in the MICRO SD and delete unnecessary files.

→ Remove the SD card to use it as a computer camera.

Tips - Supports recording while charging: Connect to power or car charger, the camera will automatically turn on, and short press the record button to start recording.

Note - When recording while charging, please shut down and save the file before exiting USB, otherwise the video file will not be saved.

● **Timestamp setting**

The default time display of this product can be changed as needed in the following ways:

→ If the user needs to **remove the time display** on the camera, connect the camera to the computer, open the root directory, there is a time document file, edit in the document and **change "Y" to "N"**:

Format: Year.Month.Day Hour:Minute:Second N 3

(eg: 2024-01-01 23:59:59 N 3)

Save this document and exit, remove the time modification, the next time the camera is started, the product has no time display.

→ If the user needs to **modify the time displayed** on the camera, connect the camera to the computer, open the root directory, there is a time document file, edit it in the document:

Format: Year.Month.Day Hour:Minute:Second Y 3

(eg: 2024-01-01 23:59:59 Y 3)

Save this file and exit, the time modification is completed, the next time the camera is started, the product displays the specified time.

Note: In the format, "Y" means time display, "N" means no time display, "**3**" means **loop recording and save a file every 3 minutes**.

More reminders about loop recording please view the end of the manual.




● Reset

When the product is crashed and can't work normally, please short press the reset button to power off.

● Install SD card

- 1.Insert the Micro SD card into the card slot as indicated until it's fixed. (Please insert the card in the right direction into the device to avoid damage.)
- 2.Press down the Micro SD card and wait until it pops out.then remove the card.
- 3.Lack of the card: The cam shut off after the **BLUE LED** blinks for 3 minutes.

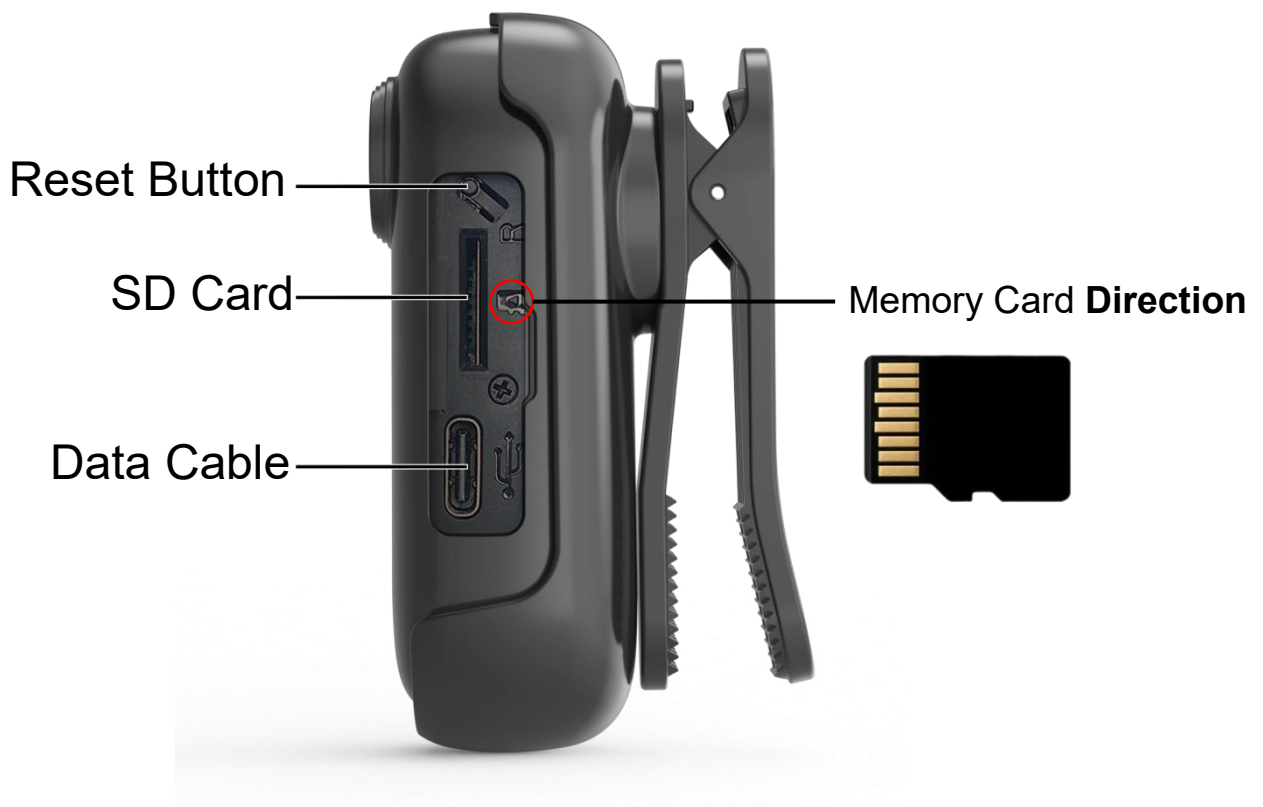

●FAQ

1. How could i view my video & audio & image ?

> 1st way , Playback on the phone by Wi-Fi mode.

> 2nd way , Playback on the computer

(Directly connect the camera with the cable we equipped/ take out the card use the card reader we equipped)

2. Does this camera have image stabilization?

> No, it doesn't.

3. What is the battery life of this camera?

> 1080 Version - 180 minutes

> 4K Version - 90 minutes

Support Charging while recording.