

 
 
5 YEAR
WARRANTY

Bedsure
Get cozy

HEATED THROW USER MANUAL

MODEL #BS-LVOA

PRODUCTS AND ACCESSORIES

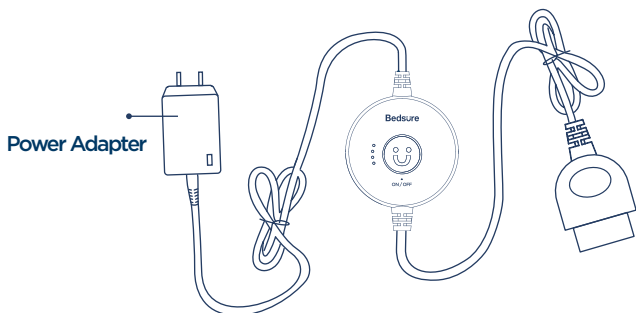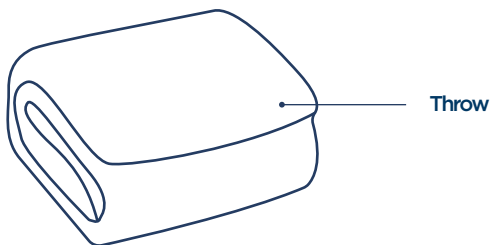

PRODUCT SPECIFICATIONS

Model	BS-LV0A
Name	Heating Blanket - Tie Dyed
Input Voltage	DC 24V
Rated Power	65W Max
Time Setting	1 Hour/2 Hours/3 Hours/4 Hours
Materials	100% Polyester
Product Dimensions	127cmX152cm/50X60 inches

 
IMPORTANT SAFETY INSTRUCTIONS -DO NOT DESTROY

- a) Be sure to read carefully the accompanying instruction booklet before using this bedding” .
- b) Do not use this bedding with an infant, an immobile person, or anyone insensitive to heat, such as a person with poor blood circulation” .
- c) Do not tuck in the wired area of this bedding” .
- d) Do not route electrical cords between the mattress and box spring. Do not allow the cords to be pinched” .
- e) Keep the control away from drafty areas that may become damp or wet such as an open window.

- f) Do not use pins – They may damage the electric wiring”.
- g) Be sure that this bedding is used on an alternating-current supply circuit of the proper voltage”.
- h) Turn off or unplug when not in use”.
- i) Excessive heating may result from folding bedding, other than a mattress, when in actual use”.
- j) If improper operation of this bedding is observed, discontinue its use immediately and consult the manufacturer or the dealer regarding its repair”.
- k) “For throw blankets only: Do not use with rocking chairs, recliners, chairs with casters or wheels, or other furniture subject to movement.”
- l) “Do not tuck the blanket or supply cord in a sofa or other furniture. All portions of the blanket or controller should be visible at all times.
- m) “Wrapping of cord around the controller may damage the cord. Loop loosely when storing.”

SET UP GUIDE FOR HEATED THROW

BEFORE EACH USE, ALWAYS INSPECT THE PRODUCT TO ENSURE THAT THERE IS NO DAMAGE TO THE POWER CORD, THE CONTROLLER, OR THE THROW.

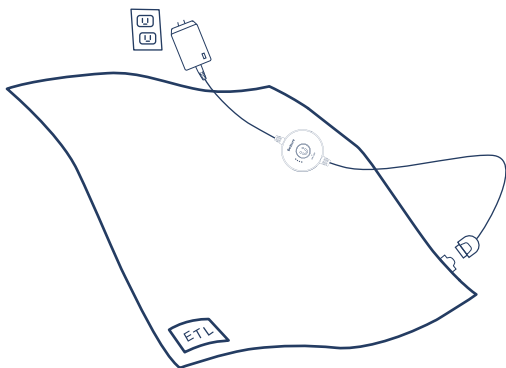

AUTO-SHUT-OFF FEATURE

The heated throw will Auto-shut-off in 4Hours. To reset the controller after Auto-shut-off, press the Heat Control Button until the desired setting is reached.


A Friendly Reminder

1. After using the heated throw, remember to turn off the controller. Please disconnect all cords if you do not plan on using the product for an extended period of time.
2. Keep the controller in a ventilated area, and do not cover it with any objects to prevent overheating.
3. The timer duration range is 4 settings: 1H-2H-3H-4H
4. The heat level range is 4 settings.

HOWTO USE CONTROLLER

CAUTION:

Never PLUG the adapter before connect the cord.

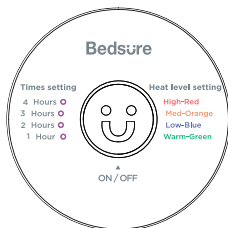

Instructions

1. Please connect the controller to the electric blanket coupler first, then connect to the power. The controller's halo will keep lighting for a few seconds then turn off, it means the product is proceeding self-check and it's OK.
2. ON/OFF button is heating level button and time setting button.
3. Press the button in the middle of the controller, the product will default to the warm heating level when turned on, then each time press the button, a heating level (Warm-Low-Med-High) will be added. After no operation for 20 seconds, the light on the controller(except timing light) will automatically go out.
4. Press and hold the middle button of the controller for 2 seconds to switch to the time setting mode. The product defaults to 4H time setting when turned on. Each time you press the button, it changes a timing level(1H-2H-3H-4H). if there is no operation after 2 seconds, the timing will be automatically confirmed, and the timing light will always be on until the timing expires.
5. When the timer expires, the heating level light goes out and the time setting light flashes. If you continue to use it, please press the ON/OFF button again to enter the heating working state.

Anomaly Alert

1. If the controller is connected to the power line port, and then connected to the blanket coupler will cause the controller lights flashing alarm. At this time, please long press the ON/OFF button until the end of the flashing.
2. Please connect the controller to the blanket coupler first and then turn on the power.

TROUBLE SHOOTING

NUMBER	PROBLEM	SOLUTION
1	Not Heat / No Power	-Verify if AC outlet is functional. -Check for physical damage to the cord, controller or throw. If there is damage, discontinue use. -If failure continues, discontinue use.
2	'High' Heat Setting Indicator is Flashing (0.5s on,0.5s off)	The 'High' Heat Setting Indicator light will start flashing when a fault is detected. Follow these steps to reset the controller: 1 - Unplug the controller from the AC outlet 2 - Verify that the AC outlet is functional and plug the controller into the AC outlet again. 3 - Press the Heat Control Button until the desired setting is reached.
3	Throw/Blanket Has a Hot Spot	Check to make sure that the throw/blanket is not folded, bunched, crushed, or overlapping in any areas.

SYMBOL EXPLANATION

	Read all the instructions.		Gentle wash cycle in water at 30°C.
	Do not puncture.		Do not bleach.
	Do not use if folded or creased.		Do not tumble dry.
	Not suitable for very young children (0-3 years).		Do not iron.
	Dispose of the packing in an eco-friendly manner.		Do not dry clean.
	WARNING: Warning of risks of injury or health hazards.		
	CAUTION: Safety information about possible damage to appliance / accessories.		

Cleaning solvents may have a deteriorating effect on the insulation of the heating element.

CARE AND CLEANING INSTRUCTIONS

CAUTION: Do not dry clean. Do not use bleach. Do not use wringer. Do not iron. Do not immerse control or Cord in water or other liquids. Do not use mothballs or sprays of any kind. Do not reconnect the heated product until it is completely dry.

Before Washing or Storing Your Heated Product

1. Disconnect power cord from wall BEFORE detaching controller cord from the heated throw.
2. Ensure that no cord is still connected and none of the wires have worn through the fabric.
3. Carefully follow all washing instructions or your heated throw may shrink and possibly cause a fire hazard. Store as any other blanket, folded in a dry place.

Washing Instructions

1. Machine wash in cold water; gentle cycle or hand wash.
Caution: Do not use commercial dryers or the dryers at your local laundromat. They got too hot and would damage the wiring of the heated product.
2. Tumble dry low, delicate cycle. Ensure that your heated product has enough room to tumble freely.
3. Remove the heated product while still damp and gently stretch to its original size.
4. Drape the heated product over a clothesline or a shower rod. DO NOT use clothes pins.
5. Heated product must be COMPLETELY dry before reconnecting the power plug or control plug.

Hang to Dry

1. While still damp, gently stretch the heated product back to its original size.
2. Drape the heated product over a clothes line or hang over a shower rod. DO NOT use clothespins.
3. Heated product must be COMPLETELY dry before reconnecting the power plug or control plug.

SAFETY ESSENTIALS: CARE AND MAINTENANCE

- Always turn off the electric current when the heated product is not in use, either by turning off the controller or unplugging the power supply from the wall socket
- Wrapping of the cord around the controllers may damage the cord. Loop loosely when storing.
- Never iron your heated product
- Never use dry cleaning fluid on the heated product, cleaning solvents may damage the wiring insulation.

FCC Notification: This equipment has been tested and found comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- Consult the dealer or an experienced radio/TV technician for help

In accordance with the rules and regulations of the FCC, changes or modifications to this equipment, not expressly approved in writing by the party responsible for compliance could void the user* s authority to operate this equipment

WARRANTY

All heated products carry a five-year, limited warranty. The limited warranty is valid only for, and not transferable from, the original retail purchaser or gift recipient. No limited warranty service is available without proof of purchase or valid gift receipt from an authorized retailer.

Bedshe International Business Co., Ltd (Warrantor), as its option, will replace this product or any component of the product found to be defective in materials or workmanship during the limited warranty period, subject to the exclusions and limitations set forth herein.

Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive limited warranty.

This limited warranty is valid for the original retail purchase or gift recipient from the date of initial purchase and is not transferable to any subsequent purchaser. Proof of purchase is required to obtain warranty performance. Keep the original sales receipt. Dealers, service centers, retail stores and online retailers do not have the right to alter, modify, or any way change the terms and conditions of this limited warranty.

This limited warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use, misuse, or abuse of the product; accident; neglect; use on improper voltage or current; use contrary to the operating instructions; disassembly; parts or components not supplied by the Warrantor; parts or components that have been modified; or repairs or alterations contrary to the operating instructions. Further, the limited warranty does not cover damage caused by Acts of God or Nature, such as fire, flood, hurricanes and tornadoes.

WARRANTOR SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE LIMITED WARRANTY. THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE SET FORTH HEREIN. SOME PROVINCES, STATES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIAL LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM PROVINCE TO PROVINCE, STATE TO STATE OR JURISDICTION TO JURISDICTION.

Warrantor:

Bedshe International Business Co. Ltd

ADD: 20651 Golden Springs Dr, #27Z Walnut, CA91789, USA



Bedsure
Get cozy

尺寸:10*15cm



panton2955c
C:100 M:86 Y:52 K13