

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.
KEEP AWAY FROM WATER.**

DANGER - Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug it immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or any other liquid.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap line cord around appliance.**
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with this appliance.
11. This curling iron and clip are hot when in use. Do not let eyes or bare skin touch heated surfaces.
12. **Do not place the heated curling iron directly on any surface while it is hot or plugged in. Use the built-in stand.**

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This curling appliance is intended for professional use. Use on Alternating Current (60 Hz) only. Standard curling appliances are designed to operate at 120 volts AC. This appliance has a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT NOTICE

These styling appliances have a special protective application and the barrel will be extremely hot when the temperature regulator dial is set at its highest setting. Extra care should be taken when using. This product may emit smoke during initial use. The smoke is not harmful and will quickly disappear. It is only the protective application on the heating element being burned off.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

FOR TOUSLED HAIR

Create soft, tousled waves by curling each hair section in a random direction. Then turn head upside down, shake, and gently scrunch hair with fingers. Bring head back to position and repeat for fullest volume.

FOR WIDE WAVES

Pick up a section of hair and place the curling iron under it close to the scalp, making half a turn downward. Remove the curling iron. Working with the same hair section, start where you left off and place the curling iron on top of the hair, curling

up half a turn. Proceed down the same hair section, alternating the curl upward and downward. Repeat procedure with remaining sections of hair. For best results, hair should be about 6-8 inches long.

ORCELAIN CERAMIC

Our Porcelain Ceramic curling iron has many added benefits. The Porcelain Ceramic barrel technology provides increased heat distribution, eliminating the damaging hot spots found with other irons. When introduced to heat, ceramic is known to emit negative ions. Assisting in the breakdown of bacteria buildup, the ions enhance and renew the vitality of the hair.

CURLING IRON BASICS

- Plug the appliance into a standard electrical outlet (120V).
- Position the temperature regulator dial to the setting that is appropriate for your hair type. You can use the chart outlined below as a reference. The iron will heat up very quickly.

TEMPERATURE SETTINGS

HAIR TYPE
230°F - 280°F
281°F - 310°F
311°F - 365°F
366°F - 400°F
401°F - 430°F

HAIR TYPE

- Very Fine Hair
- Easy to Curl Hair
- Textured Hair
- Curly Hair
- Very Thick Hair

- Section hair evenly, and comb each section before winding. Place curling iron midway up the hair section; then spread hair evenly between spoon and barrel. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl.
- Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold in place for 8-12 seconds. For looser, free-flowing curls, roll more hair. For tighter, bouncier curls, roll less hair.
- To remove curling iron, unwind the hair. To "set" the curl, do not comb or brush hair until it cools.
- Some experimenting is necessary when first using the curling iron, or when changing to a different hairstyle.

TAPERED BARREL BASICS

Models BP100TB and BP75TB are designed with a unique barrel that tapers from larger at the clamp to smaller at the tip. This innovative design allows you to create tighter curls near the root for added volume, and looser curls near the ends for a beautiful cascading curl.


NOTICE

THIS PRODUCT IS EQUIPPED WITH AN INSTANT HEAT CIRCUITRY. STATE-OF-THE-ART TECHNOLOGY ALLOWS THE HEATER TO REACH THE OPERATING TEMPERATURE IN LESS THAN ONE MINUTE.

DO NOT LEAVE PRODUCT ON OR PLUGGED IN WHILE NOT IN USE. UNIT WILL BURN OUT IF POWER IS KEPT ON FOR AN EXTENDED PERIOD OF TIME. WARRANTY WILL BE VOIDED.


TURN UNIT OFF AND UNPLUG WHEN NOT IN USE.

GET TO KNOW YOUR PROFESSIONAL CURLING IRON

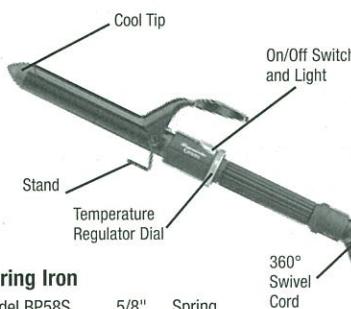

Spring Iron

Model BP58S	5/8"	Spring
Model BP75S	3/4"	Spring
Model BP100S	1"	Spring
Model BP125S	1-1/4"	Spring
Model BP150S	1-1/2"	Spring
Model BP100TB	1" - 1-1/2"	Tapered Barrel
Model BP75TB	3/4" - 3/8"	Tapered Barrel

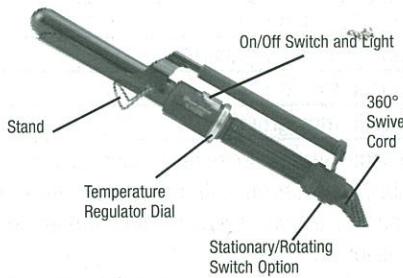

Marcel Iron

Model BP50M	1/2"	Marcel
Model BP58M	5/8"	Marcel
Model BP75M	3/4"	Marcel
Model BP100M	1"	Marcel
Model BP125M	1-1/4"	Marcel

USER MAINTENANCE

Your curling iron is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the curling iron from the power source, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the curling iron, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling iron. Damage will occur at the high flex point of entry into the curling iron, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your curling iron is easy to store. Allow curling iron to cool; then simply put back in the box, and store out of reach of children in safe, dry location. Do not jerk or strain cord at plug connections.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination, but did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES.**

LIMITED THREE YEAR WARRANTY

BabylissPro will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in any workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-326-6247 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL BABYLISSPRO BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR

BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

SERVICE CENTER

BabylissPro

Service Department

7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2016 BabylissPro

15BA019037

IB-14209