

FAQ



How to achieve a better mixing effect?

Switch between mixing and pulse modes to achieve the best mixing results.



Blend Mode

Blend Mode: Click once power button to start blending and green light is on.



Pulse Mode

Pulse Mode: Double-click power button to enter pulse mode and orange light is on.

FAQ

Q Is this blender waterproof?

The base is removable and waterproof. It can be easily removed for cleaning without worrying about water entering through the charging port and damaging the battery.



Q How many glasses of juice can you make on one charge?



≈ 20 cups



The blender can produce 15-20 cups of juice with a full battery.

FAQ

Q When does the blender fail to start properly?

Screw the cup onto the blender base until the arrow is aligned with the on-off switch and the green light is on. Then the blender can work properly.



FAQ

Q How do I clean the blender?

The cup can be washed in the dishwasher, but do not put the base in the dishwasher together, and do not put the blender in the microwave.



NOTICES

If red and green lights flash alternately, it means the cup body is not tightened, and you need screw the cup onto the blender base again to make sure the arrow is aligned with the on-off switch.



When the light of the base turns red, it means low battery and the blender needs to be charged.

NOTICES



If the lights flashes for 8 seconds, it means the ingredients are too large. You need to cut the ingredients into small pieces or switch to the pulse mode.

If the cup starts to leak, it is caused by improper placement of the sealing ring. Please reinstall the sealing ring.



NOTICES

Check Battery Level

- 1%- 17%: no lights
- 18%-33% : 2 green lights on
- 34%-50% : 4 green lights on
- 51%-67% : 6 green lights on
- 68%-83% : 8 green lights on
- 84%-99% : 10 green lights on
- Fully charged, all green lights on, red light off



SAFETY PRECAUTION

Please read and follow these instructions

When using appliances, you should always follow basic precautions to reduce the risk of fire, electric shock, or personal injury, including the following.

- ❶ DO NOT remove the lid or add in something rigid in your blender when it is blending.
- ❷ DO NOT submerge the base into water to prevent base elements from damaging and make sure it is off before cleaning.
- ❸ DO NOT disinfect your blender in microwave or hot water above 80°C.
- ❹ DO NOT put your blender in the freezer.
- ❺ DO NOT clean your blender with any kind of metallic spiral ball to prevent parts from scratching or damaging.

SAFETY PRECAUTION

- ❸ DO NOT clean your blender with a dishwasher machine.
- ❹ DO NOT charge your blender when it is wet.
- ❺ DO NOT repair or disassemble it by yourself, otherwise your warranty will be void. If malfunction occurred, kindly contact us.
- ❻ When charging, please use a standard 5v 1A/2A charger.
- ❼ DO not place the product near places with high temperature and high heat.
- ❽ Please unplug the power supply in time after charging, and do not charge for a long time.
- ❾ If the product is seriously hot, please stop using it.

SAFETY PRECAUTION

-  13 Keep away from flammable and explosive products.
-  14 Use this blender only as described in this manual. Any other use not recommended by the manufacturer may result in fire, electric shock or personal injury.