




Baby Bouncer

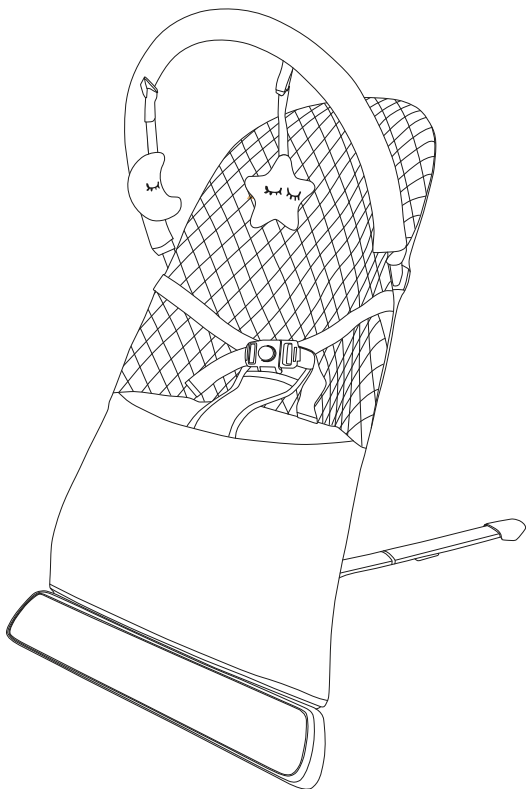

Instruction Manual

IMPORTANT SAFETY INFORMATION : Read all instructions before use of the infant bouncer seat. Keep instructions for future reference.

- **NEVER** leave baby unattended.
- Do not use the bouncer once your child can sit unaided.
- Child's activity may move product.

! WARNING:

FALL HAZARD: Babies have suffered skull fractures falling while in and from bouncers.

- Use bouncer **ONLY** on floor.
- **NEVER** lift or carry baby in bouncer.

SUFFOCATION HAZARD: Babies have suffocated when bouncers tipped over on soft surfaces and/or when bouncers have been used as a sleep product.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

To prevent falls and suffocation:

- Always use restraints. Adjust to fit snugly.
- **STOP** using bouncer when baby starts trying to sit up or has reached 19.8 lb., whichever comes first.

To prevent injury:

- **NEVER** adjust recline position while baby is in bouncer.
- Always check that recline adjustment is locked **BEFORE** each use.
- Do not use this infant bouncer seat if it is damaged or broken.
- **NEVER** use toy bar as a handle.

! WARNING:


AMPUTATION HAZARD: Bouncer can fold or collapse if lock is not fully engaged. Moving parts can amputate child's fingers.

- Keep fingers away from moving parts.
- Completely unfold bouncer and fully engage locks before allowing child to sit in bouncer.
- Never allow children to fold or unfold bouncer.


⚠ WARNING:

- This product should be fully assembled prior to use. Adult assembly required.
- To avoid injury, do not make adjustments to the product's position, including for storage with children present.
- This bouncer is not a toy, do not allow children to play with it.
- To avoid injury to infant's hearing, it is recommended to keep the volume setting low.
- Keep product away from fire.
- Do not attempt to seat more than one child in product at a time.
- Do not use any parts or components that are not supplied by the company. Contact Dr. Talbot's for replacement parts and instructions.
- Do not attempt to modify product. Contact Dr. Talbot's for service and repair.
- Never attach cords or strings to product as it can cause entanglement or strangulation.
- Inspect product before each use. Discontinue use at first sign of weakness or damage.
- Small parts can be inhaled or swallowed. In addition, the cable, due to its length, may result in provoking strangulation or asphyxiation. Do not leave the product alone with a small child, a physically challenged individual, or individual with learning difficulties.

COMPONENTS:

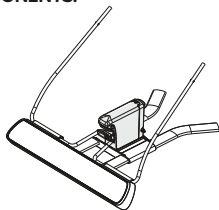


Base frame with sound unit
& reclining mechanism x 1

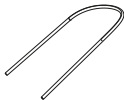


Backrest frame x 1



Toy bar x 1

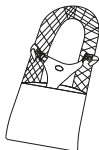

Seat cover x 1

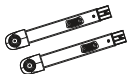

Legs x 2


1. ASSEMBLY

WARNING: Adult assembly required. Product contains small parts in unassembled state.

Tools required: Phillips head screwdriver.


1. Insert the legs into the base frame. The clips on the base frame will pop when engaged (Fig. 1).

Fig. 1

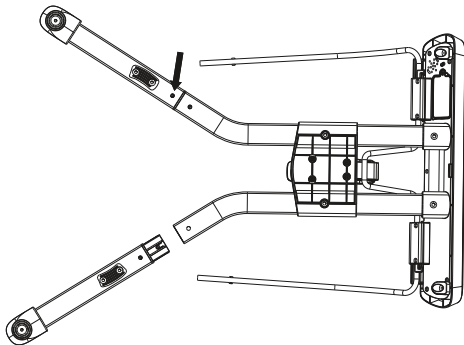


2. After the base frame is assembled (Fig. 2), press down the top locking tab located at the back of the reclining mechanism. Hold down and pull the pullable locking tab located below the top locking tab to release the recline mechanism. Lift lower part of the base frame to open the base frame.

Fig. 2

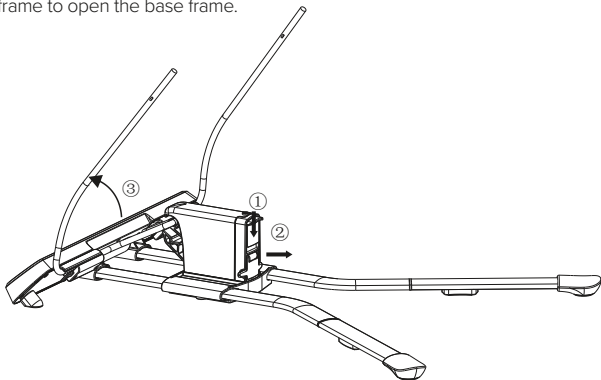

3. **Backrest installation:** slide the upper portion of the backrest frame over the lower portion of the base frame that is attached to the sound unit (Fig. 3).

Fig. 3

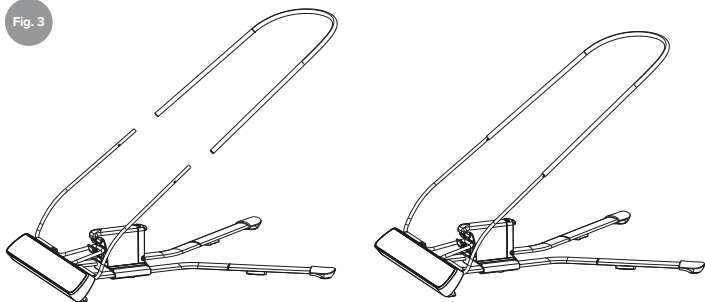

4. Install seat cover by gently pulling the seat cover down from the top of the backrest frame (Fig. 4) until it is flush against the base frame. Secure the elastic belt at the bottom of the seat cover to the hooks on the sound unit (Fig. 5).

Fig. 4




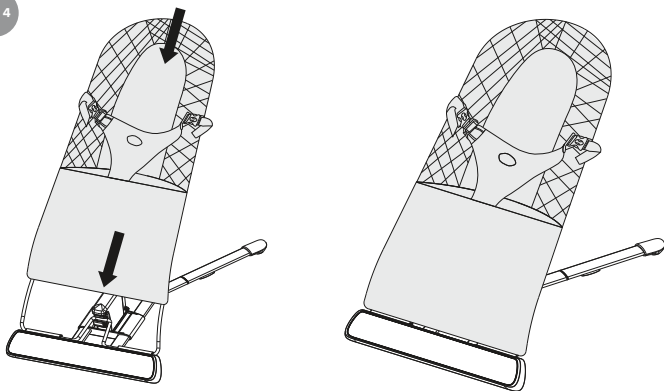


Fig. 5

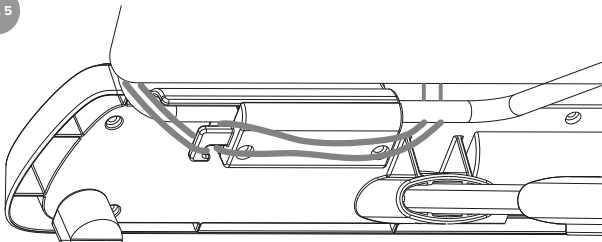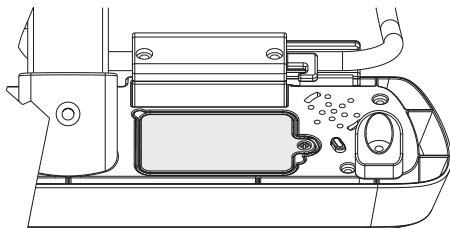

5. Open the battery cover (Fig. 6) and install two AA batteries with the correct polarity in the battery box. Close the battery cover and secure the cover with screws.

Fig. 6

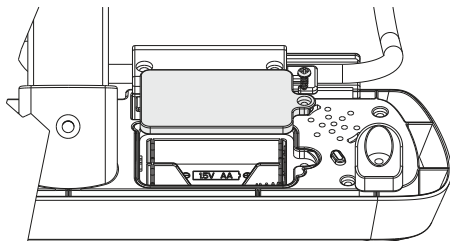

2. HOW TO USE

WARNING: To avoid injury, always check all parts are securely attached and in place before using.

This product is designed with two reclining positions and one storage position.

NOTE: Please take the child out of the bouncer before adjusting the bouncer.

2.1 Selecting a position:

- **Middle position:**

Press down the top locking tab and pull out the pullable locking tab (Fig. 7). Lift the backrest frame and release the pullable locking tab.

- **Highest position:**

To move to the highest position, place foot one of the legs and lift seat upward (Fig. 8).

Fig. 7



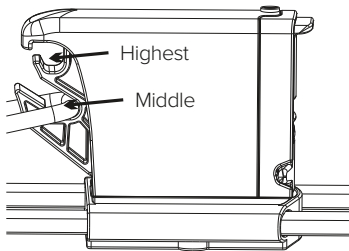



Fig. 8

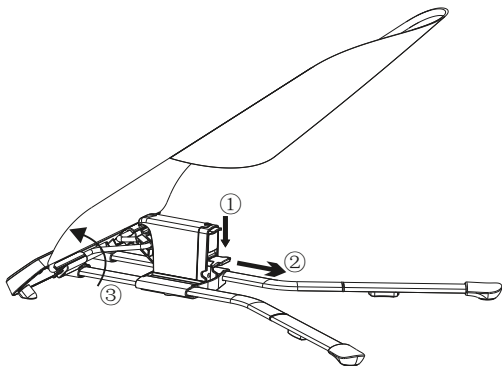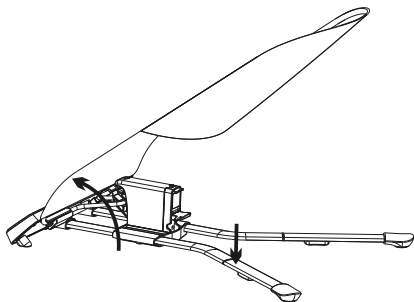

• **Product storage:**

Press down the top locking tab and pull out the pullable locking tab (Fig. 9). After putting down the backrest release the pullable locking tab and store until next use.

Fig. 9

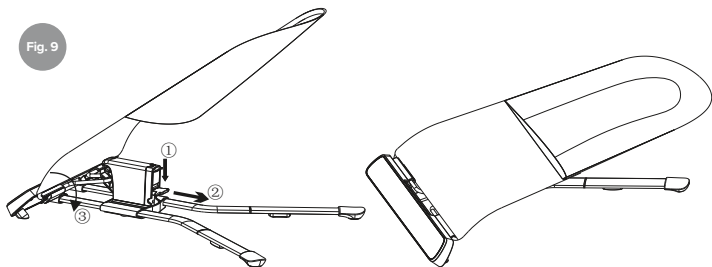


Recommended maximum weight for each position:

- Highest position is 19.8 lb (9 kg)
- Middle position is 13.2 lb (6 kg)

2.2 To attach the toy bar: Snap the toy bar to both sides of the upper backrest frame (Fig. 10). **CAUTION: NEVER** use toy bar as a handle.

Fig. 10

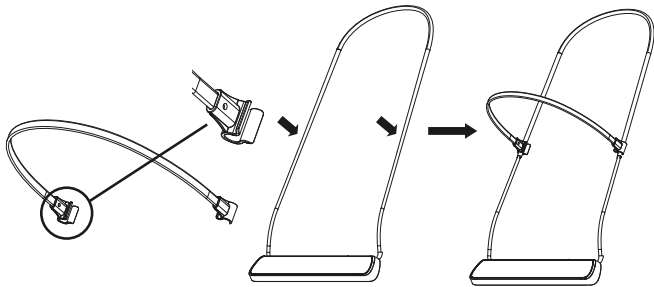

2.3 Using the safety belt: Unbuckle the safety belt and place baby in the seat. Fasten the safety belt buckle (Fig. 11). Adjust to fit snugly (Fig. 12).

Fig. 11



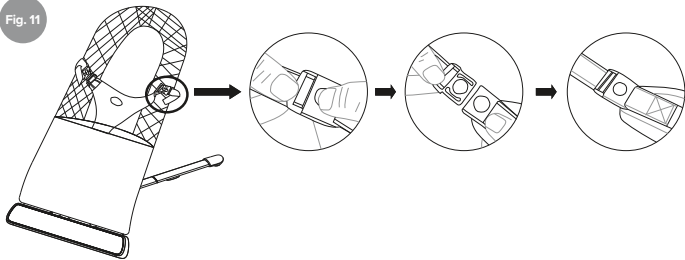


Fig. 12

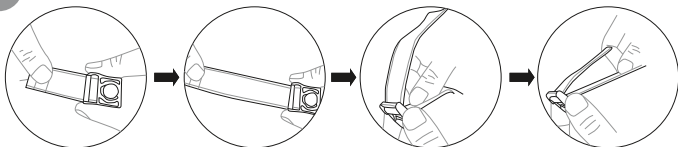

2.4 Using the control panel:

Fig. 13

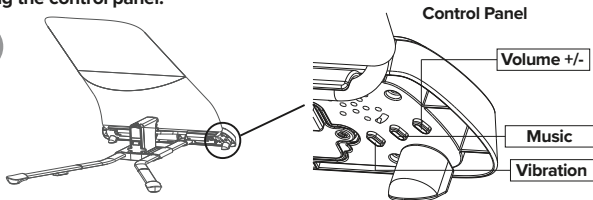

Volume adjustment: Press the button to cycle through 5 volume options. Press and hold to turn the music off. **NOTE:** When turned on, the volume will default to the medium volume level.

Music selection: Press to play music. Press again to cycle through 9 sound options (5 songs & 4 nature sounds). Press and hold to turn the music off.

Vibration: Press to turn on vibration. Press and hold to turn the vibration off.

NOTE: Bouncer will stop vibration when music is turned off. Simply press button to turn on vibration again.

3. CARE INFORMATION

3.1 CLEANING: Remove cover and toy bar for cleaning. Remove seat cover by unhooking the elastic band at the bottom of the seat cover from the base of the sound unit. Gently grasp both sides of the seat cover and pull upward and off bouncer frame. **Cover:** Hand wash in cold water. Do not use bleach. Air dry only. Do not iron. **Contents:** 100% polyester. **Toy Bar and Toys:** Surface wash only. Wipe clean with a damp cloth. Air dry well. DO NOT immerse in water. **Contents:** 100% polyester.

Bouncer Frame and Sound Unit: Wipe backrest frame, legs, and sound unit clean with a damp cloth. Air dry or wipe with a dry cloth. DO NOT immerse in water. DO NOT allow battery or sound unit to become damp or wet.

3.2 STORAGE: Do not place items or objects in or on product while storing as it may cause damage to the structure, fabric cover, or sound unit. Avoid storing product where it is exposed to extreme temperatures. Always store product in a dry area out of direct sunlight.

4. ADDITIONAL WARNING INFORMATION

IMPORTANT: Please retain all instructions and warnings for future reference. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BATTERY WARNING: IMPORTANT SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Remove batteries when product is stored for long periods of time or when batteries are exhausted.
- Dispose of exhausted batteries according to instructions.
- Do not recharge non-rechargeable batteries.
- Batteries are to be inserted with correct polarity.
- **CAUTION:** Risk of explosion if battery is replaced by an incorrect type.
- Keep all batteries away from children.

BATTERY REPLACEMENT: Using a screwdriver, open the battery cover on the back of the sound unit. Replace old batteries with 2 non-mercury alkaline AA batteries. Batteries are to be inserted with the correct polarity. Remove batteries before storing or when batteries are exhausted.

5. ONE-YEAR PRODUCT LIMITED WARRANTY

- This product has a limited warranty against defects in materials or workmanship for a period of one-year from the date of purchase.
- This product is intended for personal use. Dr. Talbot's does not provide warranty on this product when used for commercial use or any non-personal use or any use not strictly in conformity with use instructions provided herein.
- Dr. Talbot's limits the duration and remedies of all implied warranties, including without limitation the warranties of merchantability and fitness for a particular purpose to the duration of this express limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
- Dr. Talbot's extends this limited warranty only to the consumer who originally purchased the product. It does not extend to any subsequent owner or other transferee of the product.
- In the event of a malfunction or defect in materials or workmanship during the in-warranty period, and after analyzing the product, Dr. Talbot's, at its discretion, may replace or repair the product under warranty. Upon receipt of the product and the proof of purchase with a valid date of purchase, the defective part may be repaired or replaced and returned to you free of charge. The warranty period is not extended if we repair or replace the product. Please send defective unit, proof of purchase with valid date of purchase, and a description of the problem you have encountered to:

Dr. Talbot's
Attn: Dr. Talbot's Customer Care
3030 Aurora Avenue
Monroe, Louisiana 71201 U.S.A.



Model No: BY007

■ Manufacturer:
Zhongshan City Bobie Baby Product Co., Ltd.
No. 3, He Man Street, Jidongyi District, Xiaolan Town,
Zhongshan City, Guangdong, China

Form HDT
80119, 80120

© 2023 TFPF, LLC.
Nuby TM, Nuby logo, Dr. Talbot's TM, and
Dr. Talbot's logo licensed to TFPF, LLC. by
Admar International

Product Design and all other TMs
owned by or licensed to TFPF, LLC.

Nuby

Dr Talbot's

Manufactured for:
Talbot's Pharmaceuticals
Family Products, LLC.
Monroe, LA 71201
1-855-366-7755 (U.S.A. only)
www.drtaibots.com
Made in China