

# CLASSIC SERIES



# TABLE OF CONTENTS

<b>SECTION 1 - IMPORTANT SAFEGUARDS</b> .....	<b>1</b>
<b>SECTION 2 - UNPACKING</b> .....	<b>3</b>
<b>SECTION 3 - GETTING TO KNOW YOUR BLENDER</b> .....	<b>3</b>
<b>SECTION 4 - INSTALLATION</b> .....	<b>4</b>
<b>SECTION 5 - OPERATIONAL OVERVIEW</b> .....	<b>6</b>
<b>5.3 CLASSIC 475</b> .....	<b>7</b>
<b>5.4 CLASSIC 560</b> .....	<b>7</b>
<b>5.5 CLASSIC 570</b> .....	<b>8</b>
<b>5.6 CLASSIC 575</b> .....	<b>9</b>
<b>5.7 FIT BY BLENDTEC</b> .....	<b>10</b>
<b>5.7 TOTAL BLENDER</b> .....	<b>11</b>
<b>SECTION 6 - CARE AND CLEANING</b> .....	<b>12</b>
<b>SECTION 7 - TROUBLESHOOTING</b> .....	<b>12</b>
<b>SECTION 8 - WARRANTY</b> .....	<b>13</b>

# **SECTION 1: IMPORTANT SAFEGUARDS**

## **IMPORTANT INFORMATION**

Read all instructions carefully before using your Classic series blender.

Following these instructions will help prevent injuries and damage to the machine and will ensure that you have the best possible experience with your Classic series blender.

### **1.1 AVOID CONTACT WITH MOVING PARTS**

- ALWAYS keep fingers, hands, hair and clothing away from all moving parts.
- ALWAYS keep all utensils away from the drive socket and blender jar blades during operation as utensils may damage blades or the blender jar.
- NEVER put hands into the blender jar or add substances by hand when the blender jar is on the motor base.
- NEVER touch the blade with your fingers whether it is on or off the motor base.
- NEVER place jar into drive socket if blender motor is operating.
- DO NOT rock or remove the blender jar during operation.

These precautions will prevent personal injury and/or damage to the blender.

### **1.2 NEVER OPERATE THE BLENDER IF IT APPEARS DAMAGED**

If the blender malfunctions, call your service agent first. If it is dropped or damaged in any way, return the blender to a Blendtec service agent immediately for examination, repair, electrical or mechanical adjustment, or possible replacement.

### **1.3 NEVER OPERATE BLENDER IN LIQUID**

To protect against the risk of electrical shock do not put the motor base in water or other liquid. Do not use the blender outdoors where it is subject to precipitation. This will void the warranty.

### **1.4 NEVER PUT NON-FOOD ITEMS INTO JAR**

Utensils, rocks, and glass are dangerous if placed in jar. Damage caused by such foreign objects will void the warranty. Keep hands and utensils out of jar while blending to reduce the risk of severe injury to persons or damage to the blender. Utensils may only be used when the blender is not running.

### **1.5 NEVER OPERATE THE BLENDER WITHOUT THE LID IN PLACE**

### **1.6 NEVER OPERATE THE BLENDER USING ATTACHMENTS NOT SOLD BY BLENDTEC**

The use of any unauthorized attachments may cause fire, electric shock, and/or injury and will void the warranty.

### **1.7 BLENDER JAR MUST BE PROPERLY IN PLACE WHILE APPLIANCE IS OPERATING**

### **1.8 BLADES ARE SHARP! HANDLE CAREFULLY!**

## **1.9 WARNING, DO NOT BLEND HOT/LIQUIDS OR OTHER HOT INGREDIENTS**

Starting blend cycles with boiling or very hot liquids may result in burns or cause the lid to blow off.

## **1.10 USE CAUTION WHEN BLENDING ON THE HOT SOUP CYCLE**

When blending on the Hot/Soup cycle, friction of the blade will heat the contents. The vented lid will allow pressure relief. Be careful not to come in contact with any steam coming from the clear center lid.

## **1.11 POWER CORD PRECAUTIONS**

- NEVER operate with a damaged cord or plug. If the supply cord is damaged it must be replaced by the manufacturer or authorized service agent to avoid a hazard.
- DO NOT permit the cord to hang over the edge of the work surface.
- NEVER use an extension cord with the unit.
- Unplug the blender motor when not in use, before changing blender locations, or cleaning.

## **1.12 NEVER ATTEMPT TO REPAIR THE POWER UNIT**

Never remove the blender motor cover. The blender motor does not contain self-adjustable or serviceable parts. A qualified service agent must make all service adjustments. Removing the cover or attempting to service the blender will void the warranty.

## **1.13 TURN THE POWER SWITCH OFF WHEN NOT IN USE**

The Power Switch (ON/OFF switch) is located on the back of the blender motor cover.

## **1.14 AVOID TOUCHING THE BLENDER DRIVE SOCKET AFTER EXTENSIVE USE**

The blender drive socket may become hot after numerous cycles.

## **1.15 SAFETY**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## **1.16 THE CLASSIC SERIES BLENDER IS INTENDED FOR HOME USE ONLY! ANY USE OF THIS BLENDER FOR COMMERCIAL PURPOSES VOIDS ALL WARRANTIES**

## **1.17 NEVER OPERATE THE BLENDER WITH MORE THAN THE MARKED CAPACITY OF THE JAR**

**SAVE THESE INSTRUCTIONS**

## SECTION 2: UNPACKING

### SAVE ALL PACKAGING MATERIALS AND INSTRUCTIONS FOR FUTURE USE

#### 2.1 UNPACKING YOUR BLENDER

You should have received the following items:

- **Classic series motor base**
- **Blender jar with lid**
- **Blendtec 101 booklet**
- **Customer Service and Warranty Registration Card**

Additional literature may be included depending on package configuration.

1. Remove blender motor base, blender jar, and lid from packaging.
2. Unwind the power cord.
3. Check for any packing material that may have blocked ventilation holes on the underside of the blender motor base.
4. Inspect all items to ensure no damage occurred during shipment.
5. If any damage has occurred, contact your Blendtec service agent immediately.

#### 2.2 RECORDING YOUR SERIAL NUMBER AND DATE OF PURCHASE

Record your blender motor serial number and date of purchase in the space below. You will need these when contacting Blendtec for service or questions.

Motor Serial #(Found on bottom of motor base): \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Purchased From: \_\_\_\_\_

#### 2.3 REGISTRATION OF YOUR BLENDER

Register online at [www.blendtec.com/registration](http://www.blendtec.com/registration)

## SECTION 3: GETTING TO KNOW YOUR BLENDER

(Refer to Figures 1 and 2)

#### 3.1 BLENDER MOTOR BASE

- **Touchpad:** Consists of one-touch pre programmed cycles and speeds, as well as Stop and Pulse buttons.
- **Hardened Metal Drive Socket:** Where the jar couples with the motor to turn the blade assembly; made of hardened metal.
- **LCD Information Center:** Displays the number of times a blend cycle button has been pressed.
- **Power Unit:** This unit is located within the blender motor base and contains the computerized electronics that run the blender.
- **Motor Base Cover:** Houses the power unit in a durable, plastic material.
- **Power Switch:** Located on the back lower-right corner of the motor base cover.
- **Power Cord:** Located at the back of the motor base cover.

## 3.2 BLENDER JAR

The blender jar consists of the blender jar, blade assembly, and lid.


- Jar: Durable, BPA-free jar; easy to clean.
- Blade Assembly: Uniquely designed stainless steel blade provides fast, consistent blending.
- Lid: Vented gripper lid seals liquids within the jar during blending.

*NOTE: Filling the blender jar beyond the marked capacity is not recommended.*

## SECTION 4: INSTALLATION


1. Place the blender on a flat, clean, and dry surface. Blender vents should be unobstructed to allow proper cooling during use.
2. Make sure an outlet is available within two feet (61cm) of the blender motor.
3. Ensure the Power Switch located on the back of the motor base is turned off before plugging it in.
4. Turn unit on by toggling the Power Switch to the ON position.
5. Place appropriately filled blender jar, with lid in place, onto blender base.
6. We recommend that surge protection be placed between the receptacle and the blender motor.

 **FIGURE 1 FRONT VIEW: MOTOR BASE**

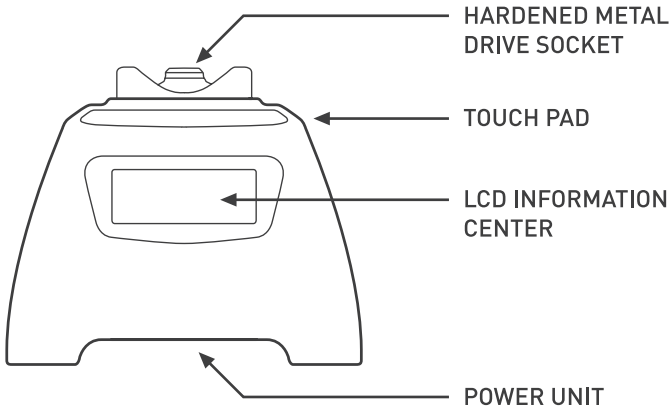

---

 **FIGURE 2 SIDE VIEW: MOTOR BASE AND JAR ASSEMBLY**

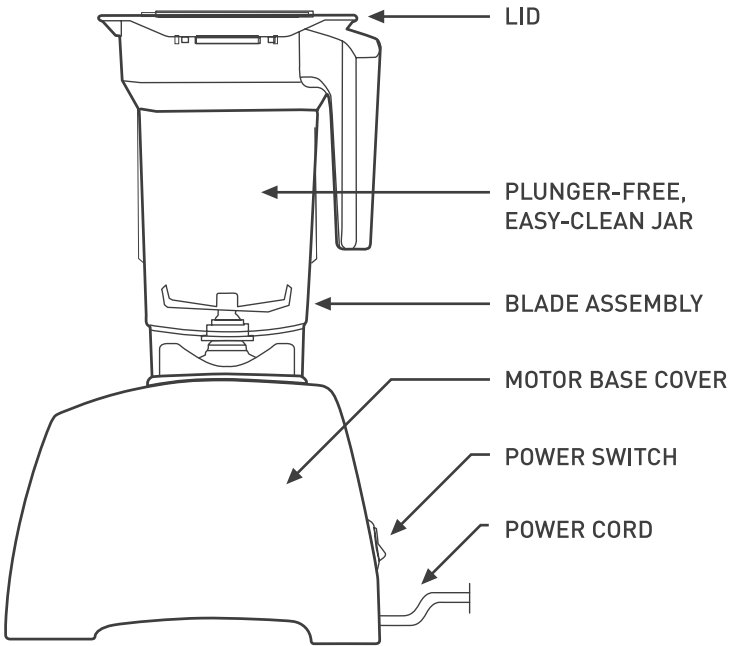

## SECTION 5: OPERATIONAL OVERVIEW

### 5.1 QUICK RECIPE INSTRUCTIONS –








Use these steps to get started right away.

1. Choose a recipe from the included Blendtec Blending 101 booklet.
2. Gather all of the ingredients.
3. Load the blender jar as indicated in the recipe.
4. Plug in the blender.
5. Attach the blender lid to the jar; ensure that it sits on the jar completely.
6. Turn on the main power switch located on the back of the blender motor base.
7. Place the blender jar onto the base, making sure the jar is secure and fully seated on the motor base.
8. Attach the blender lid to the jar; ensure that it sits on the jar completely.
9. Press the indicated touch pad button from the recipe once (or as indicated in the recipe).
10. When cycle is complete, remove the blender jar from the blender base.
11. Remove the jar lid and serve as indicated in the recipe.
12. For best cleaning results, clean immediately after blending.  
(See CARE AND CLEANING, 6.1)

### 5.2 ALL ABOUT BLEND CYCLES

 
Blend cycles are timed cycles designed for specific types of blends. These one-touch cycles speed up, slow down, and shut off automatically, so results are perfect every time.

Each blender in the Classic series features a number of pre programmed cycles and settings that provide a wide range of recipes and functions\*:

-  **Smoothie** – Fruit smoothies, green smoothies, milkshakes
-  **One-Touch Timed** – Used to blend ingredients for a 60-second or 90-second timed cycle
-  **Clean** – Automatic cleaning cycle
-  **Incremental Speed** – 50-second cycles that blend at Lo, Medium-Lo, Medium, Medium-Hi, and Hi speeds
-  **Stop** – Stops the blender at any point during blending
-  **Hot Soup** – soups, hot chocolate, syrups, fondues
-  **Pulse** – used to quickly stir, chop, or mince at a high speed

*\*Interfaces and cycles will vary depending on model number*

## 5.3 CLASSIC 475™

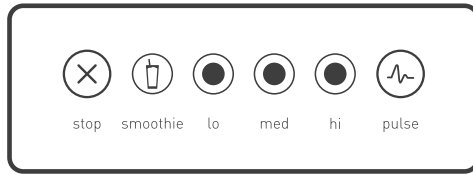

### **SMOOTHIE**

This cycle is designed specifically for various types of smoothies and thick drinks that frequently use dense or frozen ingredients. It slows down and speeds up automatically during the course of the cycle. This allows the blender to draw the ingredients into the blending vortex, creating the desired texture.


### **INCREMENTAL SPEEDS**


The Classic 475 comes with three incremental speed cycles that allow you to completely customize the consistency of your blend. Each manual cycle is 50 seconds long and blends at the following speeds:

- **Lo: Speed 1**
- **Medium: Speed 5**
- **Hi: Speed 9**

You can switch to a different speed at any point during the cycle. To stop the cycle at any point during blending, press Stop.

### **PULSE**

 
The Pulse function is used for chopping, mincing, whipping, or other momentary tasks that do not require a long blend cycle. You can also Pulse  to quickly stir a blend before serving.

The Pulse setting runs at speed 7 and will only run while the Pulse  icon remains pressed. When the icon is released, the motor shuts off.

### **STOP**

Used to manually stop blend cycle.

## 5.4 CLASSIC 560™

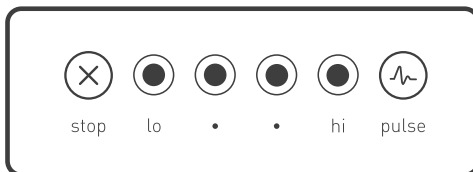

### **INCREMENTAL SPEEDS**


The Classic 560 comes with four incremental speed cycles that allow you to

 
completely customize the consistency of your blend. Each manual cycle is 50 seconds long and blends at the following speeds:

- **Lo: Speed 1**
- **Medium: Speed 5**
- **Medium-hi: Speed 7**
- **Hi: Speed 9**

You can switch to a different speed at any point during the cycle.

### **PULSE**


The Pulse function is used for chopping, mincing, whipping, or other momentary tasks that do not require a long blend cycle. You can also Pulse  to quickly stir a blend before serving.

The Pulse setting runs at speed 7 and will only run while the Pulse  icon remains pressed. When the icon is released, the motor shuts off.

### **STOP**

 Used to manually stop blend cycle.

## 5.5 CLASSIC 570™

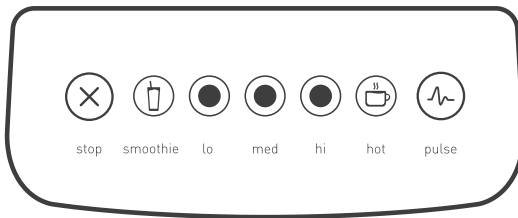

### **SMOOTHIE**

This cycle is designed specifically for various types of smoothies and thick drinks that frequently use dense or frozen ingredients. It slows down and speeds up automatically during the course of the cycle. This allows the blender to draw the ingredients into the blending vortex, creating the desired texture.

### **INCREMENTAL SPEEDS**

The Classic 475 comes with three incremental speed cycles that allow you to completely customize the consistency of your blend. Each manual cycle is 50 seconds long and blends at the following speeds:

- **Lo: Speed 1**
- **Medium: Speed 5**
- **Hi: Speed 9**

You can switch to a different speed at any point during the cycle. To stop the cycle at any point during blending, press Stop.


### **HOT SOUP**


This cycle is designed for hot recipes. The cycle's length of time, combined with

the speed of the motor, heats the ingredients to a hot temperature. This cycle can also be used for hot chocolate, syrups, and fondue.

When using fresh ingredients, remember that the speed of the blade generates enough heat to warm the ingredients. Do not add any liquids or ingredients over 115° F (46° C) to the jar when preparing soups or hot items.

### **PULSE**

 
The Pulse function is used for chopping, mincing, whipping, or other momentary tasks that do not require a long blend cycle. You can also Pulse  to quickly stir a blend before serving.

The Pulse setting runs at speed 7 and will only run while the Pulse  icon remains pressed. When the icon is released, the motor shuts off.

### **STOP**

Used to manually stop blend cycle.

## 5.6 CLASSIC 575™

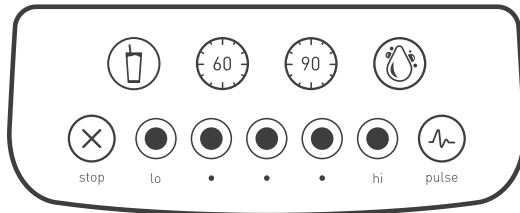

### **SMOOTHIE**

This cycle is designed specifically for various types of smoothies and thick drinks that frequently use dense or frozen ingredients. It slows down and speeds up automatically during the course of the cycle. This allows the blender to draw the ingredients into the blending vortex, creating the desired texture.

### **ONE-TOUCH TIMED CYCLES**

The Classic 575 comes equipped with two, one-touch timed cycles: one 60-second and one 90-second. These cycles free your hands for other kitchen tasks and are ideal for recipes that require longer blending times, such as hot soups or bread dough.

### **CLEAN**

This cycle that automatically cleans the inside of your blender jar. To use the Clean cycle:

1. Add 1 cup (240ml) of water and a drop of dish soap to blender jar.
2. Secure the lid and place the jar on the blender base.
3. Press the Clean button.
4. Once the cycle is complete, remove jar, and rinse.
5. For best results, use the Clean cycle immediately after blending.


### **INCREMENTAL SPEEDS**


The Classic 575 comes with five incremental speed cycles that allow you to completely customize the consistency of your blend. Each manual cycle is 50 seconds long and blends at the following speeds:

- **Lo: Speed 1**
- **Medium-lo: Speed 3**
- **Medium: Speed 5**
- **Medium-hi: Speed 7**
- **Hi: Speed 9**

You can switch to a different speed at any point during the cycle.

### **PULSE**

 
The Pulse function is used for chopping, mincing, whipping, or other momentary tasks that do not require a long blend cycle. You can also Pulse  to quickly stir a blend before serving.

The Pulse setting runs at speed 7 and will only run while the Pulse  icon remains pressed. When the icon is released, the motor shuts off.

### **STOP**

Used to manually stop blend cycle.

## 5.7 FIT BY BLENDTEC™

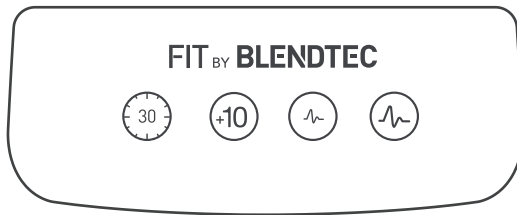


### **ONE-TOUCH TIMED CYCLES**

The Fit by Blendtec comes equipped one-touch timed cycles. This cycle frees your hands for other kitchen tasks and are ideal for recipes that require longer blending times.


### **+10**

This +10 icon allows users to add 10-second intervals to their blend cycles. It also acts as a stand-alone, 10-second cycle. To use this feature, simply touch it once at any point during the cycle.

### **LOW PULSE**

The Pulse function is used for chopping, mincing, whipping, or other momentary tasks that do not require a long blend cycle. You can also Pulse  to quickly stir a blend before serving.

### **HIGH PULSE**

The Pulse function is used for chopping, mincing, whipping, or other momentary tasks that do not require a long blend cycle. You can also Pulse  to quickly stir a blend before serving.

## 5.8 TOTAL BLENDER™



### **BATTERS/DIPS**

This cycle stays at relatively low speeds for shorter periods of time. This combines your dips, allowing the flavors to blend together properly, without over-mixing.

### **MIXED DRINKS**

This cycle is used for mixed drinks, milkshakes, iced coffees, and milkshakes. This length of time creates a consistency that is ideal for these types of recipes.

### **SMOOTHIE**

This cycle is designed specifically for various types of smoothies and thick drinks that frequently use dense or frozen ingredients. It slows down and speeds up automatically during the course of the cycle. This allows the blender to draw the ingredients into the blending vortex, creating the desired texture.

### **ICE CREAM**

This cycle is designed specifically for frozen treats, including ice cream, sorbets, and frozen yogurt. The cycle speeds up and slows down at the appropriate moments to ensure your blends stay frozen.


### **WHOLE JUICE**

This cycle is designed to completely blend tough and dense ingredients, including carrots, celery, and seeds. Use the Whole Juice cycle if you are using any fruits and/or vegetables with stems, seeds, or skins.

### **HOT SOUP**

This cycle is designed for hot recipes. The cycle's length of time, combined with the speed of the motor, heats the ingredients to a hot temperature. This cycle can also be used for hot chocolate, syrups, and fondue.

### **PULSE**

The Pulse function is used for chopping, mincing, whipping, or other momentary tasks that do not require a long blend cycle. You can also Pulse  to quickly stir a blend before serving.

## SECTION 6: CARE AND CLEANING

### 6.1 CLEANING AFTER USE

1. Add 1 cup (240ml) of hot water and a drop of liquid dish washing soap to the blender jar.
2. Place the lid tightly onto the jar.
3. Place the blender jar on the blender base and, with your hand placed on top of the lid, the Pulse button for 5 seconds or press the Clean cycle button which is available on select models.
4. Rinse well.
5. Clean the blender base by simply wiping the base and interface with a damp cloth.

### 6.2 LONG-TERM SANITATION

1. For long-term sanitation, fill the blender jar with hot water.
2. Add one to two teaspoons (5-10ml) of liquid chlorine bleach to the jar.
3. Stir for 10 seconds to mix water and bleach. Let mixture stand in blender jar for five minutes.
4. Empty water/bleach mixture. Turn jar upside down on dish rack until dry.

### 6.3 CLEANING TIPS AND CAUTIONS

1. Do not use stiff bristled brushes or abrasive cloths/pads to clean the blender base or jar, as this will dull or scratch the surface.
2. NEVER submerge the blender motor in water. Avoid submerging blender jars for more than 5 minutes. Water penetration through the lower jar seals will reduce the life of the jar. After cleaning, we recommend the blender jar be stored upright.
3. BLENDER JAR IS DISHWASHER SAFE—TOP RACK ONLY!
4. Extreme temperatures damage the lower seal of the jar. We recommend hand washing to prolong the life of the blender jar. We do not recommend the jar be used or exposed to, temperatures above boiling (212°F, 100°C).

E-05

## SECTION 7: TROUBLESHOOTING

- While we don't expect you to have any problems with your blender, sometimes failures do occur. Use the following guidelines to see if the problem is easily fixed or requires service.

### 7.1 BLENDER MOTOR WILL NOT TURN ON (NO POWER)

If the blender motor will not turn on, try the following:

1. Determine if the Liquid Crystal Display (LCD) is lit. An absence of a lit LCD indicates a lack of power to the unit.
2. Make sure the main power switch on the back lower-right corner is turned on. (On is indicated by the vertical slash (|) on the power switch).
3. Check your house circuit breaker switch to make sure it is set to the ON position.
4. Unplug the power cord from the wall receptacle, wait 5 seconds, then plug power

cord back in.

## 7.2 ERROR MESSAGES ON DISPLAY



**Overload:** This message indicates an overload on the motor. Turn off and unplug the unit. Remove the blender jar from the motor base, and turn the shaft by hand to ensure the blade turns freely. If the blade does not move freely, check for any obstruction in the jar. If the blade moves freely, plug in the unit and turn the blender on. If the overload condition reoccurs, please contact your Blendtec Service Agent for further assistance.



**Overtemp:** This message indicates that the motor is overheating. The blender has been disabled until the unit cools to operating temperature. Turn off and unplug the unit. Allow it to cool for at least 20 minutes.



**E-05 (Reset Error):** This message indicates a permanent failure of the electronics in the unit. Please contact your Blendtec Service Agent for repair/replacement (see Section 8: Warranty).



**E-04 (No Zero Crossing):** This message indicates failure of a component on the electronic board. Please contact your Blendtec Service Agent for repair/replacement (see Section 8: Warranty).


## 7.3 NOISE LEVEL CHANGES

If the blender noise level has increased from original levels, determine whether the sound is coming from the blender motor or jar.

1. **Blender motor:** Remove the jar, and press Pulse . Listen to the motor. If it is excessively noisy, please contact your Blendtec Service Agent for evaluation.
2. **Jar:** After checking the motor, fill the jar with 2 cups of water and place back on the motor base. Run the blender for a few seconds by pressing the Pulse  button. If you have more than one jar, test a different jar to determine whether the sound is different. If a jar is excessively noisy, or if the blade assembly seems loose or sounds gravelly when turned by hand, please contact a Blendtec Service Agent.

## 7.4 BLENDED TEXTURE UNSATISFACTORY

If the blended texture of product is lumpy or uneven, do the following:

1. Ensure the mixture is not cavitating during the cycle. Cavitation is a condition in which an air pocket forms within the mix because it is too cold or too solid. The blender blade then spins freely in this cavity. This problem can be corrected by increasing the mix temperature by reducing ice, increasing liquid and/or ensuring that the frozen ingredients used in the recipe are never colder than 10 degrees Fahrenheit (-12 degrees Celsius).
1. If the recipe is mixing well but has not had enough time for complete blending, increase cycle time. Try a longer cycle or touch and hold the Pulse  button for the required extra blending time.
2. **TRIED EVERYTHING?** If none of the preceding suggestions work, contact your Blendtec service agent for further assistance.

**INSTRUCTIONS THAT APPEAR IN THIS USER GUIDE ARE NOT MEANT TO COVER EVERY POSSIBLE CONDITION OR SITUATION THAT MAY OCCUR. GOOD JUDGMENT MUST BE USED WHEN OPERATING THIS OR ANY OTHER MACHINERY.**

## **SECTION 8: WARRANTY**

### **WARRANTY DESCRIPTION**

The motor base and jar assembly, including all moving jar parts, are covered against leaking or breakage for the warranty period. Warranties begin from date of purchase.

Cosmetic damage, product abuse, unreasonable use, damage resulting from an accident (including fire, flood, earthquake or other natural disasters), product tampering, use of accessories not endorsed by Blendtec, service performed or attempted by unauthorized service agencies, units that have modifications, or have been or used for commercial purposes are not included under this warranty.

The quality of Blendtec blenders is unsurpassed. You will enjoy years of wonderful and reliable service from your Blendtec Classic series blender.

**THIS WARRANTY APPLIES ONLY TO PRODUCTS SOLD BY BLENDTEC OR ITS AUTHORIZED DEALERS**

### **LIMITED WARRANTY**

Blendtec warrants the blender motor to be free of defect in material and workmanship for the warranty period. During this period, such defects will be repaired or the product replaced at Blendtec's discretion without charge. This warranty does not cover damage caused by misuse, accident, or negligence. All implied warranties, including but not limited to implied warranties of fitness and merchantability, are limited in duration to the warranty period on motor and jar. Any unit submitted for repair must be accompanied by proof of original purchase and should be shipped prepaid to:

**US Service and Repair Center Address:**

1206 South 1680 West  
Orem, UT 84058  
1-800-BLENDTEC  
(801) 222-0888

**Australia Service and Repair Centre Address:**

Franchise Fitout Services  
32 Industries Road  
Salisbury, QLD 4107

**For International toll-free service please contact:**

Australia	1-800-014098
Canada	(855) 230-0888
France	0-800-910346
Japan	0066-33-821731

Mexico	001-855-230-0888
South Korea	003-081-32941
Spain	900-948733
Taiwan	008-01147146
United Kingdom	0800-1510183

**The above limitations may not apply in states where limited warranties are not allowed. Other warranties may apply outside of the USA and Canada. Using a machine outside the country it was designed for will void the warranty.**

## UNDER WARRANTY

1. Contact Blendtec immediately to diagnose the difficulty. Please have blender serial number ready as well as a description of the problem. Do not attempt to do your own repairs. Repairs made by persons other than Blendtec authorized service representatives will void the warranty. Many issues can be resolved simply and quickly over the phone.
2. If the difficulty cannot be resolved over the phone, your unit may require replacement. If blender is under warranty, Blendtec will repair or replace the unit at no cost. Cosmetic damage and abuse are not included.
3. Upon receiving instructions from Blendtec, box up your existing unit and enclose the following:

Your Name: \_\_\_\_\_

Address: \_\_\_\_\_

Phone Number: \_\_\_\_\_

Motor Serial #(Found on bottom of motor base): \_\_\_\_\_

Cycle Count (From the LCD Information Center): \_\_\_\_\_

Your Purchase Date: \_\_\_\_\_

Place of Purchase: \_\_\_\_\_

An explanation of the problem: \_\_\_\_\_

### Notice to Australian Customers:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

# OUT OF WARRANTY

1. Contact Blendtec to diagnose the difficulty. Please have the blender serial number ready along with a description of the problem. Do not attempt to do your own repairs. Many issues can be resolved simply and quickly over the phone.
2. If the blender is not under warranty and you wish to have it repaired, please call customer service with your serial number, place of purchase and date of purchase so we may give you further instructions on how to send your machine in for an out of warranty repair.
3. When you ship your unit please enclose the following:

Your Name: \_\_\_\_\_

Address: \_\_\_\_\_

Phone Number: \_\_\_\_\_

Motor Serial #(Found on bottom of motor base): \_\_\_\_\_

Cycle Count (From the LED Information Center): \_\_\_\_\_

Your Purchase Date: \_\_\_\_\_

Place of Purchase: \_\_\_\_\_

An explanation of the problem: \_\_\_\_\_



1206 SOUTH 1680 WEST  
OREM, UTAH 84058 U.S.A.  
1-800-BLENDTEC  
BLENDTEC.COM

©2014 K-TEC, INC., ALL RIGHTS RESERVED  
BLENDTEC IS A REGISTERED TRADEMARK  
OF K-TEC, INC.  
OWN-RD-205 A02 MANUAL, OWNERS,  
CLASSIC, ALL MODELS, US ENG, JUNE 2017