

flexxtreme




DATE
PSWP14BK

Waterproof MP3 Player with Headphones

USER MANUAL

PYLE
PyleUSA.com

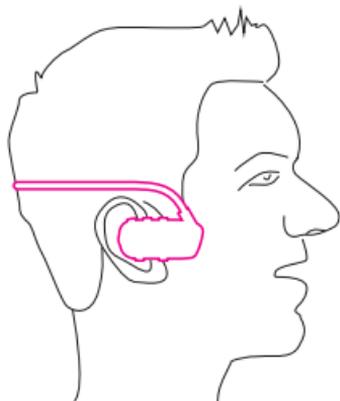

- For safety, please use the smaller size earplug than your normal size earplug when doing outdoor sport and make sure you can hear the outside sounds:

L size ➔ M size

M size ➔ S size

- For safety, please do not use the headset when you are driving a car, a motorcycle, ship, a bike, or walking on the street. Please follow the local laws and regulations.

About PSPWP6BK




Swimming earbuds

Land use earbuds

Power ON/OFF
Play/Pause

Vol-


Vol+

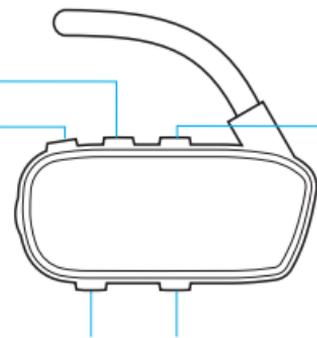

Previous Next

Wearing


Please put swimming goggles against the connecting rod at the point near ear.

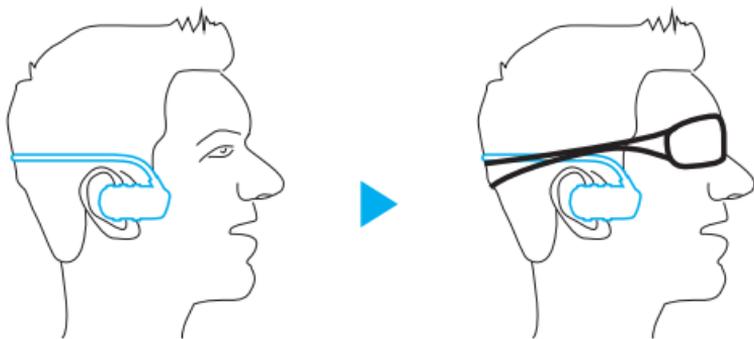

Note: When swimming, please do use the swimming waterproof earbuds. Please choose earbuds according to your wearing comfort.


Charging

1. Please connect the player to computer via the USB clip.

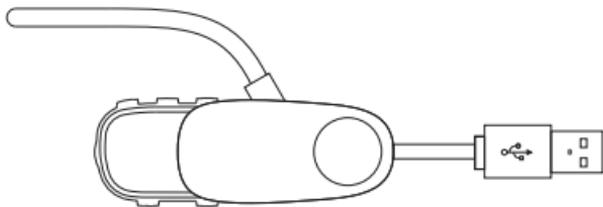

2. Be sure to dry the water on the main body before connecting a computer or charging. Clean the metallic contacts regularly to prevent the poor contact when for battery charging and data transferring.


Suggest cleaning by eraser or toothbrush

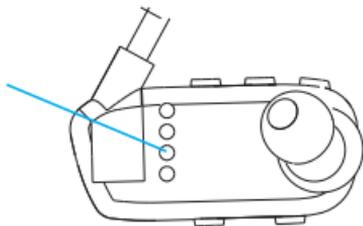

Blow Off The Water Film



The volume may come down when swimming, it's because it forms a thin water film on the waterproof net or speaker film.

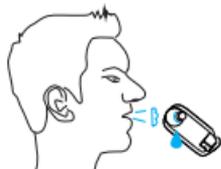

Take off the waterproof earbuds, blow off the water film.



Squeeze the earbuds to let the water come out.

- Put the player in dry place for more than 10 hours air drying, the volume will be normal.

Precautions

- Do not use the player in an extreme environment. the player may not work on temperature over 104°F or below 23°F or in very dry environment.
- Do not impact the player with hard object. otherwise it would cause surface scratched, battery falling or other firmware damage
- Do not disconnect the player when it is formatting, uploading, downloading otherwise it would cause "program error" or "computer dis-recognition"
- Do not repair, dismantle or rebuild the player without permission from the manufacturer.
- Reduce the volume to avoid hearing damage.
- We are not responsible for any personal data losses or other indirect losses cause by improper operation, software, hardware, product maintenance or other accident.

Listen to Music



- **Power ON/OFF**
Click and hold 4 seconds

- **Play/Pause**
Click once

- **Volume up**
Click once
- **Fast Volume up**
Long press

- **Volume down**
Click once
- **Fast Volume down**
Long press

Operating

- **Next**
Click once
- **Fast forward**
Long press
- **Previous**
Click once
- **Fast backward**
Long press



Shuffle Play Mode ON:

When the player is on, press ►||, then press ►►.

Shuffle Play Mode OFF:

When in Shuffle Play Mode, press ►|| then press ◀◀ the player will be in normal play mode.

Note: MP3 player keys are multi-functional. The pressing modes contain Long Press and Press. Different operating modes stand for different functions.

Troubleshooting

No response after pressing;
Stop automatically while playing;
System power off automatically when starting.

- Please charge.

No sound from the player.

- Make sure the volume is not in "0" level.
- Damaged Mp3 files may cause some noise and failure in playing music.
- Please make sure the music file is complete.

Unable to download music.

- Check if the USB line is broken or not connected well.
- Check if the driver is installed appropriately.
- Check if there is blank memories inside.

Can not be read by computer

- Check if the USB wire is broken or not connected well.
- Check if the operation is incorrect.
- Check if the driver software is installed well.

Failure to play the compressed MP3

- Damaged Mp3 files may cause some noise and failure in playing music. Please make sure the file is completed.

Product Specification

- IP Rating: IPX8
- Dimensions: 140mm x 43mm x 110mm
- Weight: 27g
- USB Interface: USB 2.0 (High speed)
- Battery: Lithium battery
- Memory: 8GB
- Music format: MP3, WMA
- File Format: FAT16, FAT32
- Mp3 bite rate: 8Kbps~320Kbps
- Earphone output power: 5mW+5mW
- Frequency response: 20Hz-20KHz
- S/N: >70dB
- Distortion: <0.3%
- Operating environment: 41°F—104°F
- Operating time: 10 hours

Packing List



MP3 Player



USB Clip



Swimming Earbuds



Land Use Earbuds



Manual