


Pet Hair Dryer

CW-026-A

Instructions

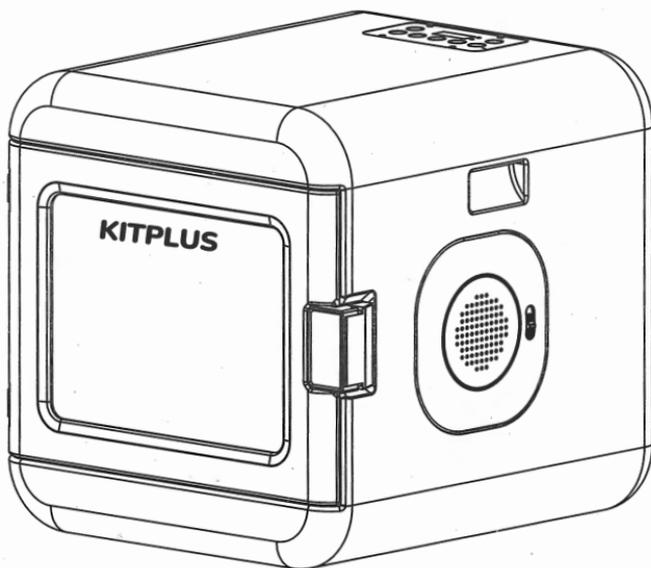

Please read the instructions carefully before use the product.
The appearance of this product is subject to the physical product.
Please keep the instructions properly.

Executive Standard: GB 4343.1-2018, GB 4706.1-2005,
GB 4706.15-2008, GB 17625.1-2012

Safety Precautions before Use

Warning: In order to avoid the harm caused by misuse, please read the instructions carefully before using this product, and use the product strictly in accordance with the purposes stated in the instructions.

This "Safety Precautions" contains important contents that enable you to use this product safely and correctly, and prevents personal injury or property damage to you or others. Please keep the instructions after reading it, so that all users of this product can refer to it at any time.

1. This product is a heating appliance. Please use a socket with 10A or above separately. Please make sure that the socket is grounded before use.
2. The pet hair dryer is a high-power electrical appliance. It is strictly forbidden to use a trailing socket and share a socket with other electrical appliances.
3. This appliance cannot be operated with an external timer or an independent remote control system.
4. If the power cord is damaged, in order to avoid danger, it must be replaced by professional personnel designated by the maintenance department or similar departments of the manufacture.
5. It is forbidden to pull the wire, press the wire or let the wire hang down along the pointed object or sharp edge. At the same time, keep the product away from heat and moisture; do not insert additional objects such as metal into the gap of the heat dissipation hole, otherwise it may cause damage or electric shock.
6. If you find that the power cord or plug is damaged or the pet hair dryer cannot function well, in order to avoid danger, please be sure to stop using it. At the same time, please send the product to the professional person of the designated maintenance department; the maintenance department or similar departments of the manufacturer for repairs or replacement.
7. It is strictly forbidden to pull the power cord. Please unplug the power cord before moving the pet hair dryer. Do not immerse the power cord, plug and pet hair dryer in water or other liquids, so as to prevent the risk of electric shock.
8. It is strictly forbidden to place any objects on the top of the pet hair dryer when it is working, and do not cover or block the heat dissipation hole of the pet hair dryer, so as to avoid fire.
9. It is strictly forbidden to put flammable materials such as papers or plastics in the pet hair drying case or store other items in the case, otherwise it may cause a fire.
10. It is strictly forbidden to heat the closed container in the pet hair dryer, otherwise it may cause an explosion.
11. It is strictly forbidden to put the pet hair dryer near flammable materials or heat sources. Keep the pet hair dryer away from curtains and other similar items, so as to avoid fire.
12. The pet hair dryer should be placed in a dry environment. Do not use this product outdoors.


-
- Place the pet hair dryer on an insulated surface for using, and keep a distance of at least 15 centimeters between the pet hair dryer. And other things Note: The pet hair dryer has a safe barrier on its back to prevent it from contacting objects such as walls, so as to keep a safe distance.
 - In order to avoid fumes polluting the furniture and causing fires when using the pet hair dryer, be sure to keep a certain distance between the product and the walls, cabinets, and flammable objects.
 - It is strictly forbidden for children, people with impaired limbs and physiological or mental obstacles, and people lack of relevant experience and knowledge to operate the pet hair dryer alone. If there are children around, please use this product with extra care. Do not place this product where children can reach.
 - Do not damage, excessively bend, stretch, or twist the power cord, and do not place heavy objects on the power cord or clamp the power cord.
 - When the pet hair dryer is used up or not used for a long time, the plug should be pulled out of the socket, so as to avoid the risk of electric shock or leakage due to aging of the insulation.
 - The accessories provided by the manufacturer should be used correctly. Do not use accessories not provided by the manufacturer, so as to avoid fire or injury caused by man-made operations.
 - Before cleaning, moving or repairing the pet hair dryer, unplug the power cord, and wait for the inside of the box to cool down before doing any operations.
 - When using this product, separate it from other products with a distance of more than 30 centimeters.
 - This product is only suitable for household use. Do not use this product for other purposes.

Introduction to Pet Hair Dryer

1. Main Features

- Microprocessor technology control, ensuring precise temperature.
- Intelligent drying menu, making drying easier.
- Microprocessor technology temperature control, satisfying the needs of drying in different seasons.
- Built-in disinfection function, disinfecting, sterilizing and deodorizing pet supplies.
- Built-in lighting, making pets not afraid in the machine.
- Hot air circulation structure, providing all-round drying.
- Wide-area temperature adjustment from 68°F to 122°F, not only drying pets and pet clothes, but also cooling pets in summer.
- Hidden heating, simple and capacious cavity space, making cleaning more convenient.
- Energy-saving and low-power consumption of this series of products, drying pet hair quickly and easily.
- The temperature is below 122°F, and can be set freely. Different temperatures can be set for drying according to the length of the pet hair.

2、Control Panel

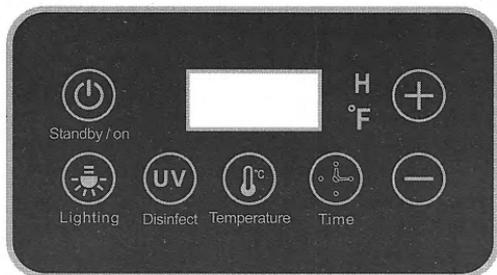

Working Principle

The pet hair dryer is equipped with an electric heater with a heat protective device, a fan, temperature control, and ultraviolet light.

A heating unit and a fan are used to blow out the hot air, so that a thermal cycle is formed in the air, which has the effect of low-temperature drying. The temperature and time can be set and adjusted by the controller.

Technical Parameters

Model	Rated Voltage	Rated Frequency	Rated Power
CW-026	110V	60Hz	1000W

How the product works

1. Operation Steps

Place the pet hair dryer on a flat ground. Please plug in the power supply. After the light on the control panel flashes, please press the "Start/Stop" button on the touch panel (Some models are "stand by/on"), and then press the "Time" button to set the time. Press the "Temperature" button and select the temperature you want. The machine can only work normally when the time and temperature are set. (The time must be set to 30 minutes or above.)

2. Disinfection

The disinfection function can only be turned on after the pet has been taken out the case. It is forbidden to turn on the disinfection function when the pet is inside the case, which will cause harm to the pet. Press the "Disinfection" button, then the disinfection will stop automatically after 10 minutes.

3. Lighting

After pressing the "Lighting" button, the lights in the case are turned on, and then press the "Lighting" button again to turn off the lights.

Temperature reference table according to ambient temperature:

68°F for cooling pets in summer	
122°F for drying pet clothes	
Ambient temperature during 86°F - 104°F	Machine temperature during 68°F - 86°F
Ambient temperature during 68°F - 86°F	Machine temperature during 77°F - 95°F
Ambient temperature during 47°F - 59°F	Machine temperature during 95°F - 113°F

Safety Warnings and Precautions

1. It is strictly forbidden to put pets that have just been bathed on the surface of the pet hair dryer. This will cause leakage and damage to the machine after the water enters the machine. If so, the user shall be responsible for the consequences.
2. After the disinfection function of the pet hair dryer is turned on, it will automatically turn off after 10 minutes.
3. When people, children or animals that are unable to move freely stand beside the machine and there is no person with active ability to take care of them, please do not use this product, so as to avoid electric leakage or other accidents.
4. This product is for household only. The company shall not be responsible for the malfunction caused by any commercial use, improper use or failure to follow the instructions, and the malfunction is not covered in the warranty service.
5. After opening the packaging box, please pack the plastic bags immediately to prevent children from playing and causing suffocation.
6. Before use, all packaging materials must be removed, otherwise it may cause fire, burns, etc. during the working process.
7. Make sure that the power cord does not come into contact with sharp edges, burrs, and objects with high surface temperatures, so as to prevent leakage of electricity that causes electric shock or fire.
8. Before connecting the power supply, please check whether the voltage marked on the product is consistent with the voltage of the power supply, so as to avoid damage to the components or avoid fire.
9. A separate grounding socket with 10 A or above must be used, and the plug must be completely inserted into the socket to prevent poor contact from overheating and burning the components, causing short circuit or fire.
10. Do not operate this product on flammable materials such as carpets, towels, plastics, papers, etc., so as to prevent fire.
11. Do not use this product on an unstable, humid, altithermal, smooth, heat-insensitive table surface, so as to avoid accidents and property losses caused by electric shock, fire, and slipping.
12. Do not use this product in an environment with gas leakage and electrical leakage, otherwise it may cause fire and electric shock.
13. Do not use this product under or near combustible materials such as curtains and closets, so as to prevent fires.
14. Do not use this product unattended.
15. Make sure the accessories are dry before using.

-
16. When using the product, ensure enough space around it and keep a distance for at least 10 centimeters from surrounding objects to ensure that the product can fully dissipate heat, so as to prevent high temperature from affecting the performance of the product.
 17. To prevent electric shock or fire, make sure that the power supply is disconnected when stop using, moving or cleaning the product.
 18. It is strictly forbidden to immerse the product and power cord in water or other liquids, and do not spray or sprinkle water on the product, so as to avoid short circuit and electric leakage caused by water entering the device.
 19. Do not use accessories that are not included with this product, so as to avoid accidental injury.
 20. It is strictly forbidden to pull or insert the power plug with wet hands, or clean the socket with a damp cloth, otherwise it will cause electric leakage.

The following operations should be specifically paid attention to:

1. After the pet hair dryer, power cord, and power plug are obviously damaged, do not use the pet hair dryer.
2. It is not allowed to troubleshoot and change the structure of the pet hair dryer by yourself. When the power cord is damaged, it is not allowed to replace it by yourself or by non-professional personnel.
3. Do not use chemicals and water to clean the pet hair dryer.
4. It is forbidden to move the pet hair dryer when the power is turned on.
5. In order to prevent the risk of electric shock, the pet hair dryer must not be immersed in water.
6. Explosive materials in it or next to it.

Common Faults and Solutions

Faults	Possible Reasons	Solutions
Indicator light not shine	The power socket is not energized or has poor contact.	Check and maintain power
	The power supply voltage is inconsistent with the rated voltage of the product.	
	The power cord is not plugged in tightly.	
No hot wind	The temperature is not set.	Use this product after reading the instructions.
	The time is not set correctly. (The time must be set to more than 30 minutes.)	
Disinfection light not shine	The disinfection light will turn off automatically after 10 minutes.	Tighten the disinfection light after turn off the machine.
	The disinfection light is not tightened.	
	The disinfection function is not set.	Set the disinfection function again.
Illumination light not shine	The disinfection light is damaged.	Contact the maintenance stores or resellers of our company.
	Illumination button can be turned on by pressing it.	Press the illumination button again.
The display showing fault code "E1"	The illumination lighting is damaged.	Contact the maintenance stores or resellers of our company.
	The temperature sensor encounters an open circuit fault.	Contact the maintenance stores or resellers of our company.
The display showing fault code "E2"	The temperature sensor is not plugged in.	
The display showing fault code "E3"	The temperature sensor encounters a short circuit fault.	Contact the maintenance stores or resellers of our company.
	The machine temperature is too high.	Turn off the machine, and turn it on after cooling down. Contact the maintenance stores or resellers of our company.

Product Cleaning, Care and Maintenance

1. Before cleaning the machine, the power plug must be unplugged and the machine must be cooled down.
2. Wipe the machine with a soft cotton cloth after the work is completed. It is forbidden to use corrosive detergents, chemical cleaners or hard metal wires for cleaning, because this will damage the surface of the machine, affect the service life, and cause safety hazards.
3. When the machine is not used for a long time, clean it and put it in a ventilated and dry place, so as to avoid the influence of moisture.
4. If the power cord is damaged, in order to avoid danger, it must be replaced by professional personnel from the maintenance department or similar departments of the manufacture.

After-sales Service

Please read the instructions carefully before using this product for the first time, and this will help you to use and maintain the machine safely and correctly, so as to avoid unnecessary losses!

Under normal operations according to the instructions for use, if the product fails or has quality problems, the company will provide you with warranty service. Within one year, you will enjoy free warranty service. After the warranty period, you may pay for repair service. When the pet hair dryer fails (non-man-made damage), it must be repaired by professional repair stores or professional personnel designated by the manufacturer. If you have any comments on or questions about after-sales service, please contact our company.

The following situations are not covered in the scope of warranty service or replacement:

1. You cannot fill in the correct product model, purchase address and purchase date and other information.
2. Product malfunction and damage caused by your failure to follow the instructions.
3. Product failure and damage caused by collisions, falling, water leakage, etc.
4. Product failure and damage caused by natural disasters such as fires, earthquakes, lightnings, typhoons, and floods.
5. For product damage caused by the repair that is not allowed by our company, the warranty service will be automatically terminated.