

TIPS & Q/A

Water measurement is not correct

Follow below steps to improve the water measure accuracy.

1. Make sure the counting unit (liter/gallon) is correct.
2. Maximize the faucet water flow (> 1 GAL/MIN).
3. Attach a garden hose on the outlet.
4. Reset the TOTAL mode and use the TOTAL mode to measure the water flow.
5. Install the water meter vertically.

LCD screen does not work properly

1- LCD screen displays while the meter does not count

Check if filter washer is clogged.

Check if the stones or dirt block the flywheel, or the flywheel is damaged.

2- LCD screen is dead

Replace with a brand-new battery and install it with correct direction.

Note:

DO NOT moisten the battery and battery compartment. Keep your hands dry.

3- LCD screen has condensation

Air condenses inside the screen due to the temperature difference. Leave it under sunshine for a period of time, the fog will disappear.

Water is leaking

Check if filter washer is in place.

Check if filter washer is clean and undamaged.

Check if faucet thread is 3/4" NH and the connection is hand tight.

Water pressure is restricted

Clean or replace the filter washer regularly.

Check if the stones or dirt block the flywheel.

WARRANTY

Restmo provide one-year worry-free warranty. For any warranty claims within one year from the original order date, please email your order ID to Restmo Support and we will respond within 24 hours.



support@restmo-link.com

RESTMO[®]

Garden Watering Made Easy



support@restmo-link.com