

- 4-** Place the safety cover (mandatory) over the clothes, so that they stay inside the basket, as shown in image 2. The safety cover must be fully inside the inner tub.
- 5-** Make sure the spin dryer is stable and the drain spout is completely open.


**Important:**

If the drain spout is closed, the backup drain spout will be activated and the water will discharge through there in order to not damage the centrifuge motor. If you notice this situation is happening then pull the main drain spout nozzle open.

- 6-** Lower the lid. Turn the timer dial until the desired time, as stated in the guideline table. The centrifuge process will start immediately and when the selected time finishes, the motor will turn off and the basket will stop in a few seconds.
- 7-** If it does not spin, reload the clothes and repeat the process from the beginning. The timer dial must be in the off position and the basket not moving before the lid can be opened. Place a receptacle (basin or small bucket) below the water discharge nozzle. Also, if it's your first time using the unit, please make sure you have removed the metal motor locking bar from the bottom of the unit.
- 8-** To move your spin dryer to another location, turn it off and carry it by holding the side handles.

**Important:**

Never move your spin dryer to another location when it is operating.

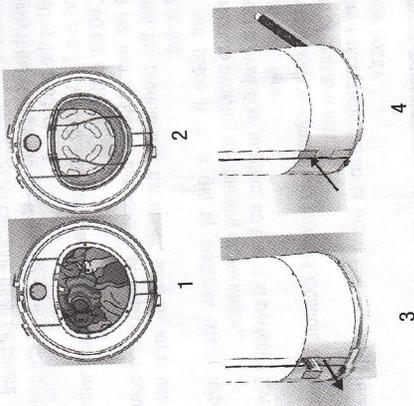

**Important:**

- The safety system prevents users from opening the lid while the spin dryer is operating.
- The spin dryer will not operate when the lid is open.


**Timer:**

- When the timer dial begins moving, the safety system will be activated. The lid will remain locked, and will only open after
- If you wish to stop the spin dryer, the time dial must be moved to the off position, and you must wait 30 seconds for the lid to release.

**Opening the lid:**

- **Automatic timer return to the off position:** the lid will be automatically released.
- **Manual timer return to the off position:** it is necessary to wait for 30 seconds for the lid to release.
- The spin dryer will operate when the timer dial is in the spin dry position.
- The timer works in coordination with the lid. If the timer is activated without opening and closing the lid, it will not operate and the lid will be locked for 30 seconds.

**CAUSES OF EXCESSIVE VIBRATION**

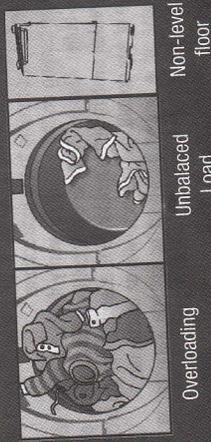

**Important:**

The spin dryer is lightweight, and operates at high speed rotation. For this reason, it is important to strictly adhere to the recommendations contained in this manual for the safety of the user and a long useful life of the product.

**Specification Table:**

Inner tub volume	5.8 gallons
Color	White
Net Weight	19.8 lbs
Voltage	127 V
Power rating	127 V-190 W
Frequency	60 Hz
Dimensions: Height x Width x Depth	31.5" x 19" x 19"
Power Consumption per Complete Cycle	0,01

**Time Guideline Table:**

Type of clothing	Time
Heavy clothing	4-5 min
Normal clothing	3-4 min
Light clothing	2-3 min

**1.** The Spin Dryer is warranted for 36 consecutive months against manufacturing defects, from the date of issue of invoice.

**2.** The warranty will include free replacement of parts, if applicable, or a replacement until.

This warranty is automatically void if:

- 4.1. The use of the product is not exclusively domestic;
- 4.2. The user does not follow the instructions in the instruction manual.
- 4.3. The product is misused, shoes signs of neglect or has been altered in some other way.