 


Instructions


Thank you for choosing Aunmaon automatic soap dispenser.

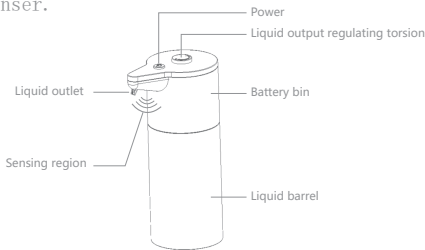


1. Rotate as shown to separate the body from the liquid barrel.



2. Open the battery bin as shown in the figure and load a total of three AA alkaline dry batteries in the correct direction.

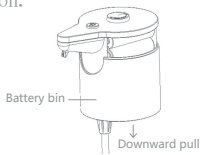


3. If the product style you purchased can use both dry batteries and the included rechargeable battery, please use a USB charger (with an output voltage of 5V) to charge the included rechargeable battery. The red indicator light indicates charging, and the green indicator light indicates full charge. After the battery is fully charged, insert it into the battery compartment in the correct (+,-) direction.

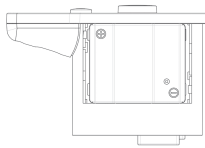


4. Pour a proper amount of liquid soap into the liquid barrel, and tighten the body and the liquid barrel.



5. Press the power lightly once, and the white indicator flashes once at this time, indicating normal startup, and the liquid can be discharged by reaching to the sensing area (Note: When using or replenishing the liquid for the first time, it is necessary to sense several times to empty the internal air of the machine to discharge the liquid normally).

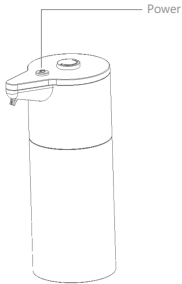

6. Rotate the liquid output adjusting knob to control the liquid output. Rotate in the direction of "+" to increase the liquid output, and rotate in the direction of "-" to reduce the liquid output.

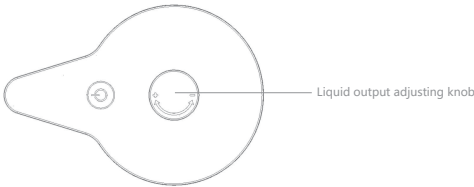

7. When the switch is lightly pressed, the white or green indicators up to indicate power-on, and the red indicators up to indicate power-off.
8. During use, the red indicator light will flash when the battery level is low. Please replace the dry battery with a new one or fully charge the rechargeable battery.

Attention

1. To ensure product performance, please use AA alkaline dry battery.
2. When replacing batteries or replenishing liquids, please turn off the machine first.
3. During use, if the key red light flashes, it means that the battery power is low, so the battery needs to be replaced.
4. When not in use for a long time, please take out the battery in the body to prevent damage caused by leakage.
5. This machine is suitable for liquid gel, hand sanitizer, detergent, laundry detergent, shower gel, shampoo, alcohol, etc. Not applicable to foam soap solution.
6. When using or replenishing liquid for the first time, it is necessary to induce several times to exhaust the air in the machine before normal use.
7. When you reach out to the sensing area, the indicator will light up, and when the indicator goes out, you can leave.
8. This product is not suitable for children to play with.

Aunmaon