


Digital Paper System
DPT-RP1

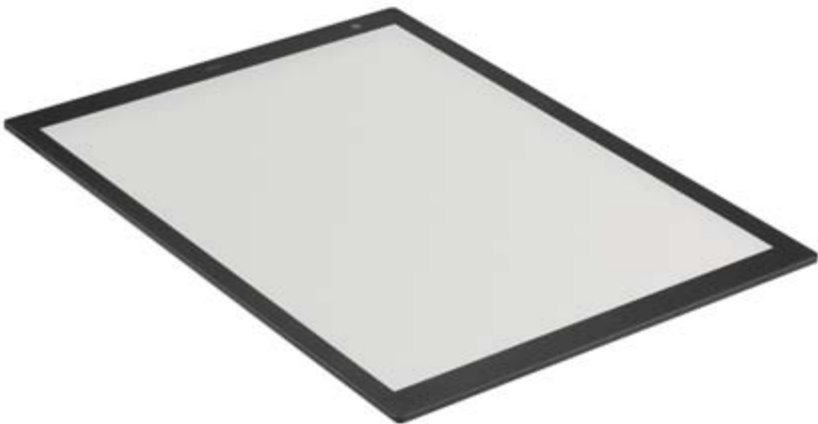

Refer to this manual whenever you are having problems or are uncertain while using the Digital Paper.
The screens and illustrations that appear in this Help Guide may differ from the actual product.
Changes may be made without prior notice, to improve the design and specifications.

Getting Started

Turning the power on/off

About the battery

Security

- Setting the screen lock >
- Disabling the screen lock via FeliCa card/FeliCa-compatible device >

Digital Paper screen

- Home menu >
- Document screen >

Digital Paper App (dedicated app) screen

Transferring/managing documents

Connecting to a computer

Connecting via Wi-Fi/Connecting using a USB cable



Connecting via Bluetooth



Transferring documents to the Digital Paper

Transferring a document from a computer



Using the print operation to transfer and display data on the Digital Paper



Transferring documents from the Digital Paper

Transferring a document to a computer



Creating a back up



Syncing the Digital Paper with a computer

Searching with the Digital Paper App

Searching for a document or folder (Digital Paper App)



Searching for documents that contain a specific written mark (Digital Paper App)



Changing the organization of documents/folders on the Digital Paper

Adding/editing a note template

Reading

Opening a document

Opening a document



Selecting and opening from a folder



Opening a different document from the quick access list



Turning pages

Turning the page



Changing how to turn pages



Zooming in on a document

Display page thumbnails

Displaying left and right pages in a two-page spread

Displaying documents side-by-side

Rotating documents

Searching with the Digital Paper

Searching for a string of text within a document

Searching for a handwritten mark within a document

Searching using document information and other information

Searching for documents that contain a specific mark

Viewing a sticky note attached by a previous Digital Paper model

Displaying a document on the computer

Writing

Handwriting on a document

Adding a highlight

Using the eraser

Copying/cutting and moving handwritten items

Displaying the annotation list

Limiting edits to annotations

Calibrating the pen

Using notes

Creating a new note

Opening a note

Using side-notes on a document

Creating a side-note on an open document

Opening a side-note

Adding/deleting a page from a note

Selecting defaults for the note template

Adding/editing a note template

Various settings

Changing the settings on the Digital Paper

Changing the Digital Paper settings using the Digital Paper App

Updating the software

Setting up the Digital Paper App

Troubleshooting

Digital Paper issues

- Cannot turn on the power
- Cannot charge the Digital Paper
- The battery seems to drain quickly
- It takes time for a screen to be displayed
- The screen is not appearing
- The touch panel is reacting slowly
- Pen does not work
- The position of the pen tip is not aligned with the actual writing



Network issues

- Cannot set up/connect to a network
- The network connection suddenly stopped working



Regarding documents

- Cannot display a document
- Characters are not being displayed
- Cannot add annotations
- Cannot edit or delete annotations



Computer connection issues

- The computer does not recognize the Digital Paper
- Cannot transfer documents from a computer to the Digital Paper



Other

Precautions

Legal Notice

Specifications

Table Of Contents


DPT-RP1 Help Guide.....	i
Getting Started.....	i
Turning the power on/off.....	1
About the battery.....	3
Security.....	i
Setting the screen lock.....	5
Disabling the screen lock via FeliCa card/FeliCa-compatible device.....	6
Digital Paper screen.....	i
Home menu.....	8
Document screen.....	9
Digital Paper App (dedicated app) screen.....	11
Transferring/managing documents.....	ii
Connecting to a computer.....	ii
Connecting via Wi-Fi/Connecting using a USB cable.....	13
Connecting via Bluetooth.....	15
Transferring documents to the Digital Paper.....	ii
Transferring a document from a computer.....	17
Using the print operation to transfer and display data on the Digital Paper.....	19
Transferring documents from the Digital Paper.....	ii
Transferring a document to a computer.....	21
Creating a back up.....	22
Syncing the Digital Paper with a computer.....	23
Searching with the Digital Paper App.....	ii
Searching for a document or folder (Digital Paper App).....	25
Searching for documents that contain a specific written mark (Digital Paper App).....	26
Changing the organization of documents/folders on the Digital Paper.....	28
Adding/editing a note template.....	30
Reading.....	ii
Opening a document.....	ii
Opening a document.....	32
Selecting and opening from a folder.....	33
Opening a different document from the quick access list.....	34
Turning pages.....	ii
Turning the page.....	36
Changing how to turn pages.....	37
Zooming in on a document.....	38
Display page thumbnails.....	39

Displaying left and right pages in a two-page spread.....	40
Displaying documents side-by-side.....	41
Rotating documents.....	43
Searching with the Digital Paper.....	iii
Searching for a string of text within a document.....	44
Searching for a handwritten mark within a document.....	45
Searching using document information and other information.....	46
Searching for documents that contain a specific mark.....	47
Viewing a sticky note attached by a previous Digital Paper model.....	48
Displaying a document on the computer.....	49
Writing.....	iii
Handwriting on a document.....	50
Adding a highlight.....	51
Using the eraser.....	52
Copying/cutting and moving handwritten items.....	54
Displaying the annotation list.....	56
Limiting edits to annotations.....	57
Calibrating the pen.....	58
Using notes.....	iii
Creating a new note.....	60
Opening a note.....	61
Using side-notes on a document.....	iii
Creating a side-note on an open document.....	62
Opening a side-note.....	64
Adding/deleting a page from a note.....	65
Selecting defaults for the note template.....	66
Adding/editing a note template.....	30
Various settings.....	iii
Changing the settings on the Digital Paper.....	67
Changing the Digital Paper settings using the Digital Paper App.....	69
Updating the software.....	71
Setting up the Digital Paper App.....	72
Troubleshooting.....	iv
Digital Paper issues.....	iv
Cannot turn on the power.....	74
Cannot charge the Digital Paper.....	75
The battery seems to drain quickly.....	76
It takes time for a screen to be displayed.....	77
The screen is not appearing.....	78
The touch panel is reacting slowly.....	79

Pen does not work.....	80
The position of the pen tip is not aligned with the actual writing.....	81
Network issues.....	iv
Cannot set up/connect to a network.....	82
The network connection suddenly stopped working.....	83
Regarding documents.....	iv
Cannot display a document.....	84
Characters are not being displayed.....	85
Cannot add annotations.....	86
Cannot edit or delete annotations.....	87
Computer connection issues.....	iv
The computer does not recognize the Digital Paper.....	88
Cannot transfer documents from a computer to the Digital Paper.....	89
Other.....	iv
Precautions.....	90
Legal Notice.....	94
Specifications.....	95

Digital Paper System
DPT-RP1

Turning the power on/off

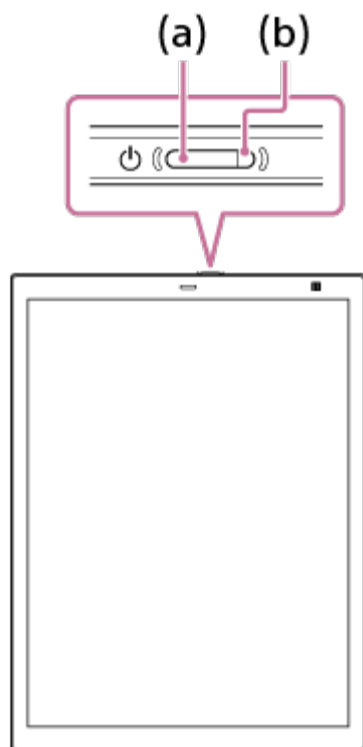

To turn the power on

Press the  (power) button (a).

The charge indicator (b) will blink in orange until startup is complete, at which point the charge indicator turns off.

The charge indicator lights up in red while charging and turns off when charging is complete.

Hint

- When you turn on the power for the first time, instructions for initial setup are displayed. Refer to the supplied "Quick Start Guide" when performing initial setup.
- If the charge indicator blinks three times in red, the battery is depleted. Connect the Digital Paper to a computer using the supplied USB cable to charge it.

To turn the power off

Press and hold the  (power) button (a) for about three seconds, until the "Turn power off" confirmation screen appears.

Entering sleep mode

Press the  (power) button (a) while the power is on. Sleep mode reduces battery consumption and prevents misoperation from unintentionally touching the screen.

To cancel sleep mode, press the  (power) button.

Note

- [DIGITAL PAPER] is displayed in the middle of the screen during Sleep mode.

Hint

- The Digital Paper is set to automatically enter sleep mode when it is not operated for 60 minutes, if it has been paired with the Digital Paper App. Launch the Digital Paper App on the computer, then click [Settings] — [General Settings] — [Edit], and select a time for [Auto sleep].


Related Topic

- [Setting the screen lock](#)

Digital Paper System DPT-RP1

About the battery

When you press the  (home) button, the battery icon (a) appears in the top right corner of the home menu, allowing you to check the remaining battery power and the charging status of your Digital Paper.

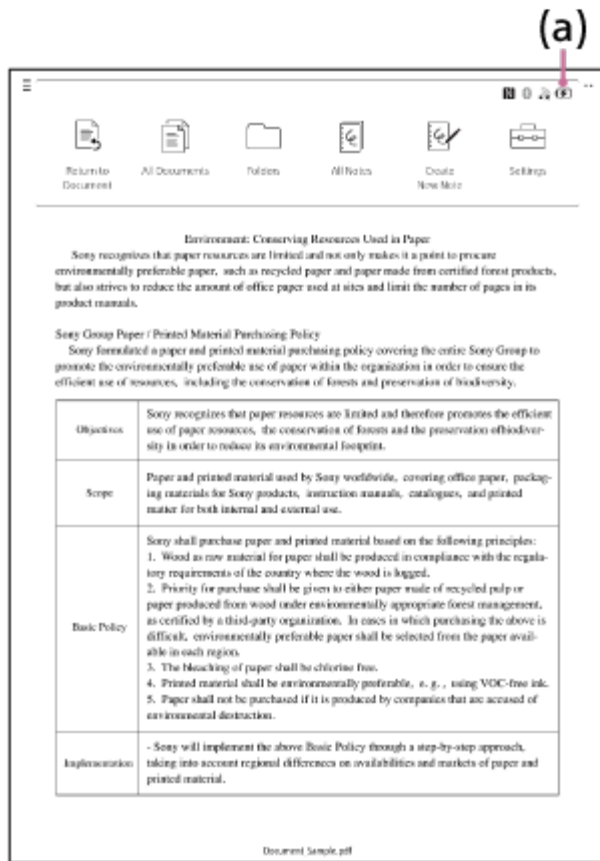

-  : When the icon contains four bars, the battery is full, and the number of bars decreases as the battery is depleted
-  : Charging complete
-  : Currently charging

Extending the life of the battery

- When you will not be using the Digital Paper for a long time, hold down the  (power) button for about three seconds to turn off the power.
- Do not leave the Digital Paper for an extended period of time without charging it. Doing so may lower battery performance.
- Use and store the Digital Paper within the recommended temperature range of 5 to 35 (41 °F to 95 °F).
- Turn off the Wi-Fi function and Bluetooth function on the Digital Paper when you are not using the Digital Paper App on the computer. Press the  (home) button and tap [Settings], then tap [Wi-Fi Settings] for the Wi-Fi function and [Bluetooth Settings] for the Bluetooth function to remove the check mark.

- The remaining battery power and charging status of the pen cannot be viewed on the home menu. When the battery becomes low, a message will appear on the Digital Paper if you move the pen close to it. Please charge the pen before the battery is completely drained.

Digital Paper System
DPT-RP1

Setting the screen lock

For security purposes, the Digital Paper can be protected by a screen lock. When the screen lock is set, a lock password must be entered after the Digital Paper is turned on or awoken from sleep mode.

1 Press the  (home) button, and tap [Settings].

2 Tap [Screen Lock] — [Screen Lock] — [Enable] — [OK].

3 Enter a lock password, and tap [OK].

The lock password can be any combination of 4 to 20 alphanumeric characters and symbols.

Disabling the screen lock function

Press the  (home) button, and tap [Settings] — [Screen Lock] — [Screen Lock]. Enter the lock password, and tap [OK]. Then select [Disable] and tap [OK].

Note

- Do not use a lock password that would be easy for third parties to guess. Also, change the lock password periodically.
- Make sure that you do not forget the lock password that you set. If you forget the lock password, please consult your nearest Sony dealer or Digital Paper Support. The lock can be removed, but doing so will erase all of the documents on the Digital Paper.
- The Tab key and Space key are inoperable when entering a lock password.

Related Topic

- [Disabling the screen lock via FeliCa card/FeliCa-compatible device](#)

Digital Paper System
DPT-RP1

Disabling the screen lock via FeliCa card/FeliCa-compatible device

To waken the Digital Paper from sleep mode, instead of entering a lock password, a FeliCa card, FeliCa-compatible mobile phone, smartphone, or similar item can be held against the Digital Paper to disable the screen lock. After setting a lock password, follow the steps below to register a FeliCa card/FeliCa-compatible device to the Digital Paper.

- 1 Press the  (home) button, and tap [Settings].
- 2 Tap [Screen Lock] — [NFC Card Lock Release Settings].
- 3 Enter a lock password, and tap [OK].
- 4 Tap [Register NFC Card], and if a message asking whether you want to turn on NFC appears, tap [Yes].
- 5 Align the center of the FeliCa card or  (FeliCa mark) on the FeliCa-compatible device with  (N mark) on the Digital Paper for about two seconds.



To disable the the screen lock

When the entry screen for the lock password is displayed, align the center of the FeliCa card or  (FeliCa mark) on the FeliCa-compatible device with  (N mark) on the Digital Paper for about two seconds.



To delete the registered information for a FeliCa card/FeliCa-compatible device

Press the  (home) button, and tap [Settings] — [Screen Lock] — [NFC Card Lock Release Settings]. Enter the lock password, and tap [OK] then [Deregister NFC Card].

To register a different FeliCa card/FeliCa-compatible device

Only one FeliCa card/FeliCa-compatible device can be registered at a time. Delete the information for the FeliCa card/FeliCa-compatible device that is currently registered before registering a different FeliCa card/FeliCa-compatible device.

Note

- If the device is placed on a metal desk, it may not function properly, such as failing to communicate with the FeliCa card or devices that support FeliCa. In this case, keep a few centimeters between the device and the metal desk.


Related Topic

- [Setting the screen lock](#)

Digital Paper System DPT-RP1

Home menu

The home menu is displayed when you press the  (home) button.

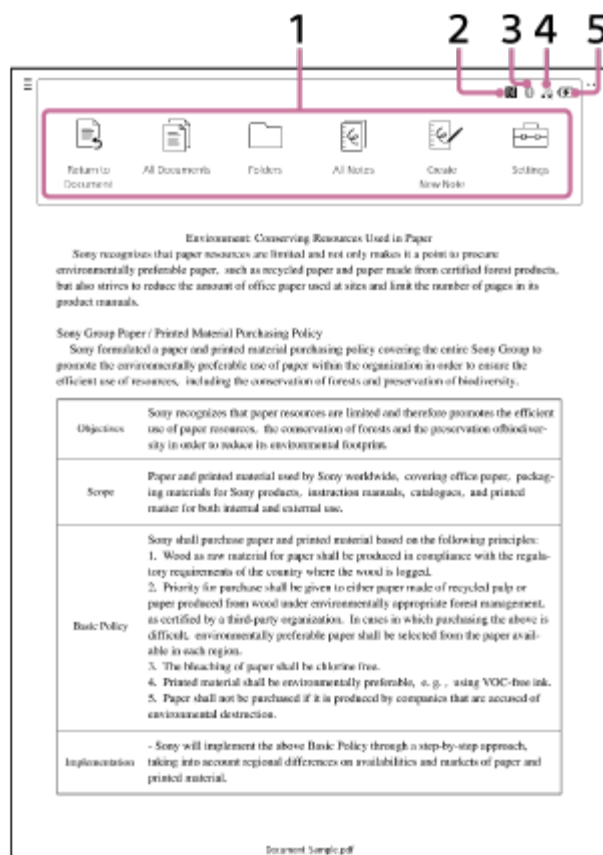

1. Function icons
2. NFC function status (On/Off)
3. Connection status when the Bluetooth function is on
 -  : Bluetooth connected
 -  : Bluetooth not connected
4. Wi-Fi network signal status
 -  : Wi-Fi network connected (number of bars indicates signal strength)
 -  : Wi-Fi network inaccessible
 -  : Wi-Fi function off
5. Remaining battery/charge indicator
 -  : When the icon contains four bars, the battery is full, and the number of bars decreases as the battery is depleted
 -  : Charging complete
 -  : Currently charging


To close the home menu

Press the  (home) button, or tap an area outside of the home menu.

Digital Paper System DPT-RP1

Document screen

Tap anywhere on the screen of an open document to display the tool bar.

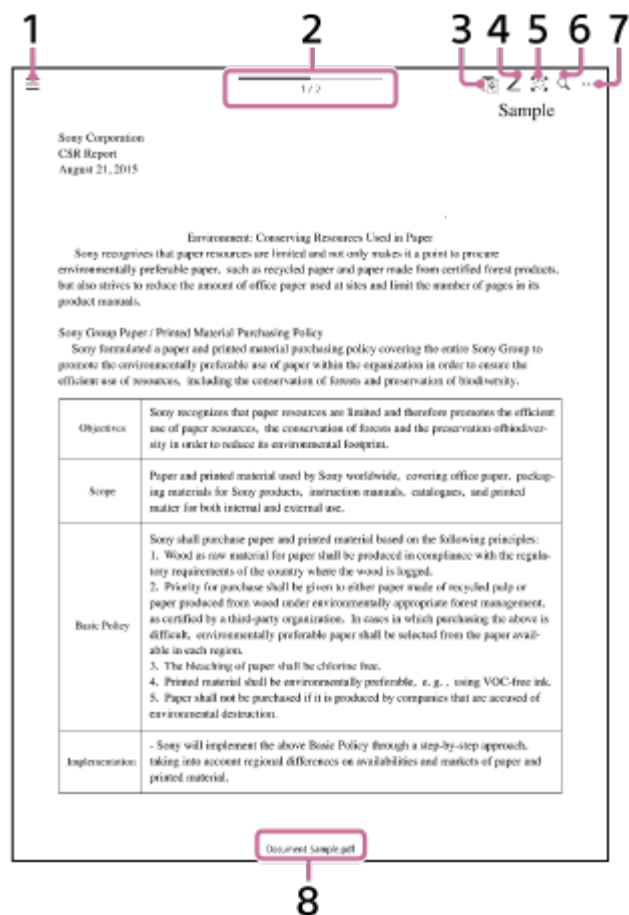

1. ☰ (quick access list)
Select and display a document from Recently Read or another document from the current folder.
2. Page position indicator
Tap along the line to change page.
3. 📄 (Paste)
Paste the handwriting that you selected with Copy/Cut.
This icon does not appear if Copy/Cut has not been selected.
4. 🖋️ (pen settings)
Set the [Pen Color], [Pen Thickness], or [Eraser Size].
5. 🔍 (zoom in)
Zoom in on part of a document.
6. 🔍 (search)
Search for the entered text or for the handwritten mark that you select.
7. ⋮ (option)
Display a menu of available operations based on the situation.

8. Filename

To hide the tool bar


Tap an area outside of the tool bar.

4-597-942-11(2) Copyright 2016 Sony Corporation

Digital Paper System DPT-RP1

Digital Paper App (dedicated app) screen

The Digital Paper App must be used to operate the Digital Paper with your computer.
After connecting the computer to the Digital Paper, launch the Digital Paper App on your computer.

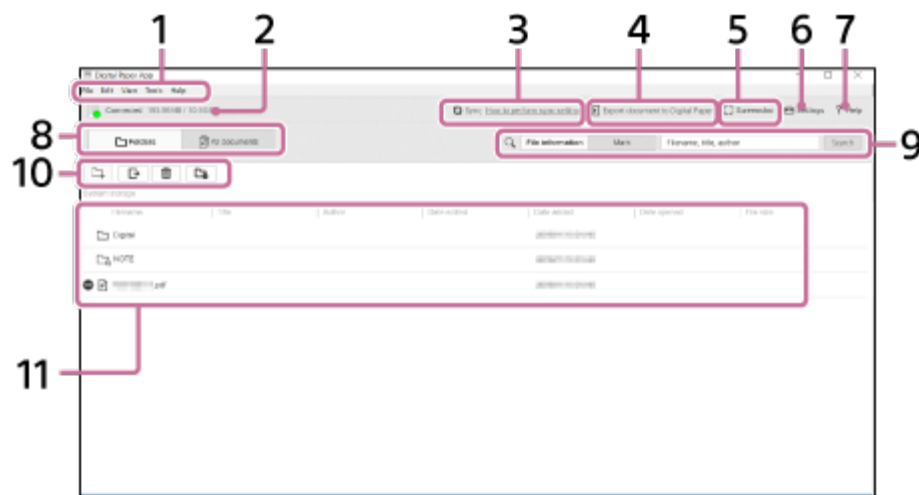

1. Menu
Operate the Digital Paper App from the menu.
2. Connection status with the Digital Paper and empty space/total available space
3. Execute sync. Will not operate if the sync folder is not set.
4. [Transfer documents to Digital Paper]
Transfer documents from the computer to the Digital Paper.
5. [Screenshot]
Take a screenshot of the Digital Paper, and save it to the computer.
6. [Settings]
Change the settings.
7. [Help]
Display this Help Guide or open the product support website.
8. [Folders]/[All documents]
Switch the screen display on the Digital Paper App.
9. [File information]/[Mark]/[Search]
Search for documents within the Digital Paper.
10. (New folder)
Create a new folder on the Digital Paper. Click [Folders] and open a folder on your Digital Paper before creation.
 (Transfer documents to computer)
Transfer documents from the Digital Paper to the computer.
 (Delete)
Delete folders and documents from the Digital Paper.
 (Set sync folder)
Set the sync folder.
- 11 Documents/Folders* list
 - * You can change the display order of the list by clicking on an item title.

- You can confirm whether a file is a document, note, etc. based on the icon.
 -  : Document
 -  : Document to sync
 -  : Note
 -  : Note to sync
 -  : Unread document/note
 -  : Folder
 -  : Folder to sync
- Right-click on an item to display a menu of available operations based on the situation.
- When you double-click on a folder name, the display switches to that folder.

* Folders are only displayed when the Digital Paper App is in Folder view.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)
- [Setting up the Digital Paper App](#)

Digital Paper System
DPT-RP1

Connecting via Wi-Fi/Connecting using a USB cable

After the Digital Paper has been paired with the Digital Paper App, documents can be transferred and otherwise operated, by connecting the Digital Paper to the computer. For how to pair with the Digital Paper App, see the links in “Related Topics.” There are three ways to connect to a computer: “connect via Wi-Fi,” “connect via the supplied USB cable,” and “connect via Bluetooth®.” This section explains how to connect via Wi-Fi and connect via the supplied USB cable. For how to connect via Bluetooth, see the links in “Related Topics.”


To connect via Wi-Fi

- 1 Press the  (home) button on the Digital Paper, and tap [Settings].
- 2 Tap [Wi-Fi] to add a check mark.
- 3 Tap [Wi-Fi Settings] and then the SSID of the desired Wi-Fi network from the [Saved Network List].
 - If the Wi-Fi network that you want to connect to is not displayed, use the Digital Paper App to add the Wi-Fi network. For details, see the links in “Related Topics.”
 - If you want to connect the Digital Paper to a computer while the device is in sleep mode, set [Keep Wi-Fi On During Sleep] to either [Always enabled] or [Enabled only when plugged in].
- 4 Connect the computer to the same network as the Digital Paper.

Communication is not possible if you connect the computer and the Digital Paper to different networks.

To connect using a USB cable

Connect the supplied USB cable to the micro USB connector on the Digital Paper and to a USB connector on the computer.

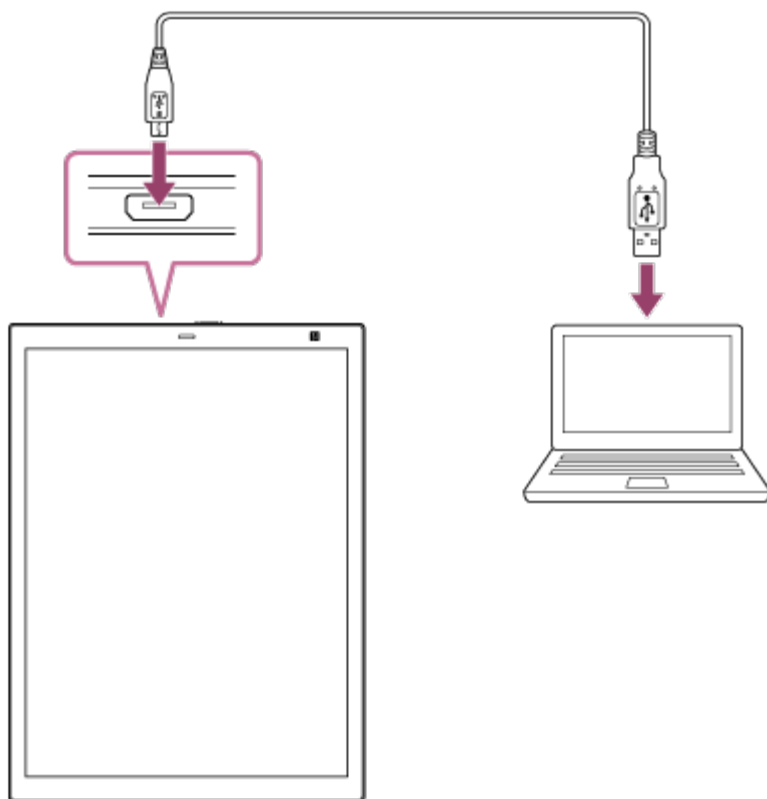

To check the connection status

Launch the Digital Paper App on the computer. If [Connected] is displayed in the upper left portion of the screen, the Digital Paper and the computer are properly connected.

Hint

- When removing the USB cable, close the Digital Paper App before doing so.

Related Topic

- [Connecting via Bluetooth](#)
- [Setting up the Digital Paper App](#)
- [Changing the Digital Paper settings using the Digital Paper App](#)

Digital Paper System
DPT-RP1

Connecting via Bluetooth

To make a Bluetooth connection with your computer, you must first complete Bluetooth pairing (device registration). Once pairing is complete, you can operate the Digital Paper from your computer the next time you use the Digital Paper if the Bluetooth function of the Digital Paper is turned on. (When the Digital Paper App is launched, Windows can automatically connect to the Bluetooth-paired Digital Paper.)

Perform the steps below to pair.

- 1 Press the  (home) button and tap [Settings].
- 2 Tap [Bluetooth] to add a check mark.
- 3 Tap [Bluetooth Settings] — [Bluetooth Pairing] to change the Digital Paper to pairing standby mode.
- 4 Turn on the Bluetooth function on the computer and operate the computer to complete the device registration of the Digital Paper.

For details, see the instruction manual for your computer.
- 5 Tap [Close] in the [Bluetooth Pairing...] dialog box on the Digital Paper to close.

To connect to the Digital Paper from your computer


- For Windows

When setting [Bluetooth automatic connection] on the Digital Paper App to on:

Automatically connects to the Bluetooth-paired Digital Paper when the Digital Paper App is launched.

When setting [Bluetooth automatic connection] on the Digital Paper App to off:

Click [Bluetooth automatic connection] on the screen of the Digital Paper App to connect the Digital Paper.

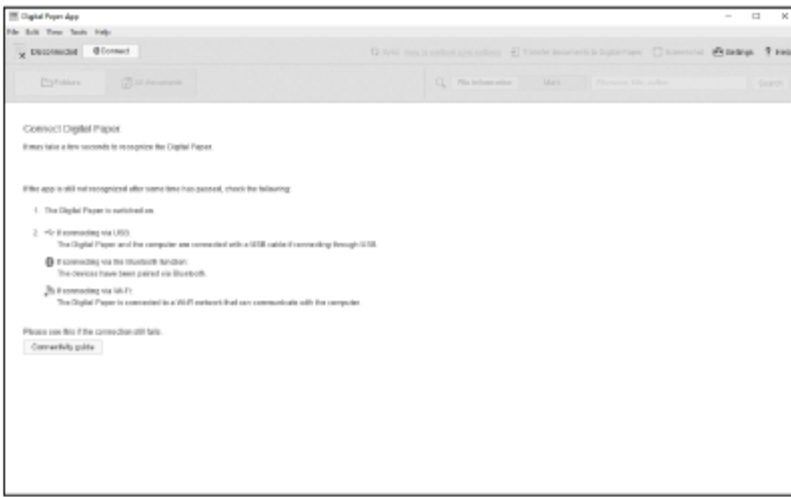

- For Mac

It is unavailable to connect via Bluetooth automatically. Connect via Bluetooth using the Mac OS function. For details, refer to the operating instructions of the Mac.

Notes on Bluetooth auto connection (Windows)

- If the Digital Paper is automatically connected to the computer via Bluetooth when the computer and other devices are connected via Bluetooth as an access point, the other devices are disconnected from the computer. When the computer and other devices keep connecting via Bluetooth, set [Settings]-[Bluetooth automatic connection] of the Digital Paper App to off.
- When multiple Digital Papers are connected via Bluetooth, Bluetooth connection cannot be performed. Only the Bluetooth-paired Digital Paper can be connected.

Hint

- If [Disabled] is set for [Keep Bluetooth Connection On During Sleep] on the Digital Paper, the Bluetooth connection is disconnected when the Digital Paper goes into sleep mode. After the Digital Paper is awoken from sleep mode, it will need to be manually reconnected (unless [Bluetooth automatic connection] is set to on when using a Windows computer).
- If you want to maintain the Bluetooth connection even when the Digital Paper goes into sleep mode, change the setting to [Settings] — [Bluetooth Settings] — [Keep Bluetooth Connection On During Sleep] on the Digital Paper.
- If your computer enters sleep or hibernate mode, or is turned off, the Bluetooth connection with the Digital Paper is disconnected. After resuming or restarting the computer, reconnect. (When your computer is a Windows computer and [Bluetooth automatic connection] is set to on, reconnection is not required.)

Digital Paper System
DPT-RP1

Transferring a document from a computer

Use the Digital Paper App to transfer documents. Only PDF files can be transferred to the Digital Paper.

- 1 Connect the computer to the Digital Paper.
- 2 Launch the Digital Paper App on the computer.
- 3 Click [Folders] and open a folder on your Digital Paper (transfer destination).
- 4 Select a file/folder on your computer, then drag-and-drop it into the Digital Paper App.
Multiple files/folders can be selected and transferred together.

Note

- If the Wi-Fi function or Bluetooth function is turned off or the USB cable is removed during the transfer, the data may be corrupted.
- The maximum file size for transfers is 1 GB per file.
- Data cannot be transferred while [All documents] is selected on the Digital Paper App or while search results are being displayed. Click [Folders] and open a folder on your Digital Paper to transfer.

Hint

- Files can also be transferred by clicking [Transfer documents to Digital Paper] on the Digital Paper App.
- The amount of free space on the Digital Paper is displayed in the top left of the Digital Paper App screen.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)

- Transferring a document to a computer
- Syncing the Digital Paper with a computer
- Changing the organization of documents/folders on the Digital Paper
- Using the print operation to transfer and display data on the Digital Paper

Digital Paper System
DPT-RP1

Using the print operation to transfer and display data on the Digital Paper

Use the print operation to transfer open files or web pages from your computer to the Digital Paper. Files and web pages that are not in PDF format will be converted into PDF files when transferred.

Note

- This function is only available on computers that use the following operating systems (OS): Microsoft Windows 10, macOS 10.12 (Sierra), Mac OS X 10.11 (El Capitan), and Mac OS X 10.10 (Yosemite).

- 1 Connect the computer to the Digital Paper.
- 2 Use a program on your computer to display the file or web page that you want to transfer to the Digital Paper.
- 3 Print to the Digital Paper.
 - For Windows
On the Print screen, select [Digital Paper] from the Printer list, and print.
 - For Mac
On the Print screen, select [PDF] — [Print PDF to Digital Paper].

When you perform the print operation, the Digital Paper App will open, and the transfer status will be displayed. Files and web pages that are not in PDF format will be converted into PDF files and transferred.

When the transfer is complete, the PDF file that was transferred will open on the Digital Paper. The PDF file that was transferred will be saved to the [Received] folder in [System storage].

Note

- If the Wi-Fi function or Bluetooth function is turned off or the USB cable is removed during the transfer, the data may be corrupted.
- The maximum file size for transfers is 1 GB per file.

- Connecting via Wi-Fi/Connecting using a USB cable
- Connecting via Bluetooth
- Transferring a document from a computer
- Syncing the Digital Paper with a computer
- Changing the organization of documents/folders on the Digital Paper

Digital Paper System
DPT-RP1

Transferring a document to a computer

Use the Digital Paper App to transfer documents.

- 1 Connect the computer to the Digital Paper.
- 2 Launch the Digital Paper App on the computer.
- 3 Select a file/folder on the Digital Paper via the Digital Paper App.
Multiple files/folders can be selected and transferred together.
- 4 Click  (Transfer documents to computer), and select a folder on your computer (transfer destination).

Note

- If the Wi-Fi function or Bluetooth function is turned off or the USB cable is removed during the transfer, the data may be corrupted.
- The maximum file size for transfers is 1 GB per file.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)
- [Transferring a document from a computer](#)
- [Syncing the Digital Paper with a computer](#)
- [Creating a back up](#)

Digital Paper System
DPT-RP1

Creating a back up

In preparation for the unlikely event that the data on your Digital Paper is accidentally erased or that a malfunction causes the data to be deleted or corrupted, be sure to back up all important content to your computer.

- 1 Connect the computer to the Digital Paper.
- 2 Launch the Digital Paper App on the computer.
- 3 Click [Folders], and open the folder labeled [System storage] at the top of the Digital Paper.
- 4 Select all of the folders and documents within the [System storage] folder.
- 5 Click  (Transfer documents to computer), and select a folder on your computer (transfer destination).

Note

- If the Wi-Fi function or Bluetooth function is turned off or the USB cable is removed during the transfer, the data may be corrupted.
- The maximum file size for transfers is 1 GB per file.


Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)
- [Transferring a document to a computer](#)
- [Syncing the Digital Paper with a computer](#)

Digital Paper System
DPT-RP1

Syncing the Digital Paper with a computer

Using the Digital Paper App, you can sync PDF files within in a specific folder on your computer (a) with those within a specific folder on the Digital Paper (b). Content that is added, changed, or deleted is done so on your computer and the Digital Paper.

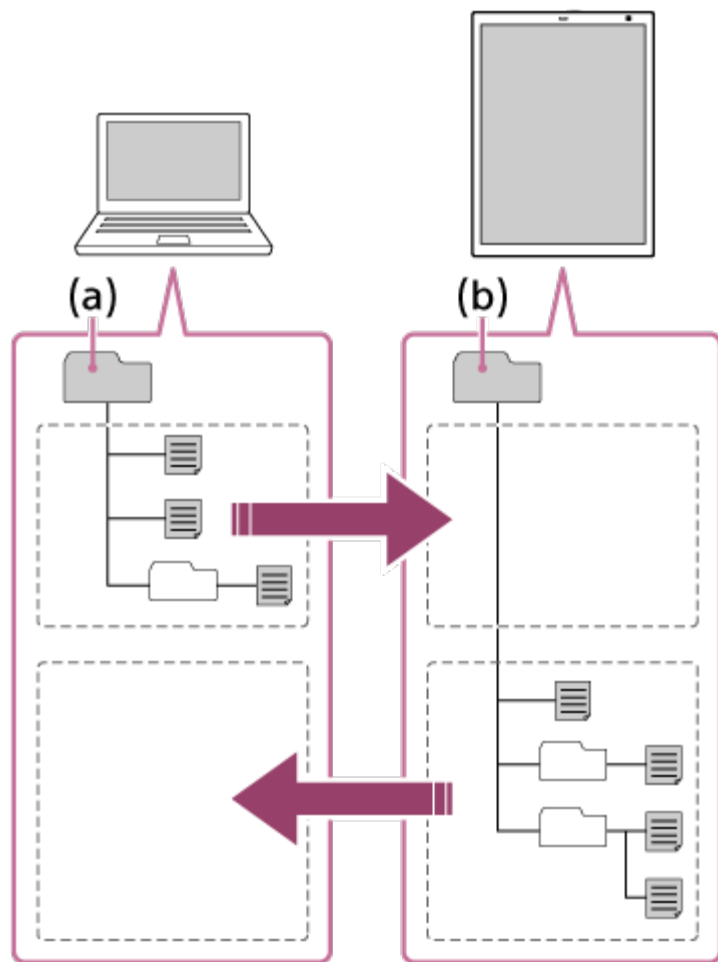

- 1 Connect the computer and the Digital Paper.
- 2 Launch the Digital Paper App on the computer.
- 3 On the Digital Paper App, select the folder you want to sync and click  (Set sync folder).

- 4 On the folder selection screen, select the folders of the computer.

When the sync settings are successful, the corresponding folder/document/note icon changes.

- 5 Click  (Sync).

The specified folder is synced with the Digital Paper.

To update the contents of the synced folder

Click  (Sync).

To delete the sync settings

On the Digital Paper App, right-click the folder configured with the sync settings and click [Delete sync setting].

Hint

- If separately editing the same PDF file on your computer and the Digital Paper, the PDF file on the Digital Paper is synced on the computer and the PDF file on the computer is saved with a different name.
- Even if you delete the sync settings, the folders and files saved on the Digital Paper and computer are not deleted.

Note

- Only the designated folders — and only the PDF files in those folders — are synced. Folders with no PDF files are not synced.
- You cannot configure or delete the sync settings while syncing.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)

Digital Paper System
DPT-RP1

Searching for a document or folder (Digital Paper App)

Using the Digital Paper App, the folder names/file names within the Digital Paper can be searched, as well as the title/author listed in the document settings.

1 Connect the computer to the Digital Paper.

2 Launch the Digital Paper App on the computer.

3 Set the search parameters.

When you want to search all of the documents, click [All documents].

When you want to search within a specific folder, click [Folders] and select the folder you want to search.

4 Click [File information] — [Filename, title, author], then enter the text and click [Search].

5 Double-click on one search result.

When a folder is selected, the documents within the folder are displayed in the Digital Paper App.

When a document is selected, the computer will open the document using a PDF-viewer program.

To close the search results list

Click [Close search results].

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)
- [Searching for documents that contain a specific written mark \(Digital Paper App\)](#)

Digital Paper System
DPT-RP1

Searching for documents that contain a specific written mark (Digital Paper App)

Select a mark using the Digital Paper App to search for documents on the Digital Paper which contain the mark.

1 Connect the computer to the Digital Paper.

2 Launch the Digital Paper App on the computer.

3 Set the search parameters.

When you want to search all of the documents, click [All documents].

When you want to search within a specific folder, click [Folders] and select the folder you want to search.

4 Click [Mark], then select the mark you want to search and click [Search].

The documents that contain the mark will be displayed.

Even when there are multiple hits within a single document, the search results are displayed as just one document.

5 Double-click on one search result.

The computer will open the document using a PDF-viewer program.

To close the search results list

Click [Close search results].

Note

- Depending on the way written, marks may not be recognized.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)
- [Searching for a document or folder \(Digital Paper App\)](#)
- [Searching for a handwritten mark within a document](#)
- [Searching for a string of text within a document](#)

Digital Paper System
DPT-RP1

Changing the organization of documents/folders on the Digital Paper

Using the Digital Paper App, you can create new folders on the Digital Paper, as well as rename, move, copy, and delete the existing folders/documents.

1 Connect the computer to the Digital Paper.

2 Launch the Digital Paper App on the computer.

3 Click [Folders] or [All documents] to display the folder/document you want to edit.

To move/create a new folder, click [Folders] to display the folders.

To create a folder

Click  (New folder) at the level where you want to make a new folder. Then input the name of the folder and click [OK].

To change the folder name/file name

Right-click to select a folder/document, and then click [Rename]. Proceed to enter the folder name/file name, and then click [OK].

To move/copy

Right-click to select a folder/document, and then click [Cut (within Digital Paper)]/[Copy (within Digital Paper)]. Next, display the folder that you want to move/copy to and right-click, then click [Paste (within Digital Paper)].

To delete

Select a folder/document, and then click  (Delete).

Note

- Folder names and file names that contain certain special characters may not be displayed properly.
- Folders and documents cut or copied with the Digital Paper App cannot be pasted anywhere other than in the Digital Paper App. If copying a folder or document to your computer, copy using the [Transfer documents to computer] function.
- Files and folders cut or copied on your computer cannot be pasted in the Digital Paper App. If copying to the Digital Paper App, copy using the

[Transfer documents to Digital Paper] function.

- When renaming or moving the synced folder, the sync settings are deleted. If you want to sync continuously, set [Set sync folder] again.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)

4-597-942-11(2) Copyright 2016 Sony Corporation

Digital Paper System
DPT-RP1

Adding/editing a note template

Using the Digital Paper App, you can add a note template to the Digital Paper. You can also delete templates and change their names.

- 1 Connect the computer to the Digital Paper.
- 2 Launch the Digital Paper App on the computer.
- 3 Click [Settings] to display the [Settings] screen.

To add a note template

Click [Add] under [Note template].

Click [Select file], and then select the PDF file you want to use as a template from your computer. Enter a name for the template, then click [OK].

To delete a note template

Select a template, and click [Delete].

To change the name of a template

Select a template, and click [Rename]. Then enter a name for the template, and click [OK].

Note

- PDF files that are password protected cannot be added as templates.

Hint

- For PDF files that have multiple pages, only the first page will be registered as a template.

Related Topic

- [Selecting defaults for the note template](#)

4-597-942-11(2) Copyright 2016 Sony Corporation

Digital Paper System
DPT-RP1

Opening a document

You can organize the All Documents list by [Date Read] or [Date Modified] and select a document from there.

1 Press the  (home) button, and tap [All Documents].

2 Tap [Date Read] or [Date Modified].

 is displayed to the left of documents, and  is displayed to the left of notes.
For unread files,  is displayed.

3 Tap the document you want to open.

To delete a document

Tap anywhere on the screen of a document to display the tool bar, and then tap ... (option) in the upper right of the document screen — [Delete This Document].

To change the document name

Tap anywhere on the screen of a document to display the tool bar, and then tap ... (option) in the upper right of the document screen — [Change Document Name].

Related Topic

- [Selecting and opening from a folder](#)
- [Opening a different document from the quick access list](#)

Digital Paper System
DPT-RP1

Selecting and opening from a folder

1 Press the  (home) button, and tap [Folders].

2 Tap to open a folder, and then tap the document you want to display.

To return to a higher tier of folders, tap the name of the folder at the top of the screen.

 is displayed to the left of documents, and  is displayed to the left of notes.

For unread files,  is displayed.


Related Topic

- [Opening a document](#)
- [Opening a different document from the quick access list](#)

Digital Paper System DPT-RP1

Opening a different document from the quick access list

Select and display other documents from the list of the recently read documents or documents belonging to the same folder as the document that is currently being displayed on the Digital Paper.

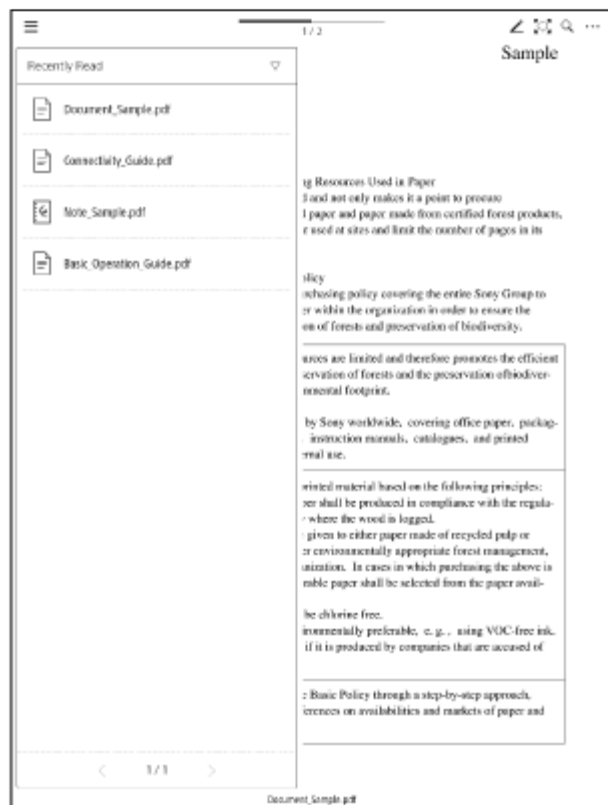

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ☰ (quick access list) in the top left corner of the document screen.
- 3 When you want to switch the display of the quick access list, tap [Recently Read] or [Documents in the Same Folder] at the top of the quick access list, and then tap the other item.
- 4 Tap the document you want to display.

📄 is displayed to the left of documents, and 📝 is displayed to the left of notes.
For unread files, 📄 is displayed.




Related Topic

- [Opening a document](#)
- [Selecting and opening from a folder](#)

Digital Paper System
DPT-RP1

Turning the page

Swipe (move your finger) in the direction of the next page.

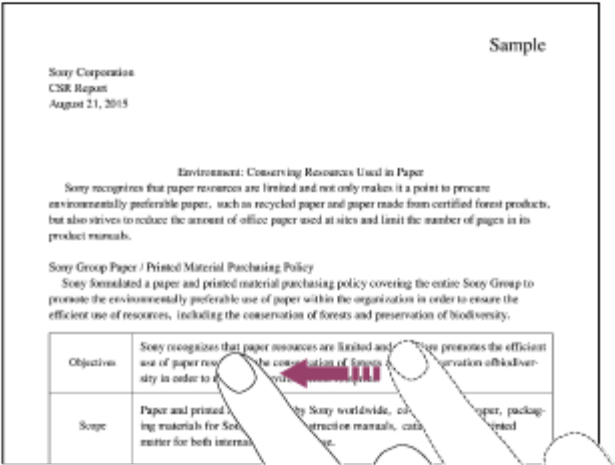

When [Page Flow] is set to [Right to left], swipe right to left, and when [Page Flow] is set to [Left to right], swipe left to right. For a PDF file for which this setting was not designated on a computer, turn to the next page by swiping right to let by default.

- Related Topic
- [Changing how to turn pages](#)

Changing how to turn pages

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ... (option) in the upper right of the document screen — [Page Flow].
- 3 To turn the page by swiping from right to left, tap [Right to left], and to turn by swiping from left to right, tap [Left to right].

Digital Paper System
DPT-RP1

Zooming in on a document

Zoom in on part of a document. While zoomed in, you can write using the pen, delete items written with the pen, and highlight items.

- 1 Tap anywhere on the screen of a document to display the toolbar.
- 2 Tap  (zoom in) in the upper right of the document screen.
- 3 Tap the location you want to zoom into, or use your finger or the pen to encircle the area you want to zoom into.

The document is zoomed in.

To return to the original size

Tap  [Exit] in the upper right of the document screen.

Note

- You cannot turn the page while zoomed in.

Digital Paper System
DPT-RP1

Display page thumbnails

You can search for a page by displaying a list of 16 pages on a single screen.



- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ... (option) in the upper right of the document screen — [Page Thumbnails].

To return the display to normal size

Tap any one of the pages.

Hint

- When switching from documents that are being displayed side-by-side, nine pages are displayed in the list.

Digital Paper System
DPT-RP1

Displaying left and right pages in a two-page spread

Display the pages of a single document two at a time, as a left-right two-page spread.

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ... (option) in the upper right of the document screen — [Two-Page Spread].

To change the page settings

Depending on whether the document has a cover page, you can change whether to start the two-page spread from page one. Tap ... (option) — [Two-Page Spread Settings]. Select [Without cover] to display the two-page spread from page one, and select [With cover] to display the spread from page two.

To return to a single page display

Tap ... (option) — [Display Single Page].

Note

- When displaying a document as a two-page spread, you cannot display two documents side-by-side, rotate the document, create a side-note, or add/delete a page from a note.
- You cannot draw across the span of two pages.

Related Topic

- [Displaying documents side-by-side](#)

Digital Paper System
DPT-RP1

Displaying documents side-by-side

Display the same document twice in a side-by-side arrangement. You can also display two different documents or notes in a side-by-side arrangement.

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ... (option) in the upper right of the document screen — [Display Documents Side-by-Side].

To display different documents or notes in a side-by-side arrangement

Tap ☰ (quick access list) on the other document or note you want to display, and tap the document that you want to display side-by-side. When you want to switch the display of the quick access list, tap [Recently Read] or [Documents in the Same Folder] at the top of the quick access list, and then tap the other item.

To switch which side the documents are displayed on

Tap ... (option) on either the left or right — [Swap Screens].

To return to a one-page display of either side

Tap ... (option) on the document you want to display, and then tap [Display This Document Only].

Note

- When documents are displayed side-by-side, the document cannot be rotated.
- The documents cannot be displayed top and bottom.
- The quick access list contains documents that were recently opened, or documents in the same folder as the document currently being displayed. Documents that do not appear in the quick access list cannot be displayed in a side-by-side arrangement.

Hint

- After you have displayed different documents and notes in a side-by-side arrangement, you can display the most recent arrangement of documents/notes by tapping ... (option) — [Open Previous Side-by-Side Documents].

Related Topic

- [Displaying left and right pages in a two-page spread](#)
- [Creating a side-note on an open document](#)

Digital Paper System
DPT-RP1

Rotating documents

Rotate a document 90 degrees.

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ... (option) in the upper right of the document screen — [Rotate].

To return the document to its original orientation

Once again, tap ... (option) — [Rotate].

Note

- When documents are displayed side-by-side or when a document is being displayed as a two-page spread, the document cannot be rotated.

Digital Paper System
DPT-RP1

Searching for a string of text within a document

Search for a string of text within the document that is currently being displayed on the Digital Paper.

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap 🔍 (search) in the upper right of the document screen.
- 3 Tap the [Search Text] tab — the search term input field. Then use the keyboard to enter a string of text, and tap [Search].
- 4 Tap one of the search results.
The page that you tapped will be displayed.

To close the search results list

Tap an area outside of the search screen.

Note

- There is no differentiation between upper case and lower case letters.
- Handwritten text and text that is embedded in an image cannot be searched.

Related Topic

- [Searching for a handwritten mark within a document](#)
- [Searching for documents that contain a specific written mark \(Digital Paper App\)](#)

Digital Paper System
DPT-RP1

Searching for a handwritten mark within a document

Select a specific mark, and search for the handwritten mark within the document that is currently being displayed on the Digital Paper.

1 Tap anywhere on the screen of a document to display the tool bar.

2 Tap 🔍 (search) in the upper right of the document screen.

3 Tap the [Search Mark] tab, and then select the mark and tap [Search].

Even when there are multiple hits for a single page, they are compiled and displayed as a single search result.

4 Tap one of the search results.

The page that you tapped will be displayed.

To close the search

Tap an area outside of the search screen.

Note

- Depending on the way written, marks may not be recognized correctly.

Related Topic

- [Searching for a string of text within a document](#)
- [Searching for documents that contain a specific written mark \(Digital Paper App\)](#)

Searching using document information and other information

You can search for file names, titles, or authors of a document on the Digital Paper.

- 1 Press the  (home) button and tap [All Documents].
- 2 Tap  (search) in the upper right of the document screen.
- 3 Tap the [File Information] tab, insert a string of text, and tap [Search].
The search results are displayed.
- 4 Tap a search result.
The document opens.

To close the search results list

Tap [Return to All Documents].

Digital Paper System
DPT-RP1

Searching for documents that contain a specific mark

Search for documents on the Digital Paper that contain a handwritten mark by selecting the specific mark.

1 Press the  (home) button and tap [All Documents].

2 Tap 🔍 (search) in the upper right of the document screen.

3 Tap the [Mark] tab, select the mark you want to search, and tap [Search].

The documents containing the mark are displayed.

Even if a document contains multiple instances of the mark, the document is displayed once in the search results.

4 Tap a search result.

The document opens.

To close the search result list

Tap [Return to All Documents].

Note

- Depending on the way written, marks may not be recognized correctly.

Digital Paper System
DPT-RP1

Viewing a sticky note attached by a previous Digital Paper model

The contents of handwritten sticky notes and text sticky notes that were added to a document using the previous Digital Paper model, "DPT-S1," can be viewed.

- 1 Tap  (handwritten sticky note) or  (text sticky note) on the document with your finger.

To close the handwritten sticky note/text sticky note screen

Tap an area outside of the sticky note.

Note

- Handwritten sticky notes/text sticky notes cannot be edited on this device.

Digital Paper System
DPT-RP1

Displaying a document on the computer

Documents that are saved to the Digital Paper can be opened using a PDF-viewer program on your computer.

- 1 Connect the computer to the Digital Paper.
- 2 Launch the Digital Paper App on the computer.
- 3 Double-click on the document you want to display.

The computer will launch a PDF-viewer program and display the document as read only.

Though the document is temporarily saved to the computer, it is deleted when the Digital Paper App is closed.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)

Digital Paper System
DPT-RP1

Handwriting on a document

- 1 Use the pen to write directly on the page.

Just like when using a normal pen and paper, you can lay the side of your palm flat against the screen as you write.

To change the pen type

Tap anywhere on the screen of a document to display the tool bar. Then, tap  (pen settings) in the top right corner of the document screen and select an item for [Pen Color] or [Pen Thickness].

Hint

- On the screen of the Digital Paper, the blue pen will appear black, and the red pen will appear gray. However, when transferred to a computer they will be displayed as blue and red, respectively.
- The contents of your handwriting are saved the moment you finish writing them.


Related Topic

- [Calibrating the pen](#)
- [Using the eraser](#)
- [Displaying the annotation list](#)

Digital Paper System DPT-RP1

Adding a highlight

- 1 Trace the text while pressing the highlight button (a) on the pen.

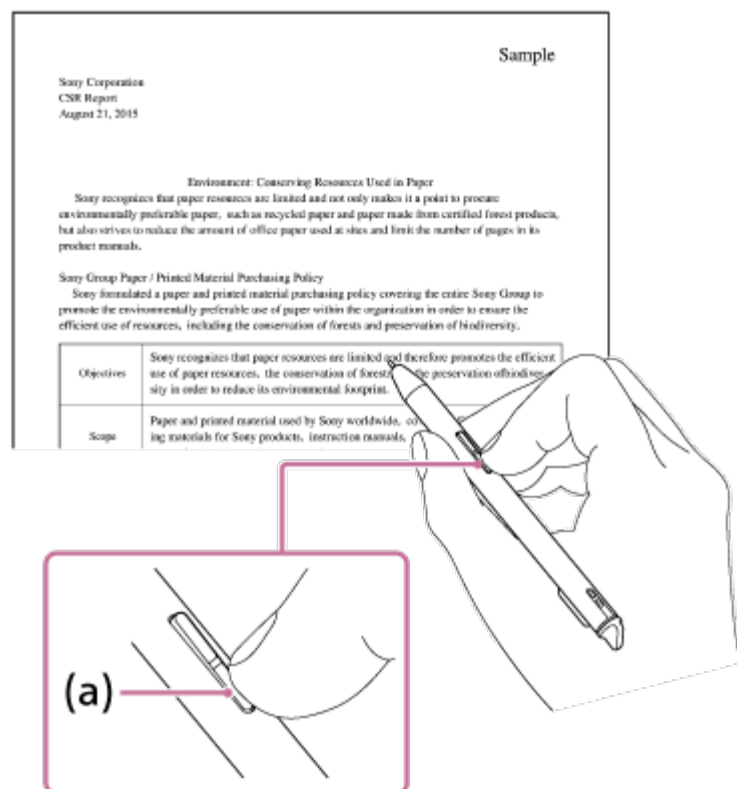

Note

- Highlights cannot be added to the following.
 - A document that was scanned (page contains only image data)
 - Text that is embedded in an image
 - An area that was handwritten on the Digital Paper
 - A note that does not contain text

Related Topic


- [Using the eraser](#)
- [Displaying the annotation list](#)

Digital Paper System DPT-RP1

Using the eraser


- 1 Select handwriting or highlights by passing over them with the pen while holding down the eraser button (a), and then lift the pen from the screen.

The handwriting or highlights that were passed over will be erased.

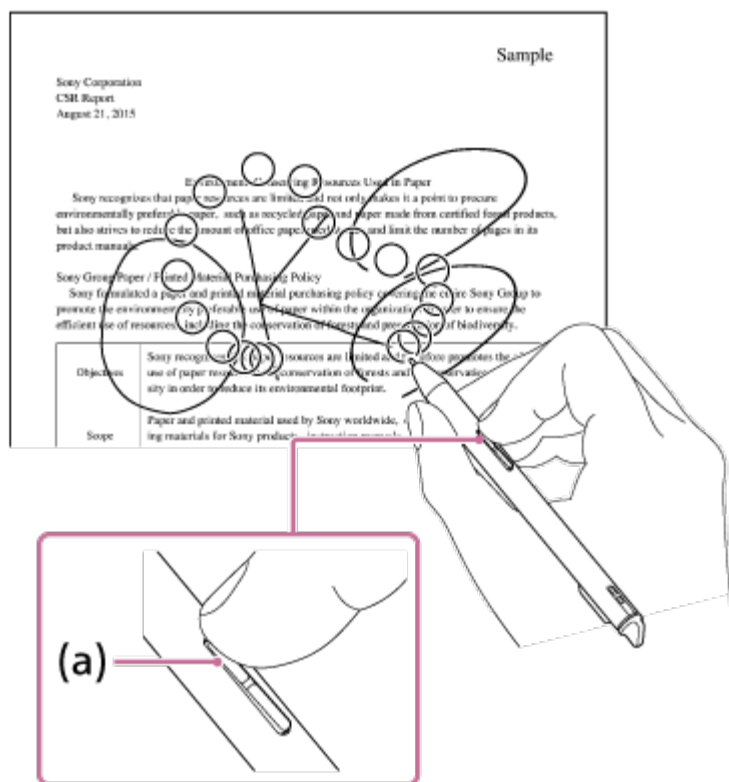


The eraser for the Digital Paper can erase the entirety of a line by selecting only a portion of it. It is not necessary to select the complete area that you want to erase, as you would when erasing pencil marks from normal paper. By selecting multiple lines, you can erase them all at once.

When erasing on paper

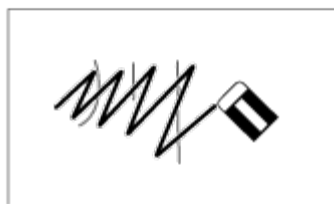

When erasing on Digital Paper

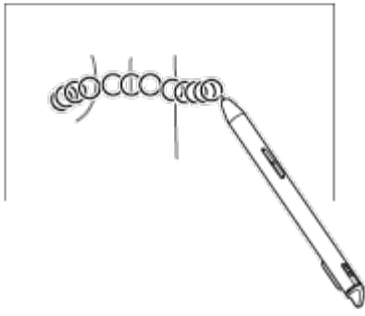

To change the size of the eraser

Tap anywhere on the screen of a document to display the tool bar. Then, tap  (pen settings) in the top right corner of the document screen and select an item for [Eraser Size].

Digital Paper System
DPT-RP1

Copying/cutting and moving handwritten items

You can copy, cut, and move handwritten items in the Digital Paper.

- 1 Tap anywhere in the document screen containing handwritten items you want to copy/cut to display the toolbar.

- 2 Tap ... (option) in the upper right of the document screen — [Area Selection].

The screen changes to the area selection mode screen.
You cannot turn the page in the area selection mode screen.

- 3 Use the pen to encircle the handwritten item you want to copy/cut, then select [Copy] or [Cut].

The handwritten items in the encircled area are selected.
When copying and cutting are complete, the screen returns to the document screen.

- 4 Tap  (Paste) in the document screen that you want to paste the handwritten item to.

The screen changes to the paste mode screen.
You cannot turn the page in the paste mode screen.

- 5 Tap the location you want to paste.

After pasting to the desired location, you can use the pen to adjust the position by dragging the handwritten item.
After adjusting, tap [Done] or tap anywhere other than the selected handwritten item to confirm the copy/move location.

To move the item within the same screen

After dragging the selected handwritten item to the location you want to move, tap [Done] or tap anywhere other than the selected handwritten item to confirm the copy/move location.

Note

- The paste operation is only available once. The  (Paste) icon disappears after pasting once.
- If you restart the Digital Paper, the [Copy]/[Cut] content is lost.
- If you [Copy]/[Cut] a new item, the previously selected content is overwritten.

Digital Paper System
DPT-RP1

Displaying the annotation list

Handwritten annotations and highlighted sections can be displayed in a list and searched for in pages.

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ... (option) in the upper right of the document screen — [Annotation List].
- 3 Tap the [Handwriting List] tab or the [Highlight List] tab.
- 4 Tap one item from the list.

The page that you tapped will be displayed.

To close the annotation list

Tap an area outside of the annotation list.

Note

- Depending on the number of annotations within a document, it may take time for the annotation list to appear.

Related Topic

- [Viewing a sticky note attached by a previous Digital Paper model](#)
- [Limiting edits to annotations](#)

Digital Paper System
DPT-RP1

Limiting edits to annotations

Change the settings so that annotations that were made to a document outside of your Digital Paper cannot be edited.

1 Press the  (home) button, and tap [Settings].

2 Tap [Limit Editing Annotations] — [Enable].

Note

- The handwritten sticky notes, text sticky notes, and bookmarks that were added to a document using the former model, “DPT-S1,” cannot be edited regardless of the [Limit Editing Annotations] setting.

Digital Paper System
DPT-RP1

Calibrating the pen

Set the way you hold the pen, and correct any displacement between where the pen touches the screen and where the writing appears.

1 Press the  (home) button, and tap [Settings].

2 Tap [System Settings] — [Pen Calibration].

3 From the four variations of how to hold the pen, select the variation that most resembles your own grip, and then tap [Next].

4 Use the pen to trace the dotted lines as you would normally write.

A line does not appear atop the dotted line as you trace. When you lift the pen, the line appears. Displacement in the line that you drew will be corrected on the following screen. Do not worry if this line is displaced.

5 Tap [Next].

The manual correction screen is displayed.

6 Tap the arrows that point up, down, left, and right to move the line that you drew and align it with the dotted line.

7 When the lines are in basically the same position, tap [Next].

The confirmation screen is displayed.

8 Trace the dotted line again, as you did in step 4.

If the line that you drew appears displaced, tap [Recalibrate] to return to the previous screen. The line that you drew on the confirmation screen will be displayed, so correct the placement again, as you did in step 6. After you finish correcting the position, tap [Next], and trace the dotted line on the confirmation screen again.

- 9 When the dotted line and the line that you drew appear to line up, tap [Save].

Digital Paper System
DPT-RP1

Creating a new note

There are two types of notes: “standalone notes” and “side-notes on documents.” This section explains how to create a standalone note. For how to create a side-note, see the links in “Related Topics.”

1 Press the  (home) button, and tap [Create New Note].

2 Select a template, and tap [OK].

A note is made in the Note folder under a file name that combines the name of the template with the date of creation.

Hint

- Notes are created as PDF files and can be handled the same way as documents. After creation, the Digital Paper App can be used to move the note to a different folder or change the file name.

Note

- Even when a document is open, performing the steps above will not create a side-note on the document.

Related Topic

- [Adding/editing a note template](#)
- [Creating a side-note on an open document](#)
- [Changing the organization of documents/folders on the Digital Paper](#)
- [Selecting defaults for the note template](#)

Digital Paper System
DPT-RP1

Opening a note

1 Press the  (home) button, and tap [All Notes].

2 Tap the note you want to display.

Hint

- Notes are documents (PDF files) marked with special attributes. As with documents, notes can also be opened from the All Documents list or the quick access list.

Related Topic

- [Opening a side-note](#)
- [Opening a document](#)
- [Selecting and opening from a folder](#)
- [Opening a different document from the quick access list](#)

Digital Paper System
DPT-RP1

Creating a side-note on an open document

There are two types of notes: “standalone notes” and “side-notes on documents.” This section explains how to create a side-note on a document. For how to create a standalone note, see the links in “Related Topics.”

Hint

- When a one-to-one relationship is made between a side-note and a document, simply select ... (option) — [Open Side-Note] on the screen of the document to display the side-note alongside the document. This is convenient for displaying a note without have to find it in a list.

1 Tap anywhere on the screen of a document to display the tool bar.

2 Tap ... (option) in the upper right of the document screen — [Create a New Side-Note for This Document].

3 Select a template, and tap [OK].

The document and side-note are displayed side-by-side.

The side-note is given the same file name as the document with “_Note” attached to the end, and it is located in the same folder as the document.

To change the side that the document and the side-note are displayed on

Tap ... (option) — [Swap Screens].

To display only one document

Tap ... (option) on either the left or right, and then tap [Display This Document Only].

Note

- When the document and side-note are displayed side-by-side, the document cannot be rotated.
- The document and side-note cannot be displayed top and bottom.
- When you press the  (home) button and tap [Create New Note], a standalone note is created, not a side-note.
- A side-note cannot be created in a note.

Hint

- Only one side-note can be created per document. When you want to create a side-note to replace the existing side-note, after displaying the existing side-note in side-by-side format with the document, tap ... (option) — [Create a New Side-Note for This Document]. The old side-note will become a standalone note.
- Side-notes are created as PDF files and can be handled the same way as documents. After creation, the relationship between the document and the side-note will be retained, even if the Digital Paper App is used to move the document or the side-note to another folder or to change the file name of the side-note.

Related Topic

- [Adding/editing a note template](#)
- [Displaying documents side-by-side](#)
- [Changing the organization of documents/folders on the Digital Paper](#)
- [Creating a new note](#)
- [Selecting defaults for the note template](#)

Digital Paper System
DPT-RP1

Opening a side-note

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ... (option) in the upper right of the document screen — [Open Side-Note].

Hint

- Side-notes are documents (PDF files) marked with special attributes. As with documents and standalone notes, they can be opened independently.

Related Topic

- [Opening a note](#)
- [Opening a document](#)
- [Selecting and opening from a folder](#)
- [Opening a different document from the quick access list](#)

Digital Paper System
DPT-RP1

Adding/deleting a page from a note

- 1 Tap anywhere on the screen of a document to display the tool bar.
- 2 Tap ... (option) in the upper right of the document screen — [Insert New Page] or [Delete Current Page].

When you tap [Insert New Page], one page is inserted before the page that is currently being displayed.

To add a page after the final page

On the final page of the note, swipe (move your finger) in the direction that would take you to the next page.

Note

- After a page is deleted, it cannot be returned.
- Pages cannot be added/deleted when viewing the document as a two-page spread.

Digital Paper System
DPT-RP1

Selecting defaults for the note template

Set whether to select a template when you create a new note or to use a specific template without the option to select.

- 1 Press the  (home) button, and tap [Settings].
- 2 Tap [Note Template], then tap either your desired template or [Select template every time note is created].

Related Topic

- [Adding/editing a note template](#)

Digital Paper System
DPT-RP1

Changing the settings on the Digital Paper

1 Press the  (home) button, and tap [Settings].

2 Set the individual items.

Setting items

- [Wi-Fi]
 - Switch the Wi-Fi function On/Off.
- [Wi-Fi Settings]
 - [Keep Wi-Fi On During Sleep]
 - When [Always enabled] or [Enabled only when plugged in] is selected, the Wi-Fi connection is maintained even when the Digital Paper enters sleep mode, and documents can be transferred and operated from the Digital Paper App.
 - [Wi-Fi Frequency Bands]
 - Select the frequency of the Wi-Fi network that you want to use with the Digital Paper.
 - [Update Saved Network List]
 - Update the [Saved Network List].
 - [Saved Network List]
 - View the list of Wi-Fi networks that have been added by the Digital Paper App.
 - Tap the SSID that is currently connected to display the [Link Speed], [Frequency], and other connection information. If the computer that the Digital Paper App is installed to is connected to a different network, you can change the connection for the Digital Paper by tapping an SSID from the [Saved Network List].
- [Bluetooth]
 - Switch the Bluetooth function On/Off.
- [Bluetooth Settings]
 - [Bluetooth Pairing]
 - Enter standby mode for Bluetooth pairing.
 - [Keep Bluetooth Connection On During Sleep]
 - When [Always enabled] or [Enabled only when plugged in] is selected, the Bluetooth connection is maintained even when the Digital Paper enters sleep mode, and documents can be transferred and operated from the Digital Paper App.
 - [Delete Pairing Information for All Bluetooth Devices]
 - Delete the pairing information of all paired Bluetooth devices.
- [NFC]
 - Switch the NFC function On/Off.
- [Limit Editing Annotations]
 - Annotations that were made to a document outside of your Digital Paper cannot be edited.
- [Note Template]
 - Set whether to select a template each time a new note is created, or to use a specific template by default--without the option

to select--whenever a new note is created.

- [Screen Lock]
 - [Screen Lock]
Set a screen lock on the Digital Paper by setting a lock password between 4 to 20 alphanumeric characters and symbols in length.
 - [Change Lock Password]
Change the lock password for the Digital Paper.
 - [NFC Card Lock Release Settings]
Register a FeliCa card, FeliCa-compatible mobile phone, smartphone, etc., which can then be used to disable the screen lock on the Digital Paper.
- [Server Settings]
Settings for linking Digital Paper to a system.
- [System Settings]
 - [Pen Calibration]
Set the way you hold the pen, and correct any displacement between where the pen touches the screen and where the writing appears.
 - [Initialize Digital Paper]
Initialize the system storage, and return all settings to their factory defaults. After initialization is complete, the Digital Paper will automatically turn off.
- [System Information]
 - [Device Details]
Display the amount of available space in system storage, the [Software Version], [Device ID], [MAC Address], and [Bluetooth Address].
 - [Legal Information]
Display information regarding trademarks and copyrights.
 - [End User License Agreement]
Display the software's End User License Agreement. Be sure to read this before use.
- [Regulatory Information]
Display the VCCI mark based on the rules for voluntary control measures and the marks and registration numbers for the radio wave/radio communication industry acts.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)
- [Selecting defaults for the note template](#)
- [Setting the screen lock](#)
- [Adding/editing a note template](#)
- [Calibrating the pen](#)

Digital Paper System
DPT-RP1

Changing the Digital Paper settings using the Digital Paper App

Use the Digital Paper App to change the settings of the Digital Paper.

1 Connect the computer to the Digital Paper.

When changing the settings for the Wi-Fi network, please connect via the USB cable.

2 Launch the Digital Paper App on the computer.

3 Click [Settings], and set the individual items.

Setting items

- [Paired Digital Paper]
Display information for the Digital Paper that has been paired. If pairing with a different Digital Paper, click [Re-pair with Digital Paper].
- [Bluetooth automatic connection]
When launching the Digital Paper App, set whether or not the Bluetooth-paired Digital Paper is automatically connected.
- [Automatic sync]
When using the Digital Paper App, set whether or not the connected Digital Paper is automatically synced.
 - [Interval]
Set the interval to sync automatically.
- [Note template]
Add a note template to the Digital Paper, delete a template, or change the name of a template.
- [Wi-Fi of the Digital Paper]
Set whether or not the Digital Paper is connected via Wi-Fi.
- [Saved Wi-Fi networks]
Add a Wi-Fi network for the Digital Paper to connect to, or edit/delete the settings for a Wi-Fi network that has already been stored.
A Wi-Fi network can be set only when Wi-Fi is turned on.
- [General Settings]
Click [Edit] to edit each item.
 - [Username]
The username that is set here will be listed as the author of annotations.
 - [Date format]
Set the display format for the date.

- [Time format]
Set the display format for the time.
- [Time zone]
Set the time zone.
- [Auto sleep]
Set the amount of time before the Digital Paper enters sleep mode.

Hint

- A maximum of 20 Wi-Fi networks can be stored to a Digital Paper device.
- Digital Paper supports the security methods WPA2-PSK (AES) and 802.1x EAP (TLS/PEAP). See the instruction manual for your wireless router to confirm whether your router supports the same security methods.
- When this device is connected with the Digital Paper App, the time is automatically set.

Note

- If paired with another Digital Paper, the sync settings are deleted.

Related Topic

- [Connecting via Wi-Fi/Connecting using a USB cable](#)
- [Connecting via Bluetooth](#)

Digital Paper System
DPT-RP1

Updating the software

Information on software updates for the Digital Paper and the Digital Paper App is checked automatically via the Internet. When update information is found, a message appears on the screen of the Digital Paper App, and you can choose whether to update. When updating the software of the Digital Paper, use the supplied USB cable to connect the computer to the Digital Paper. If you have skipped an update or want to manually check the update information, follow the steps below.

- 1 Use the supplied USB cable to connect the computer to the Digital Paper.
- 2 Connect the computer to the Internet, and launch the Digital Paper App.
- 3 From the menu bar click [Help] — [Software update], and follow the screen to update.

To check the software version of the Digital Paper

Press the  (home) button on the Digital Paper, and tap [Settings] — [System Information] — [Device Details].

To check the software version of the Digital Paper App


- For Windows
From the menu bar of the Digital Paper App, click [Help] — [About Digital Paper App].
- For Mac
From the menu bar of the Digital Paper App, click [Digital Paper App] — [About Digital Paper App].

Digital Paper System
DPT-RP1


Setting up the Digital Paper App

To transfer documents to the Digital Paper, it is necessary to install the dedicated app, "Digital Paper App," onto your computer and to set up a connection (perform pairing) between the Digital Paper and the Digital Paper App on the computer.

- By installing the Digital Paper App onto multiple computers in your home or office, you can pair multiple computers with a single Digital Paper device. If one computer is set up with multiple user accounts, each user account must be paired separately.

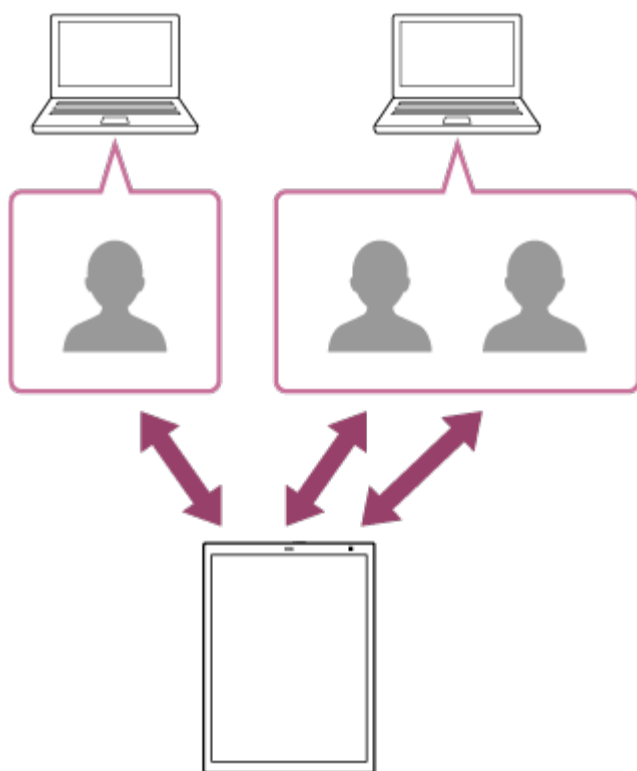

- The Digital Paper App for a single user account cannot be paired with multiple Digital Paper devices. Please set up multiple user accounts on the computer, and pair each Digital Paper with a different user account.

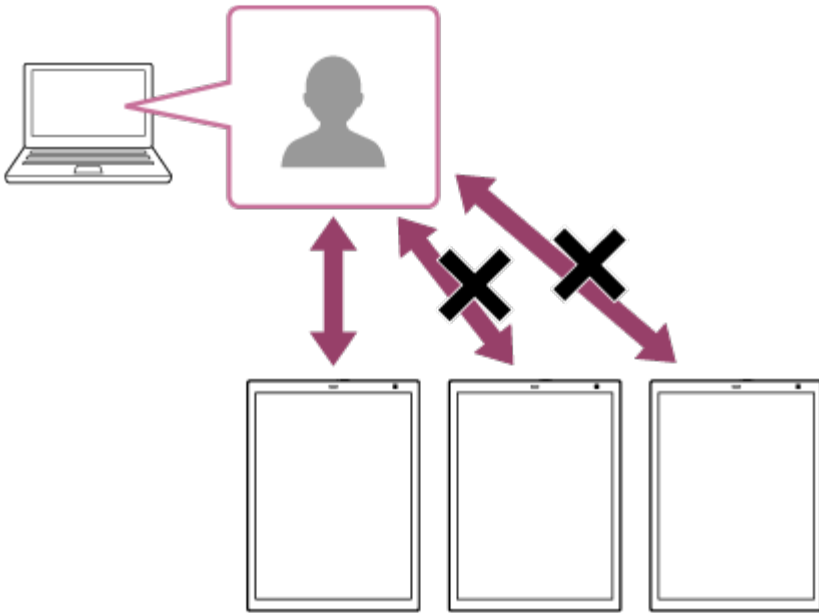

If you skipped pairing during the initial setup or if you want to install the Digital Paper App onto a different computer, follow the steps below.

- 1 Turn on the computer and connect it to the Internet.

If the Digital Paper App has already been installed on the computer, steps 1 and 2 are not necessary. Please proceed to step 3.

- 2 Download the Digital Paper App from the customer support website, and install it onto the computer.

- 3 Launch the Digital Paper App, and use the supplied USB cable to connect the computer to the Digital Paper.

The [Connect to Digital Paper] screen is displayed.

- 4 Follow the screen of the Digital Paper App, and pair the Digital Paper device with the Digital Paper App.

- 5 If a software update is available for the Digital Paper, perform the update.

If pairing with a different Digital Paper

Use the supplied USB cable to connect the computer to the Digital Paper, and launch the Digital Paper App. Then click [Settings] — [Re-pair with Digital Paper], and follow the screen for pairing.

Digital Paper System

DPT-RP1

Cannot turn on the power

- If the charge indicator blinks three times in red when the  (power) button is pressed, the battery is depleted. Connect the Digital Paper to a computer using the supplied USB cable to charge it.
- When the battery is entirely empty, the Digital Paper cannot turn on. If you connect the Digital Paper to a computer using the supplied USB cable and charge it, the Digital Paper will turn on.
- When the power does not turn on, even when the Digital Paper is connected via the supplied USB cable for charging, press the  (power) button. When the battery is entirely empty, it may take five to ten minutes from the time that charging begins for the power to turn on.
- When the Digital Paper experiences condensation, the power may not turn on. Wait a few hours, and then turn it on.

Cannot charge the Digital Paper

- Please use the supplied USB cable for charging. If you use a USB cable other than the one supplied, the performance and safety are not guaranteed.
- Use the supplied USB cable to connect the computer directly to the Digital Paper. If connecting to the computer through a USB hub, functionality is not guaranteed.
- When connected to a computer for charging, make sure that the computer is turned on. If the computer is off, the Digital Paper cannot be charged. If the power is on but the computer is in sleep mode, standby mode, or hibernation, the Digital Paper cannot be charged. Make sure that the computer will not enter any sort of sleep mode while charging.
- When charging the Digital Paper from a laptop computer, it is necessary for the laptop to have a sufficient electrical supply. Please charge the Digital Paper while also charging the notebook computer.
- Charge within the recommended temperature range of 5 °C to 35 °C (41 °F to 95 °F). When the Digital Paper is outside of the recommended temperature range and cannot be charged, remove the USB cable from the Digital Paper. Wait until the temperature is within the recommended range before reconnecting the USB cable and charging.

Digital Paper System
DPT-RP1

The battery seems to drain quickly

- Check whether the battery finished charging completely. Press the  (home) button to display the battery icon in the top right corner of the home menu. When the icon changes from  to  , charging is complete.
- When using the Digital Paper in an ambient temperature lower than 5 °C (41°F), the battery may drain quickly, but this is not a malfunction.
- The battery drains even when the Digital Paper is in sleep mode. We recommend turning the power completely off when not in use.
- Even when the power is off, if the Digital Paper is left alone for an extended period of time, the battery will drain. Charge the Digital Paper before use.
- Turn off the Wi-Fi function when you are not using the network. Press the  (home) button and tap [Settings], then tap [Wi-Fi] to remove the check mark.
- Turn off the Bluetooth function when you are not using a Bluetooth connection. Press the  (home) button and tap [Settings], then tap [Bluetooth] to remove the check mark.
- If your Digital Paper is connected to a computer that is in sleep mode, standby mode, or hibernation, the battery will drain without charging. Make sure that the computer will not enter any sort of sleep mode.
- Battery life varies depending on frequency of use, device settings, and usage environment.
- Under the following conditions, the battery will drain more quickly.
 - Frequent handwriting.
 - Frequent highlighting.
 - Frequently searching for documents.
 - Displaying documents which contain large image files.
 - Using the Digital Paper while [Wi-Fi] is set to On. Or, setting up the Wi-Fi connection to remain connected during sleep mode.
 - Selecting [Wi-Fi Settings] within [Settings], and then leaving the display on [Saved Network List].
 - Using the Digital Paper while [Bluetooth] is set to On. Or, setting up the Bluetooth connection to remain during sleep mode.


It takes time for a screen to be displayed

- When using the Digital Paper in a cold environment, it may take time for the display to function.

Digital Paper System
DPT-RP1

The screen is not appearing

- If the screen is not appearing and does not react to the power button, pen, or other operations, reset the Digital Paper. Use a thin item, such as a pin or paper clip, to press the RESET (reset) button (b). Then, press the  (power) button (a) to turn the power back on. Be aware that resetting the Digital Paper may erase device settings, document annotations, and note contents.

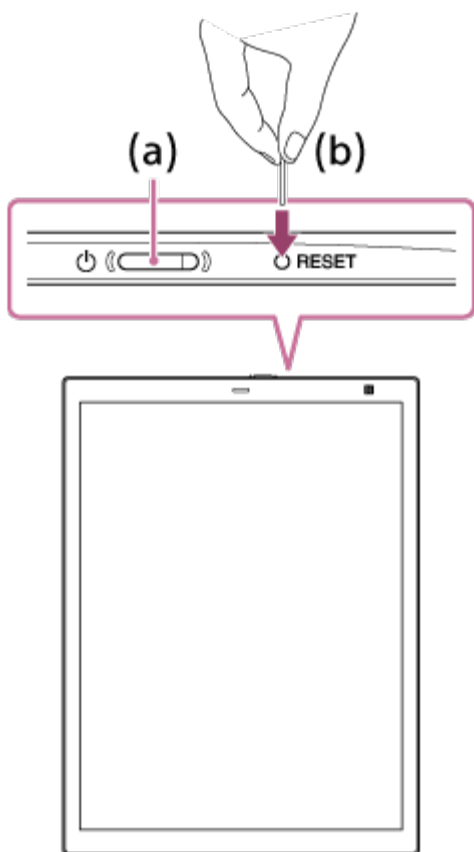

Digital Paper System
DPT-RP1


The touch panel is reacting slowly

- The screen may be dirty: use a soft cloth (e.g., an eyeglass cleaning cloth) to wipe off the screen.

Digital Paper System
DPT-RP1

Pen does not work

- The pen may stop working if the battery level is low. Connect the pen to a computer using the supplied USB cable to charge it. The charge indicator (a) lights up in red while charging.

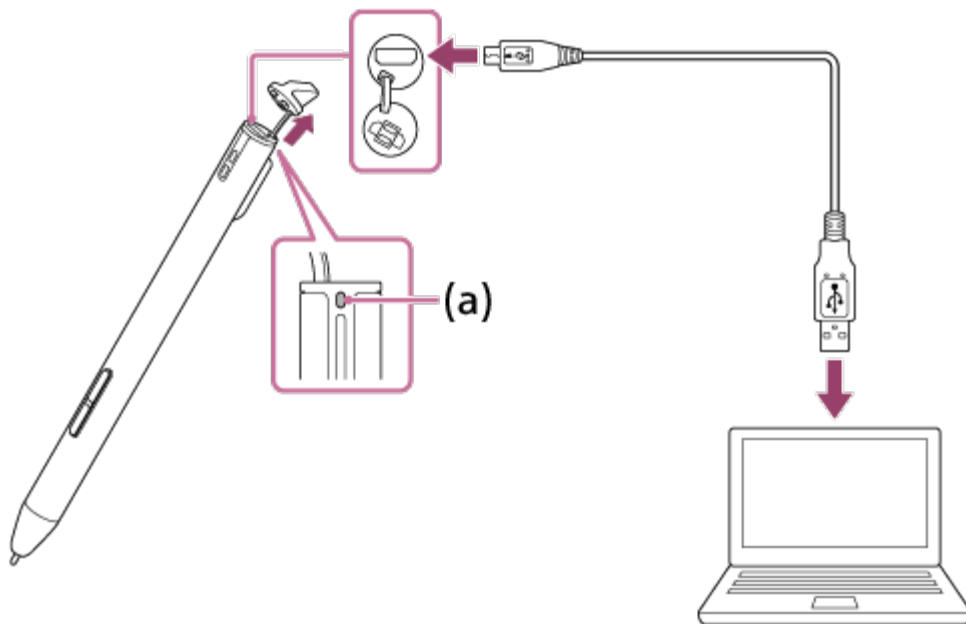

- When connecting the USB cable, use caution not to press the tip of the pen. If the tip of the pen is pressed while connecting the USB cable, the pen operations will not work. In this case, disconnect and reconnect the USB cable.

Digital Paper System
DPT-RP1

The position of the pen tip is not aligned with the actual writing

- The pen may need to be calibrated if the actual writing or tapping is not aligned with the pen tip. Press the  (home) button, and tap [Settings] — [System Settings] — [Pen Calibration].

Cannot set up/connect to a network

- The [Saved Network List] displays a list of Wi-Fi networks that have been added to the Digital Paper App. If the Wi-Fi network that you want to connect to is not displayed in the [Saved Network List], use the Digital Paper App to add the Wi-Fi network.
 1. Use the supplied USB cable to connect the computer to the Digital Paper, and launch the Digital Paper App.
 2. Click [Settings] — [Add] under [Saved Wi-Fi networks], and follow the screen to add another Wi-Fi network.
 3. Press the  (home) button on the Digital Paper, and tap [Settings] — [Wi-Fi Settings] — [Update Saved Network List].
- If the battery of the Digital Paper is low, it may not be able to connect to a Wi-Fi network. Charge the Digital Paper before connecting it to a Wi-Fi network.
- Turn on the Wi-Fi function. Press the  (home) button, and tap [Settings], then tap [Wi-Fi] to add a check mark.
- Confirm that your wireless router is within the communication range.
- Confirm that the security method (WPA2-PSK (AES), 802.1x EAP (TLS/PEAP)) and IP address are set correctly on the Digital Paper.
 1. Use the supplied USB cable to connect the computer to the Digital Paper, and launch the Digital Paper App.
 2. Click [Settings], then select an SSID from the [Saved Wi-Fi networks] and click [Edit].
 3. Follow the screen to confirm the security method and IP address.
- Confirm that the security method of the Digital Paper (WPA2-PSK (AES), 802.1x EAP (TLS/PEAP)) is supported by your wireless router. Also, check the encryption key of your wireless router.
- A username and password may be required for connecting to a public wireless LAN. Enter the correct username and password.
- If the wireless router filters access by MAC address, press the  (home) button on the Digital Paper, and then tap [Settings] — [System Information] — [Device Details] to check the MAC address. Afterwards, register the MAC address of the Digital Paper to your wireless router.
- Confirm that the network settings for your wireless router are correct. For more on the settings of your wireless router, refer to the instruction manual for your router or contact the network administrator.
- The Digital Paper may be separated too far from the wireless router. Move the Digital Paper closer to the wireless router.
- The connection may be weakened by obstacles such as walls, metal, and concrete between the Digital Paper and the wireless router. Move the Digital Paper to a different location.
- The Digital Paper may experience signal interference from nearby wireless devices (a cordless phone, microwave, Bluetooth device, etc.) using the 2.4 GHz frequency band. Turn off the wireless function of those devices, or move the Digital Paper to a different location.
- If the wireless router is set to not display its SSID (stealth setting), it will not appear in the SSID list when adding the Wi-Fi network to the Digital Paper. Manually set up the Wi-Fi network.
- A maximum of 20 Wi-Fi networks can be stored to a Digital Paper device. If you want to add another Wi-Fi network when 20 networks are already stored, delete an unnecessary Wi-Fi network.

Digital Paper System
DPT-RP1

The network connection suddenly stopped working

- If the battery of the Digital Paper is low, it may not be able to connect to a Wi-Fi network. Charge the Digital Paper before connecting it to a Wi-Fi network.
- Confirm that your wireless router is within the communication range.
- Connect to an available network. Press the  (home) button, and then tap [Settings] — [Wi-Fi Settings] — the SSID of an available Wi-Fi network.
- The Digital Paper is separated too far from the wireless router. Move the Digital Paper closer to the wireless router.
- The connection may be weakened by obstacles such as walls, metal, and concrete between the Digital Paper and the wireless router. Move the Digital Paper to a different location.
- The Digital Paper may be experiencing signal interference from nearby wireless devices (a cordless phone, microwave, Bluetooth device, etc.) using the 2.4 GHz frequency band. Turn off the wireless function of those devices, or move the Digital Paper to a different location.
- A problem may have occurred with the network that was connected. Check with the network administrator.
- When the password for the wireless router has been changed, input the new password using the Digital Paper App, and reconnect.
 1. Use the supplied USB cable to connect the computer to the Digital Paper, and launch the Digital Paper App.
 2. Click [Settings], then select an SSID from the [Saved Wi-Fi networks] and click [Edit].
 3. Follow the screen to input the new password.
 4. Press the  (home) button on the Digital Paper, and tap [Settings] — [Wi-Fi Settings] — [Update Saved Network List].
 5. Tap the SSID of the desired Wi-Fi network from the [Saved Network List].

If a connection cannot be established via Bluetooth

- If the battery of the Digital Paper is low, it may not be able to connect. Charge the Digital Paper before establishing a connection via Bluetooth.
- For Windows, make the Bluetooth connection using “Access Point Mode.”
- Delete the pairing information and pair again.
- Up to four computers can be connected. If you want to connect to the fifth computer, disconnect an unnecessary connection.
- The Digital Paper is separated too far from the wireless router. Move the Digital Paper closer to the computer.
- The connection may be weakened by obstacles such as walls, metal, and concrete between the Digital Paper and the computer. Move the Digital Paper to a different location.
- The Digital Paper may be experiencing signal interference from nearby wireless devices (a cordless phone, microwave, Bluetooth device, wireless device etc.) using the 2.4 GHz frequency band. Turn off the wireless function of those devices, or move the Digital Paper to a different location.
- When the Digital Paper is initialized, the pairing information is also deleted. After deleting the pairing information of your computer, perform Bluetooth pairing again.

Related Topic

- [Changing the Digital Paper settings using the Digital Paper App](#)

Digital Paper System
DPT-RP1

Cannot display a document

- Only PDF files that conform to the specifications of PDF 1.7 can be displayed. PDF files that contain the extended functions of Adobe extension level 1-8 are not supported.

Digital Paper System

DPT-RP1

Characters are not being displayed

- User-defined text and some special symbols may not be displayed.

Digital Paper System
DPT-RP1

Cannot add annotations

- Annotations cannot be made if the pen battery is too low. Please charge the pen.
- Annotations cannot be made while a document is being saved.
- When there is limited free space in system storage, documents will open as “Read-Only,” and annotations cannot be made. Delete unnecessary documents to increase the amount of free space.
- Highlights cannot be added to a document that was scanned (pages containing only image data) or on text that is embedded in an image.
- When the Digital Paper is being operated via the Digital Paper App, annotations may be temporarily unavailable. Wait until operations are complete.


Cannot edit or delete annotations

- When [Limit Editing Annotations] is set to [Enable], annotations that were made outside of your Digital Paper cannot be edited. To make these annotations editable, press the  (home) button and tap [Settings], then change [Limit Editing Annotations] to [Disable].
- The handwritten sticky notes, text sticky notes, and bookmarks that were added to a document using the former model, "DPT-S1," cannot be edited.
- When the battery level of the pen is low, you may not be able to edit or delete annotations. Charge the pen.
- When the document is protected, you cannot edit or delete annotations.
- When there is limited free space in system storage, documents will open as "Read-Only," and you cannot edit or delete annotations. Delete unnecessary documents to increase the amount of free space.
- When operating the Digital Paper using the Digital Paper App, you temporarily may not be able to edit or delete annotations. Wait until operations are complete.

Digital Paper System
DPT-RP1

The computer does not recognize the Digital Paper

- It may take time for the Digital Paper to be recognized.
- Please use the supplied USB cable. If you use a USB cable other than the one supplied, the performance and safety are not guaranteed.
- Use the supplied USB cable to connect the computer directly to the Digital Paper. If connecting to the computer through a USB hub, functionality is not guaranteed.
- The USB terminal that the cable is connected to may be broken. Try connecting to a different USB terminal on the computer.
- If connected using the USB connection, disconnect the USB cable, and then reconnect it. If connected using a wireless connection, disconnect the connection, and then reconnect it.
- If connected using Wi-Fi, connect the computer and the Digital Paper to the same network. To confirm the settings of the Digital Paper, press the  (home) button, and then tap [Settings] — [Wi-Fi Settings].
- Try temporarily turning off the Wi-Fi function on the Digital Paper or the computer, and then turning it back on. For the Digital Paper, press the  (home) button, and tap [Settings]. Then tap [Wi-Fi] to remove and subsequently re-add the check mark.
- Hold down the  (power) button for about three seconds to turn off the power, and then turn it back on.
- If the issue is not resolved through by the methods above, temporarily disconnect the Digital Paper from the computer, and use a thin item, such as a pin or paper clip, to press the RESET (reset) button (b). Next, press the  (power) button (a) to turn the Digital Paper back on, and use the supplied USB cable to connect the computer to the Digital Paper. Be aware that resetting the Digital Paper may erase the settings, the annotations on documents, and the contents of notes.

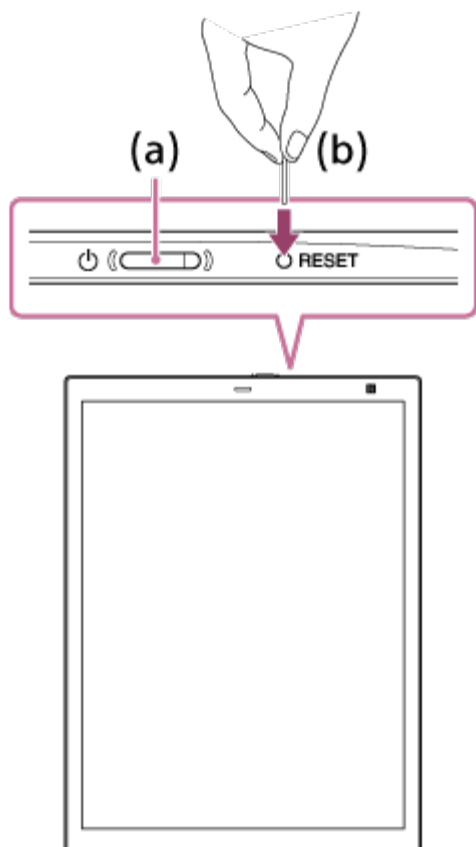

Cannot transfer documents from a computer to the Digital Paper

- The amount of free space in the system storage of the Digital Paper may be insufficient. Check the capacity of the Digital Paper in the top left area of the Digital Paper App screen. When the amount of free space is insufficient, use the Digital Paper App to delete any unnecessary data.

Digital Paper System
DPT-RP1

Precautions

Safety

Handling the device

- If the device causes interference to radio or television reception, turn the device off and move it away from the radio or television.
- Refrain from using the device in an aircraft according to the inflight announcements during taking off or landing.
- When you put the device into a bag, make sure no objects with sharp or hard edges come into direct contact with the device.
- Do not drop, or put any heavy object on top of the device or apply a strong shock to the device. It may cause a malfunction or damage.
- Never subject the device to extremes of light, temperature, moisture or vibration.
- If part of the device that generates heat contacts your skin for a prolonged period, you may suffer burn symptoms, such as redness, swelling, even if the temperature is moderate. Avoid prolonged contact, especially if you have sensitive skin.
- Do not leave the device on an unstable surface.
- Do not poke people with the supplied pen.
- Do not treat or use the supplied pen roughly, such as bending it, or scratching the touchscreen with it.
- Use the supplied pen only for touchscreen operations.
- Do not use the pen if it is damaged or deformed.
- Do not subject the pen to shock or vibration.
- Do not apply any excessive pressure to the pen tip and pen button during operation.
- Do not keep the pen tip pressed while the pen is not in use.
- Do not leave the pen on the touchscreen: doing so drains the battery.
- If an object is placed on the touchscreen, it may cause a malfunction. When not in use, leave the device in sleep mode or turn it off.
- When using the device another country/region, it is your responsibility to ensure that it is used in compliance with the following specifications:
 - AC voltage
 - Wireless products regulations
 - Other safety regulations or requirements
- Be sure not to short-circuit the terminals of the device with metallic objects.
- Never leave the device exposed to high temperature, such as in a car parked in the sun or under direct sunlight.
- As the device uses magnets, it may affect medical equipment such as a cardiac pacemaker, defibrillator, or programmable shunt valve. Do not put the device close to medical equipment or people using medical equipment. If you use medical equipment and feel anxious, consult your doctor before you use the device.

Avoiding water and moisture

- Note that condensation may form temporarily in cases such as when the device is moved quickly from a low-temperature environment to a high temperature environment or used in a room that has a heater just turned on. Condensation creates a phenomenon where moisture in the air adheres to surfaces such as metal panels, etc., and then changes to liquid. If condensation forms in the device, leave it turned off until the condensation disappears. If you use the device with condensation present, a malfunction may result.
- The device is not waterproof. Remember to follow the precautions below.
 - Be careful not to drop the device into a sink or other container filled with water.

- Do not use the device in humid locations or bad weather, such as in the rain or snow.
- Do not get the device wet.

If you touch the device with wet hands, or put it in a damp article of clothing, the device may get wet and this may cause a malfunction.

Charging the device

- Heat may build up in the device while charging, or if it is used for an extended period of time.
- Use the supplied USB cable only. Do not use any other USB cable.
- Never wrap the device in anything when it is being charged. Heat build-up in the device may cause malfunction or damage.
- If the battery lasts only half the normal time even after being fully charged, it may be reaching the end of its life.

Cleaning the device

- Clean the device with a soft cloth, such as a cleaning cloth for eyeglasses. Make sure that there is no dust or dirt on the soft cloth, as the device may be damaged.
- Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene, as it may mar the finish of the case.
- Wipe the pen with a dry cloth when it gets dirty. Tapping or dragging on the touchscreen using a dirty pen may damage the surface.
- Be sure to keep the device away from water or spills.

Regulatory information

This device displays the information below.

- The Declaration of Conformity (DoC) logo and the FCC Identifier (FCC ID) based on the FCC Rules
 - The VCCI mark based on RULES FOR VOLUNTARY CONTROL MEASURES
 - The marks and registration numbers of the radio wave and radio communication acts
- You can view these marks or registration numbers on the Digital Paper: press the  (home) button, then tap [Settings] — [Regulatory Information].

If you cannot display the marks or registration numbers due to a malfunction, contact the Sony Support Center.

End User License Agreement

- You can display the End User License Agreement from the [Settings].
Press the  (home) button, then tap [Settings] — [System Information] — [End User License Agreement].

Display

- The display is made of thin, lightweight plastic film. When the device is illuminated, distortion of the plastic film may occur. This is not a malfunction.
- Do not apply excessive pressure to the touchscreen. The color or brightness may become uneven and may cause the device to malfunction.
- When using the device in a cold environment, the screen may change at a slower speed. This is not a malfunction.

Wi-Fi connectivity



- The Wireless LAN functionality has passed Wi-Fi certification and complies with the interoperability specifications established

by WFA (Wi-Fi Alliance).

Wireless feature

- Turn off the wireless feature of the device when you are in a location where radio communications are prohibited. You must obtain permission from the appropriate authorities before enabling the wireless feature in such places.
- Turn off the wireless feature in health care facilities where any regulations posted in such areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be affected by radio frequency (RF) energy which is generated by wireless communication.
- Do not use your device near medical equipment without first obtaining permission to do so.
- General notes on using the Wi-Fi (Wireless LAN) function. In some countries or regions, use of Wi-Fi products may be restricted by the local regulations (e.g. limited number of channels).

Usage environment of NFC

If the device is placed on a metal desk, it may not function properly, such as failing to communicate with the FeliCa card or devices that support FeliCa. In this case, keep a few centimeters between the device and the metal desk.

Applications on the device

Disclaimer: In no event will SONY be liable for any financial damage, or loss of profits, including claims made by third parties, arising out of the use of the software supplied with this device.

Sony is not responsible for incomplete recording/downloading or damaged data due to problems of the device or computer.

- Copyright laws prohibit reproducing the software or the manual accompanying it in whole or in part, or renting the software without the permission of the copyright holder.
- Due to continued efforts to improve quality, software specifications may be changed without notice.
- Operation of this device with software other than that provided is not covered by the warranty.
- Depending on the types of the text and characters, the text shown on the device may not be displayed properly. This is due to:
 - The capacity of the device.
 - The device is not functioning normally.
 - Content information is written in a language or character that is not supported by the device.
- We do not guarantee all languages will be able to be displayed properly on your device.
- User-created characters and some special characters may not be displayed.

Touchscreen

- Do not press the screen or screen frame strongly or rub the screen. When operating the device, touch it softly.
- You can use the pen while resting your hands on the touchscreen. When the pen is near the touchscreen, the finger operation is inactive.

The device Disposal Reference

The built-in rechargeable battery of the device is recyclable. Do not remove the battery yourself; consult the Sony Support Center.

For customers in the USA
FCC Compliance Statement

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This DPT-RP1 has been tested and meets the FCC RF exposure guidelines when used with the Sony Corporation accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

If you have any questions about this product, you may call:

Sony Customer Information Center

1-800-222-SONY (7669) or

<http://www.sony.com/>

The number below is for the FCC related matters only.

Regulatory Information

Declaration of Conformity

Trade Name: SONY

Model No.: DPT-RP1

Responsible Party: Sony Electronics Inc.

Address: 16535 Via Esprillo, San Diego, CA92127 U.S.A.

Telephone Number: 858-942-2230

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- In order to comply with FCC radio-frequency radiation exposure guidelines for an uncontrolled exposure, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines.

This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. DPT-RP1 has been tested and found to comply with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines.

No guarantee for data

Sony is not responsible for damaged (or deleted) data due to any problem with the device or computer.

Backup

Sony recommends that you make a backup of the contents of the device in case of operation error or data corruption.

Digital Paper System
DPT-RP1

Legal Notice

Copyright laws prohibit copying the data of this product or the contents of this Help Guide (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this Help Guide is not allowed without Sony's permission except for personal use.

- Sony, the Sony logo are either trademarks or registered trademarks of Sony Corporation.
- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and / or other countries.
- Macintosh, Mac, Mac OS, and macOS are trademarks of Apple Inc., registered in the U.S. and other countries.
- This DPT-RP1 contains Adobe Reader Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2011 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.
- This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.
(<http://www.openssl.org/>) Copyright © 1998-2011
The OpenSSL Project. All rights reserved.
- Wi-Fi, the Wi-Fi CERTIFIED logo, WPA, WPA2 and Wi-Fi Protected Setup are trademarks or registered trademarks of Wi-Fi Alliance.
- Foxit PDF SDK Copyright (c) 2017, Foxit Corporation
www.foxitsoftware.com, All rights reserved
- Portions of this software are Copyright ©2005
The FreeType Project (www.freetype.org). All rights reserved.
- This software is based in part on the work of the Independent JPEG Group.
- The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.
- FeliCa is a registered trademark of Sony Corporation.

All other system names and product names appearing in this document are the registered trademarks or trademarks of their respective owners.

Further, the trademark™ and registered trademark® symbols are not indicated throughout this document.

Digital Paper System
DPT-RP1

Specifications

Specifications

Model

- DPT-RP1

Basic information

- Display
 - 338 mm (13.3 in) diagonal electrophoretic display
 - 1650 × 2200 pixel resolution
 - 16-level gray scale
- Touchscreen
 - Projected capacitive touchscreen capable of pen input
- Internal memory capacity/User available capacity
 - 16 GB/Approx. 11 GB
- Number of PDF files that can be stored in the internal memory
 - Approx. 10,000 files
 - (One approx. 1 MB PDF file)
- Interface
 - Micro USB connector

Power source

- Battery
 - Built-in rechargeable battery
- USB-based charging time
 - Approx. 5.5 hours
- Non-included AC adapter-based charging time
 - (Recommended AC adapter: AC-UUD12) Approx. 3.5 hours
- Battery life (continuous use)
 - Wi-Fi off: up to 3 weeks^{*1}
 - Wi-Fi on: up to 1 week^{*2}
- Operating/charging temperature
 - 5 °C to 35 °C (41 °F to 95 °F)

Wi-Fi^{*3}

- Wireless standards
 - IEEE 802.11a/b/g/n/ac MIMO
- Frequency bands
 - 2.4 GHz band, 5 GHz band
- Security
 - WPA2-PSK (AES), 802.1x EAP (TLS/PEAP)
- Connection type
 - WPS (Wi-Fi Protected Setup)/Manual setup

- Wi-Fi authentication
Supported

Bluetooth

- Communication method
Bluetooth Ver4.2
- Frequency band
2.4 GHz band

NFC^{*4}

- Frequency bands
13.56 MHz band

Dimensions/Mass

- Dimensions (w/h/d)
Approx. 224 mm × 302.6 mm × 5.9 mm (8 7/8 in × 12 in × 1/4 in)
- Mass (including battery)
Approx. 349 g (12.3 oz)

Stylus

- Battery
Built-in rechargeable battery
- USB-based charging time
Approx. 3 hours
- Non-included AC adapter-based charging time
(Recommended AC adapter: AC-UUD12) Approx. 3 hours
- Battery life (continuous use)
Approx. 1 month^{*5}
- Operating/charging temperature
5 °C to 35 °C (41 °F to 95 °F)

Design and specifications are subject to change without notice.

^{*1} Under the conditions that 30 pages of a PDF document are read for 60 minutes per day, and the pen is used for approx. 1 minute while reading. The Bluetooth function is set to Off, and the Digital Paper is in sleep mode when not in use.

^{*2} Under the conditions that 60 pages of a PDF document are read for 120 minutes per day, the pen is used for approx. 10 minutes while reading, and a document is taken in and out twice via Wi-Fi. Taking a document in and out assumes that a 5 MB PDF file is taken in, and then it is taken out with 2 MB of notes after reading. The Bluetooth function is set to Off, and the Digital Paper is in sleep mode when not in use.

^{*3} The communication speed may vary depending on the distance and presence of obstacles between communication devices, the signal strength, line congestion, and other factors. DPT-RP1 is for domestic use.

^{*4} NFC is an abbreviation for Near Field Communication, one of the standards for short-distance wireless communication.

^{*5} Under the condition that entries are made to a PDF document for 60 minutes per day. The Digital Paper is in sleep mode when not in use.

Supported File Types

The following file types can be displayed by the Digital Paper. However, depending on the file size and format, it may not be possible to view some data. File extensions are shown in parentheses.

Documents

- PDF (.pdf)^{*}

^{*} Compliant with PDF 1.7 specifications. PDF files that contain the extended functions of Adobe extension level 1-8 are not supported.

Operating Environment for Digital Paper App

To transfer documents between a computer and the Digital Paper (DPT-RP1), the Digital Paper App must be installed on the

computer.

OS*

- Microsoft Windows 10 (32/64 bit)
 - Windows 10 Home
 - Windows 10 Pro
- Microsoft Windows 8.1 (32/64 bit)
 - Windows 8.1
 - Windows 8.1 Pro
- Microsoft Windows 7 (32/64 bit)
 - Windows 7 Home Premium (SP1 and later)
 - Windows 7 Professional (SP1 and later)
 - Windows 7 Ultimate (SP1 and later)
- macOS
 - 10.12(Sierra)
- Mac OS X
 - 10.11 (El Capitan)
 - 10.10 (Yosemite)

CPU

- Intel Core™ 2 Duo 2.0 GHz, or a compatible CPU that is equal or greater

Memory

- 2 GB or more

Display

- Screen resolution 1024 × 768

The following system environments are not supported.

- Self-constructed computers
- Computers with a non-standard OS
- Multi boot systems

* English OS installations only.