

Date: 12 May 21
size: 98 x 479mm (unfolded size)
color: 1C black printed

Scan code from the Camera App on your phone to get started

www.CarpoolKaraokeTheMic.com

Register your machine to stay informed about warranty updates, special offers and other cool perks!

LIMITED WARRANTY AND SERVICE

THE SINGING MACHINE COMPANY, INC., warrants this product to be free from defects in material and workmanship for a period of **ninety (90)** days from date of sale to the original consumer purchaser. Product will be repaired or replaced with a new or reconditioned product at no additional charge if it is proven to be defective within the **ninety (90)** days period when said product is returned at customer expense within the warranty period. **THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.**

This warranty does not apply to any product damaged by accident, misuse, abuse, improper line voltage, fire, water, lightning or other acts of God, or any parts or services furnished by you or anyone else. The warranty does not cover cartons, carrying cases, batteries, broken or damaged cabinets, or any items used in connection with the product or consequential damage due to defect in the product. This warranty does not cover products sold AS IS or Re-manufactured units or units sold outside the SMC distribution channel.

 
ALL IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THIS WARRANTY. THIS IS THE COMPLETE WARRANTY AND NO OTHER EXPRESSED WARRANTY IS VALID. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR AN EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.


IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please
call us first at **(866) 670-6888** or email us at
customerservice@singingmachine.com

565-2105-ENG01-US

LOCATION OF CONTROLS

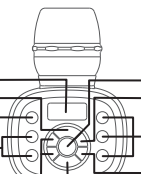

Front View

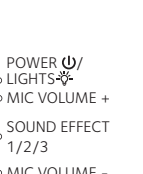 


Bottom View

BEFORE YOU GET STARTED

CHARGING THE UNIT

- 1 Insert the included USB charging cable into micro USB port on bottom of the unit.
- 2 Plug the other end of the cable into computer USB port or USB charging device charge the unit for 4 hours to ensure it is fully charged.
- 3 The battery indicator (on display) will slowly flash while the unit is charging. The battery indicator will change to full and solid once the unit is fully charged.

 
NOTE: The battery indicator (on display) will show the battery charge left indicated by the amount of bars. The rechargeable battery must not be replaced by the user.



To External Unit

AUX AUDIO CONNECTION

 This unit is able to connect to your car audio, headphones or favorite audio device. You can connect by 3.5mm AUX cord (included).



To External Unit

 
LIGHT MODE

Press the  button to switch different lighting effects.

TO START SINGING

- 1 Find an FM station with no signal on your car radio. Tune to the same channel on the MIC by pressing FM +/- to match to your car radio.
- 2 Connect to a Bluetooth Device
- 3 Play your favorite music and sing through your car audio
- 4 Adjust VOLUME to your preference

NOTE: If the Mic crackles or breaks up then adjust Mic volume down

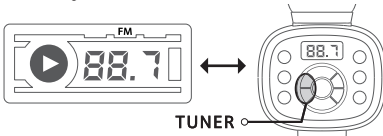

PLAY FOR DUETS (OPTIONAL)

5 After connecting to Bluetooth device, press the "DUETS" button on the MIC to select "1" on display, after 3 seconds it will turn back to display the FM frequency if connected to your car radio. "CON" will appear in 3 seconds on both MICs if connected successfully.



6 ADD A SECOND MIC FOR DUET PERFORMANCES
Turn on the second Mic and make sure the Bluetooth is disconnected. Press the "DUETS" button to select "2" on display.

NOTES:

- No music playback will happen during microphones pairing process.
- Second MIC available separately.
- Press and hold the "DUETS" button to turn off the duets mode.

7 6 built-in voice changers in this unit. Repeatedly press the FX UP/DOWN button to select different vocal effects.

8 3 built-in loop songs. Press SOUND EFFECTS 1, 2 or 3 buttons to play the 3 different sound.

9 To sing without the lead singer on the recording, press the VOCALS button. To resume the lead singer, press again.

10 Press and hold  to turn the MIC off.