


JR1602FCC Remote Control Manual

Tip: How to choose the correct remote control?

Try to choose the remote control with the same appearance.

The remote control with different appearance may not work!

- (1).Supply Voltage-DC 3.0V,Battery 2*1.5V AAA(not included)
- (2).Frequency 2.407GHz-2.473GHz(Peak output power:5dBm)
- (3).Instructions

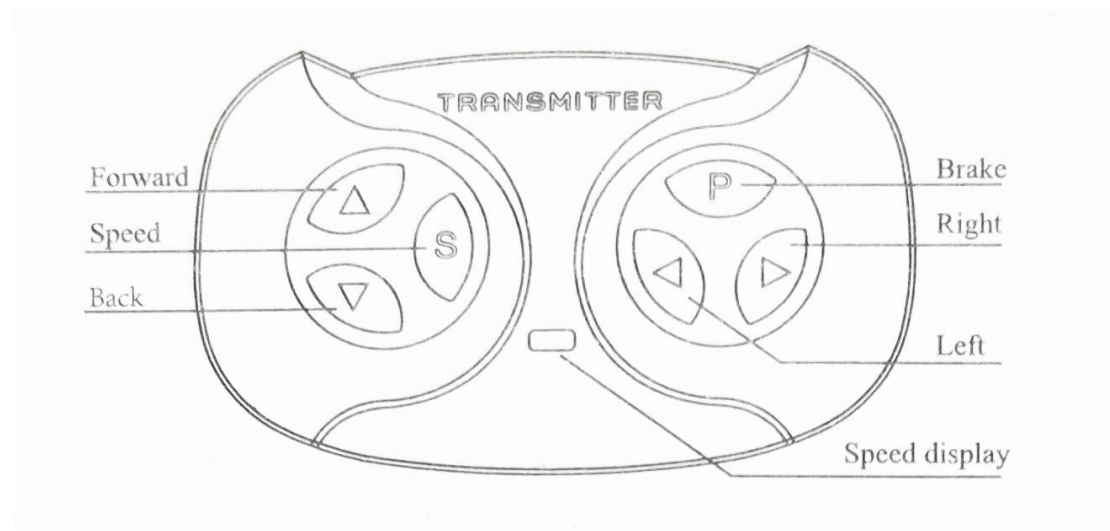

a.First time use need to match code,this product has memory function

Replace battery is unnecessary match code

b.Hold down “▲” & "□" keys for 3 seconds start match code,The first LED flicker

c.Turn on the car body power now,The first LED lit up,Match


code Success

d. Remoter 10 seconds not run will be standby, Press any key wake up

e. Keys caption: “△” Forward, “▽”

“Back”, “<” Left, “>” Right, “S” Speed, “P” Brake. Press “S” key set up speed, 1 led lit up is low speed, 2 leds lit up is medium speed, 3 leds lit up is high speed, Back a car is only low speed Press “P” key hold the brake, All LED flicker

※ The remote controller only can be used with adult's guidance

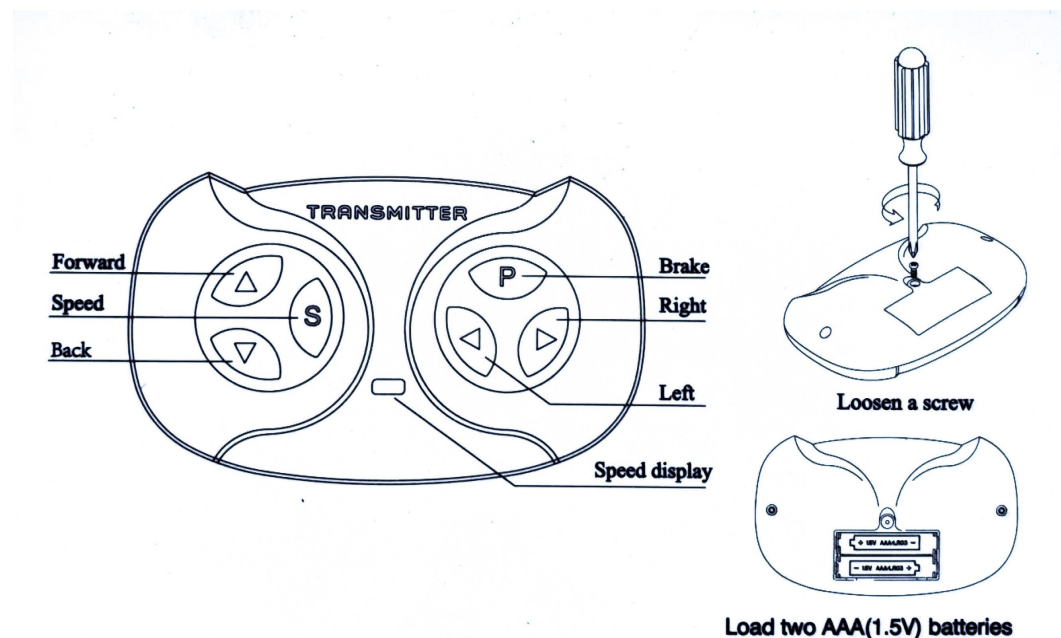

WARNING! Not for children under 3 years.Small parts.Choking hazard

- Load two AAA(1.5V)batteries according to the diagram.
- Non-rechargeable batteries are not to be recharged.
- Diferent types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short
- circuited.The packaging must be retained since it contains important information.