


使用说明书

帕灯遥控

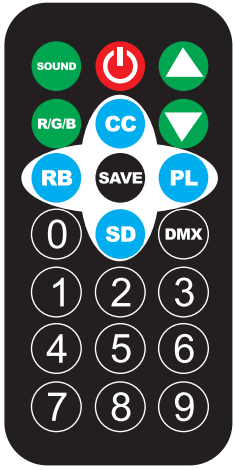

关闭LED
通过这个按键迅速开/关



手动调光
0-255手动调光，通过上下键改变LED光亮度，数值越大越亮



选色
1-64级变化，通过上下键选择不同颜色组合



渐变
1-16级变化，通过上下键改变速度快慢，数值越大越快



脉变
1-16级变化，通过上下键改变速度快慢，数值越大越快



跳变
1-16级变化，通过上下键改变速度快慢，数值越大越快



保存
设置值按此键后保存，下次开机为当前界面功能



控台模式
通过上下键加减地址码数值或者通过数值按键之间选取地址码数值；没有接入控台，d001为从机模式



声控
随着音乐节拍变化



向上选择
增加数值



向下选择
减少数值



数字按键0-9
用控台选择不同地址码

显示面板按键功能说明:

按键	功能说明	功能描述
[MENU]	功能选择	DMX控台/选色/渐变/脉变/跳变/声控/手动调光
[UP]	向上选择	增加数值
[DOWN]	向下选择	减少数值
[ENTER]	确定键	所有设置值按此键后保存，下次开机为当前界面功能

显示面板功能

d001~d512		DMX控台模式，通过上下键加减地址码数值
CC01~CC64		选色，通过上下键选择不同颜色组合
rb01~rb16		渐变，通过上下键改变速度快慢，数值越大越快
PL01~PL16		脉变，通过上下键改变速度快慢，数值越大越快
Sd01~Sd16		跳变，通过上下键改变速度快慢，数值越大越快
Soud		声控，通过音乐触发变化效果
r000~r255		手动调光P，通过上下键改变紫光亮度，数值越大越亮
G000~G255		手动调光P，通过上下键改变紫光亮度，数值越大越亮
b000~b255		手动调光P，通过上下键改变紫光亮度，数值越大越亮

7通道表

通道	通道值	功能描述
CH1	0-255	总调光（结合CH2、CH3、CH4使用）
CH2	0	紫光关闭
	1-255	紫光调节亮度（由暗到亮）
CH3	0	紫光关闭
	1-255	紫光调节亮度（由暗到亮）
CH4	0	紫光关闭
	1-255	紫光调节亮度（由暗到亮）
CH5	0-7	无频闪
	8-255	频闪（由慢到快），数值越大速度越快
	0-10	手动控制（CH1-CH5）
	11-60	选色（颜色由CH7控制）
	61-110	渐变（速度由CH7控制），数值越大速度越快
CH6	111-160	脉变（速度由CH7控制），数值越大速度越快
	161-210	跳变（速度由CH7控制），数值越大速度越快
	211-255	声控
CH7	0-255	选色/变色速度（数值越大速度越快）


收到DMX信号时，数码管第一位小数点会闪烁，否则没有收到。

主从机设定:

2台或2台以上相同的灯具用3芯信号线连接，设任何一台为主机[选色/渐变/脉变/跳变/声控/手动调光]，其它灯具都设为d001

USER MANUAL

LED Par Light with remote controller

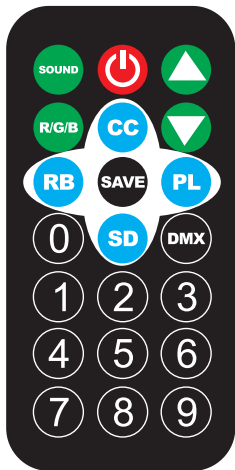

ON/OFF LED
Through the key quickly ON or OFF light



Manual dimming
0-255, through the up and down keys to change the LED light The brighter the degree, the greater the numerical



colors
Level 1-64 change, through the up and down keys to select different color combinations



The gradient
Level 1-64 change, through the up and down keys to select different color combinations



Pulse variable
Level 1-64 change, through the up and down keys to select different color combinations



Jump
Level 1-64 change, through the up and down keys to select different color combinations



save
Settings click this button after save, starting up for the current interface functions



Console mode
By means of numerical key to add and subtract the address or between numerical keys Select address code values; No access control table, d001 as from machine model



Sound
Along with the music rhythm changes



Up
Increase the numerical



Down
To reduce the numerical



Digital keys 0-9
By control table choose a different address

LCD Digital display function:

Key-press	Mode	Description
[MENU]	Function	DMX control/colors selection/colors pulse/colors transition/sound control/annual set
[UP]	Up	Increase values
[DOWN]	Down	Decrease values
[ENTER]	Enter	Confirmation button.After pressing this button,all setting values will be saved

Operation Instructions

MENU	Description
DO01-D512	DMX mode,change numerical value by up and down
CC01-CC64	Colors selection,select different colors by up and down
RB01-RB16	Colors shade,change speed by up and down,the bigger values,the faster
PL01-PL16	Colors pulse transform,change speed by up and down,the bigger values,the faster
SD01-SD16	Colors transition,change speed by up and down,the bigger values,the faster
Sound	Sound control mode
R000-R255	Manual set p,purple color brightness setting,change brightness by up and down
G000-G255	Manual set p,purple color brightness setting,change brightness by up and down
B000-B255	Manual set p,purple color brightness setting,change brightness by up and down

DMX Control Parameter Chart

Channels	Value	Function
CH1	0-255	Color brightness control(this change should use together with CH2,CH3 or CH4)
	0	purple light off
CH2	1-255	purple brightness from dark to bright
	0	purple light off
CH3	1-255	purple brightness from dark to bright
	0	purple light off
CH4	1-255	purple brightness from dark to bright
	0-7	No strobe flash
CH5	8-255	Strobe flash(from slow to fast),the bigger values,the faster
	0-10	Manual control(CH1-CH5)
CH6	11-60	Colors selection(colors contorted by CH7)
	61-110	Colors shade(colors contorted by CH7),the bigger values,the faster
	111-160	Colors pulse transform(speed contorted by GH7)the bigger values,the faster
	161-210	Colors transition(speed contorted by CH7)the bigger values,the faster
CH7	211-255	Sound control
	0-255	Colors selection/colors shade(the bigger values,the faster)