



FOXELLI
OUTDOOR GEAR

HEATED SOCKS

USER MANUAL

THANK YOU FOR CHOOSING FOXELLI™ HEATED SOCKS!

It is a carefully designed heating system with full feet composite fiber heating pad powered by the batteries to keep your feet warm and toasty on any occasion.

Please read user guide carefully before using your heated socks.
Keep it handy for the future reference!

COMPOSITION AND CARE

Socks: 85% Cotton, 15% Terylene
Heating pads: Composite Fiber
Powered by rechargeable Lithium-Polymer
Batteries

DC output: 7.4V-2.0AH 14.8W MAX

Capacity: 7.4V 3000MAH 22.2wh

USB input: 5V-2A

Machine washable

WHAT'S IN THE PACKAGE

1x Pair of Heated Socks

2x 3.000mAh USB Rechargeable Batteries

2x USB cables

1x User Manual

GETTING STARTED

1. Note that the batteries must be fully charged before using your socks for the first time! How to know if battery is fully charged? Simple! When charging the battery's lights will flash and turn off when fully charged. Fully recharges in up to 3 hours.

2. Connect the batteries to the socks and put them into the pockets. Make sure the connection cable is fully inserted into the battery.
3. To start heating press and hold the power button for 3 seconds. The indicator next to power button will light in red.
4. Press the button to switch between 3 heating settings. The indicator changes its color depending on a chosen level:
 - High - Red – 131-140°F (55-60°C) - 5 hours
 - Medium - Green – 113-122°F (45-50°C) - 6 hours
 - Low – Blue – 95-104°F (35-40°C) - 8 hours
5. To turn off the heating press and hold the power button for 3 seconds.

SAFETY GUIDELINES

- In case of diabetes, Raynaud's, or other similar medical conditions consult with your doctor before you start using heated socks.
- Regularly check your skin for reddening. Excessive heat levels over prolonged periods of use can lead to burns.
- Heated Socks are not suitable for children (0 - 8 years old) use.
- Do not charge when socks are wet.
- Do not insert any sharp objects into the battery pocket as this could damage the unit.
- If you notice any damage to connecting cables or batteries, discontinue the use of heated socks immediately. You may still use your socks without the heating system once the batteries have been removed.
- Improper maintenance or use which results in product damage is not covered by the warranty.



In case of any questions or concerns
please get in touch with us at
help@foxelli.com

www.foxelli.com