

Ocean Loong Bladeless Tower Fan & Space Heaterare exempt from insurance for one year.  
Terms and Conditions of One-year Warranty for your Bladeless Purifier and Heater.  
The warranty clause shall come into force as of the date of purchase.  
All warranty work will be performed by Ocean Loong OR its authorized agent.  
Any replacement parts will be owned by Ocean Loong.

Under the warranty terms, repairment and replacement services cannot extend the warranty period.  
Please keep your purchase notes.

 
Before repairing your products, please provide your purchase notes. We will charge for any work without this note.

### Scope covered

Scope: within one year after purchase, defects due to poor materials, workmanship or functions need to be repaired and maintained (if there are no parts or production interruption, they will be replaced with practical parts).

### Warranty card

|                                                                                                                                                              |                |  |                                 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|--|---------------------------------|
| Customer                                                                                                                                                     | Full name:     |  | Warranty Period<br><br>OneYears |
|                                                                                                                                                              | Address:       |  |                                 |
|                                                                                                                                                              | Telephone:     |  |                                 |
|                                                                                                                                                              | Purchase Date: |  |                                 |
| 1、The product will be free of charge within two years from the date of purchase.                                                                             |                |  | Examination clerk               |
| 2、If it is necessary to replace spare parts beyond the time limit specified in the preceding paragraph, the maintenance fee shall be charged as appropriate. |                |  |                                 |
| 3、During the warranty period, free repairs are not allowed in the following circumstances                                                                    |                |  | Problem Description             |
| a. Failure to query purchase records or provide purchase information                                                                                         |                |  |                                 |
| b. Maintenance beyond warranty period.                                                                                                                       |                |  |                                 |
| c. Damage caused by disassembly or renovation.                                                                                                               |                |  |                                 |
| d. Damage caused by misuse/negligence orimproper use.                                                                                                        |                |  |                                 |
| e. Faults or damages caused by non-ordinary household use (e.g. long-term use in places with poor environment).                                              |                |  |                                 |
| f. Those whose appearance is naturally stained by use.                                                                                                       |                |  |                                 |

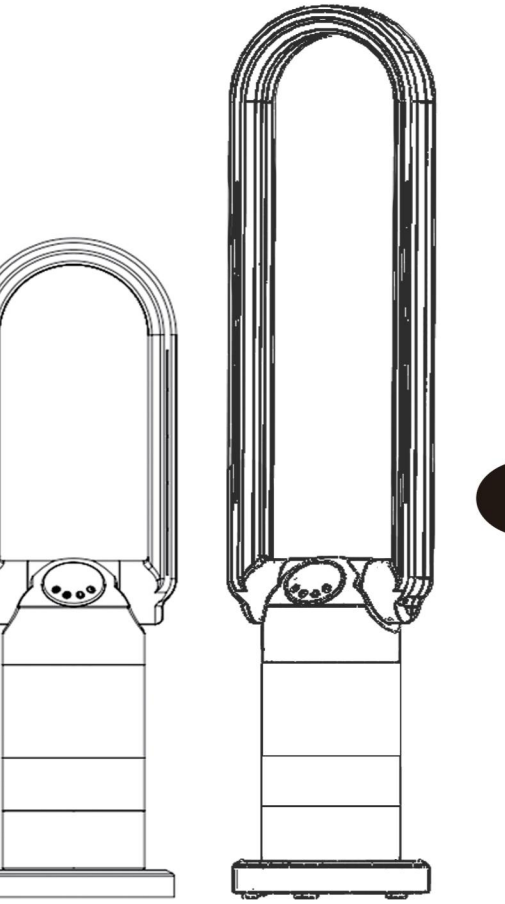


## Ocean Loong Bladeless Tower Fan & Space Heater

### Operating Instruction

Thank you very much for using our products, please kindly read through the manual before Use

 
### Introduction of Product fittings

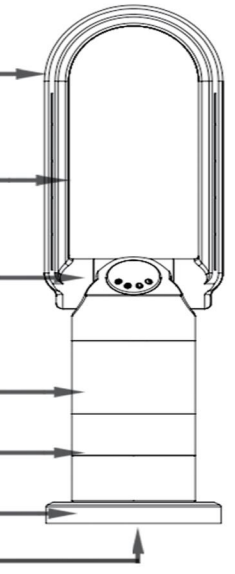


1. Adjustable Tilt Direction
2. Output Channel
3. Outlet Circle
4. Main Body
5. 120° Head Swinging Device
6. Base
7. Input Channel

Voltage:100V-120V  
Rating frequency:50/60Hz  
Power Rating:  
Cool: 28W  
Hot:1500W  
Sway angle: 120°  
Tilt Head:270°


### Remote control & Touch screen button instructions

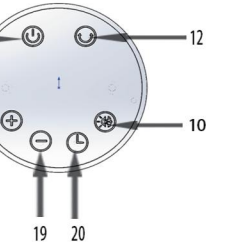 

 
8. Power
9. Fan speed -
10. Heater/fan switch over
11. Timer -
12. Sway
13. Heater +
14. Fan speed +
15. Heater -
16. Max Speed
17. Timer +
18. Wind speed +
19. Wind speed -
20. Timer

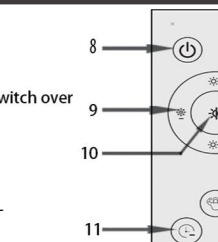

 8. Power
9. Fan speed -
10. Heater/fan switch over
11. Timer -
12. Sway
13. Heater +
14. Fan speed +
15. Heater -
16. Max Speed
17. Timer +
18. Wind speed +
19. Wind speed -
20. Timer

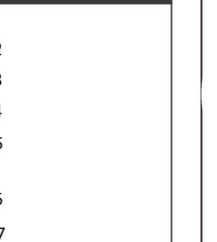


 8. Power
9. Fan speed -
10. Heater/fan switch over
11. Timer -
12. Sway
13. Heater +
14. Fan speed +
15. Heater -
16. Max Speed
17. Timer +
18. Wind speed +
19. Wind speed -
20. Timer

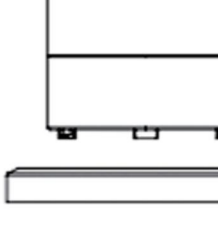


8. Power
9. Fan speed -
10. Heater/fan switch over
11. Timer -
12. Sway
13. Heater +
14. Fan speed +
15. Heater -
16. Max Speed
17. Timer +
18. Wind speed +
19. Wind speed -
20. Timer

### Assembly Instructions

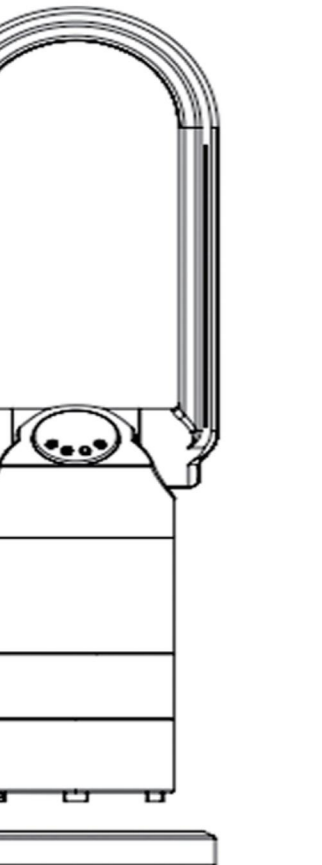 


1. Align the clip on the bottom of the main unit with the slot on the base, and the wires are exposed to the outside of the base along the wire slot.
2. Push the main unit to the base and twist it. Until it clicks into the slot.

### Cool Mode

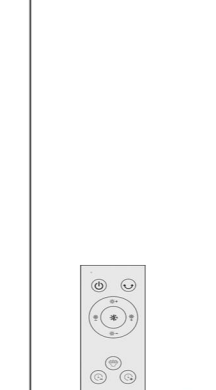 


1. Press the Cool button directly into cool mode.
2. Press the + or - button into adjust wind power.

### Heater Mode























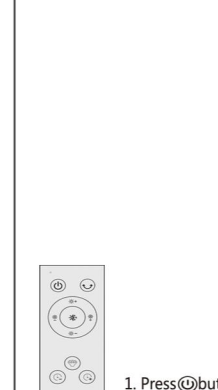 


1. Press the Heat button then press the Cool button, hot/cool mode.
2. And press the + or - button to change back to the natural wind mode.
3. Ceramic Heater with adjustable Thermostat. You can set the temperature from 16°C to 37°C.
4. When the temperature reaches the set degrees, it will automatically stand by and automatically turn on the warm air mode.





















### Principle of air outlet

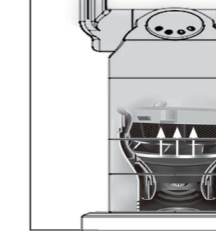 


### Principle of Hot wind

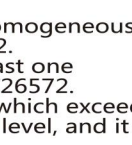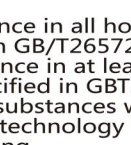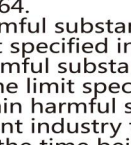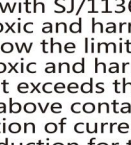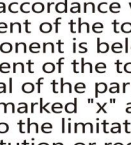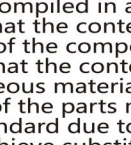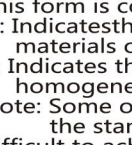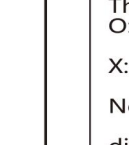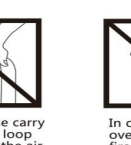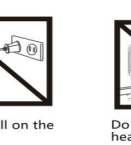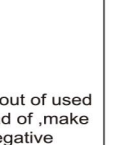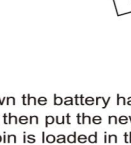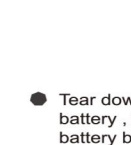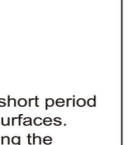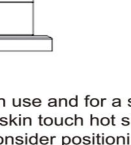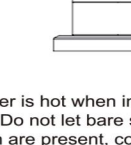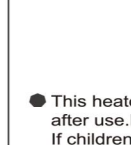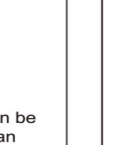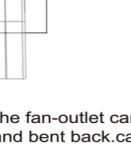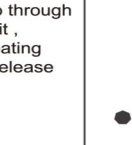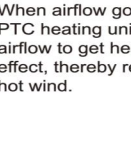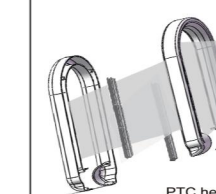                       

### Direction adjustment

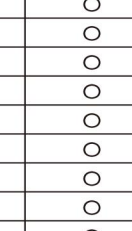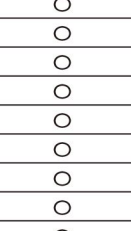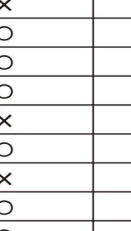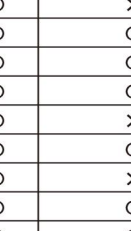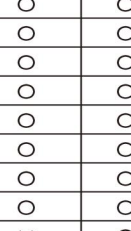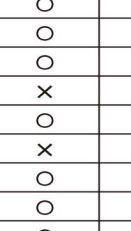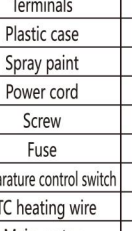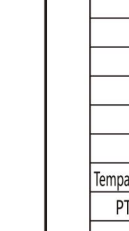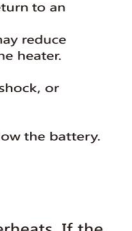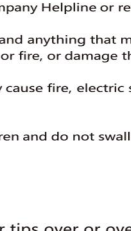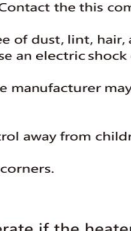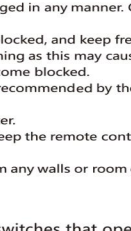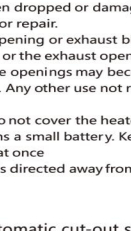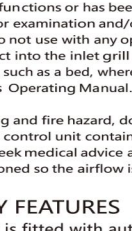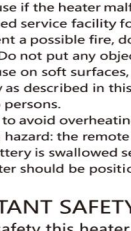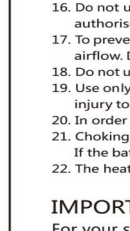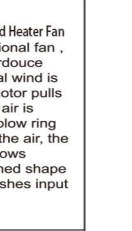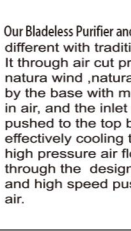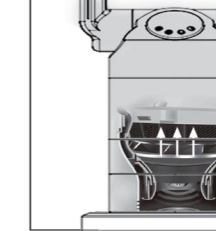                    


### Matters needing attention

 

- This heater is hot when in use and for a short period after use. Do not let bare skin touch hot surfaces. If children are present, consider positioning the heater out of their reach.

### Replace Battery

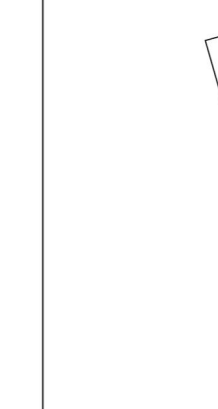 

- Tear down the battery hatchcover, take out of used battery, then put the new battery instead of, make battery bin is loaded in the positive & negative direction and close battery cover.

### IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE APPLIANCE.  
When using an electrical appliance, basic precautions should always be followed including the following:

### WARNING

1. TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:  
This heater is hot when in use and for a short period after use. To avoid burns, do not let bare skin touch hot surfaces. When moving the heater hold it by the base, not the air loop amplifier.
2. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains, at least 0.9m (3 feet) from the front of the heater and keep them away from the sides and rear when the heater is plugged in.
3. Extreme caution is necessary when any heater is used by or near children or infirm persons and whenever the heater is left operating and unattended.
4. Do not allow to be used as a toy. Close attention is necessary when used by or near young children. Children should be supervised to ensure that they do not play with the heater or remote control.
5. This heater and remote control are not intended for use by young children or infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the heater to ensure that they can use it safely.
6. The base must be fitted securely before operating. Do not dismantle or use without the base fitted.
7. Suitable for dry locations ONLY. Do not use outdoors or on wet surfaces. Do not use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bath or other water container. Do not use or store where it may get wet or in the immediate surroundings of a bath, a shower, or a swimming pool.
8. A heater has hot parts inside. Do not use it in areas where petrol, paint, or flammable liquids are used or stored or where their vapours are present. Do not use in conjunction with or directly next to an air freshener or similar products.
9. Do not locate directly below a mains electricity supply socket.
10. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
11. Do not handle any part of the plug or heater with wet hands.
12. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable.
13. Do not stretch the cable or place the cable under strain. Do not run the cable under carpeting. Do not cover the cable with throw rugs, runners, or similar coverings. Do not route the cable under furniture or appliances. To avoid a tripping hazard arrange the cable away from traffic areas so that it will not be tripped over.
14. Do not use with a damaged cable or plug. If the supply cable is damaged it must be replaced by this company or its service agent or similarly qualified persons in order to avoid a hazard.
15. To disconnect the heater, turn the controls off, then remove the plug from the socket. Always unplug the heater when not in use.
16. Do not use if the heater malfunctions or has been dropped or damaged in any manner. Contact the company Helpline or return to an authorised service facility for examination and/or repair.
17. To prevent a possible fire, do not use with any opening or exhaust blocked, and keep free of dust, lint, hair, and anything that may reduce airflow. Do not put any object into the inlet grill or the exhaust opening as this may cause an electric shock or fire, or damage the heater.
18. Do not use on soft surfaces, such as a bed, where openings may become blocked.
19. Use only as described in this Operating Manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
20. In order to avoid overheating and fire hazard, do not cover the heater.
21. Choking hazard: the remote control unit contains a small battery. Keep the remote control away from children and do not swallow the battery. If the battery is swallowed seek medical advice at once.
22. The heater should be positioned so the airflow is directed away from any walls or room corners.

### IMPORTANT SAFETY FEATURES

For your safety this heater is fitted with automatic cut-out switches that operate if the heater tips over or overheats. If the switches operate, unplug the heater and allow it to cool. Before restarting the heater check and clear any blockages and ensure the heater is on a solid level surface

### READ AND SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY



Do not pull on the cable.



Do not store near heat sources.



Do not use near open sources.



Do not use carry by the air loop amplifier, the air loop amplifies is not a handle.



In order to avoid fire hazard, do not cover the heater.

### Reminder

If the instructions do not conform to the product, please refer to the actual operation.  
All rights of interpretation of this product belong to Dongguan Anzheluo Electrical Appliance Co., Ltd.

### Name and content description of harmful substances in products

- This product meets the requirements of the 《Regulations on the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products》
- During the period of environmental protection use, consumers will not have harmful substance leakage and precipitation during normal use, which will affect consumers' health. We can rest assured that
- The environmental protection service life of our products will be 10 years. Only when this product is used under the normal conditions described in this specification can the "environmental protection service life" be effective.

### Name and content identification of toxic and harmful substances or elements

| Part name                    | Toxi and harmful substances or elements |        |        |              |            |              |
|------------------------------|-----------------------------------------|--------|--------|--------------|------------|--------------|
|                              | 铅 (Pb)                                  | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| Resistor Component           | ○                                       | ○      | ○      | ○            | ○          | ○            |
| Capacitor Component          | ×                                       | ○      | ○      | ○            | ○          | ○            |
| High voltage Capacitor       | ×                                       | ○      | ○      | ○            | ○          | ○            |
| Circuit Board                | ○                                       | ○      | ○      | ○            | ×          | ×            |
| LED Display                  | ×                                       | ○      | ○      | ○            | ○          | ○            |
| Solder                       | ×                                       | ○      | ○      | ○            | ○          | ○            |
| Internal wiring              | ×                                       | ○      | ○      | ○            | ○          | ○            |
| Terminals                    | ○                                       | ○      | ○      | ×            | ○          | ○            |
| Plastic case                 | ○                                       | ○      | ○      | ○            | ○          | ○            |
| Spray paint                  | ○                                       | ○      | ○      | ○            | ○          | ○            |
| Power cord                   | ×                                       | ○      | ○      | ○            | ○          | ○            |
| Screw                        | ○                                       | ○      | ○      | ×            | ○          | ○            |
| Fuse                         | ×                                       | ○      | ○      | ○            | ○          | ○            |
| Temperature control switch   | ○                                       | ○      | ○      | ×            | ○          | ○            |
| PTC heating wire             | ○                                       | ○      | ○      | ○            | ○          | ○            |
| Main motor                   | ○                                       | ×      | ○      | ○            | ○          | ○            |
| Swing head synchronous motor | ○                                       | ○      | ○      | ○            | ○          | ○            |
| Remote control               | ○                                       | ×      | ○      | ○            | ○          | ○            |
| Label sticker                | ○                                       | ○      | ○      | ○            | ○          | ○            |

This form is compiled in accordance with SJ/11364.  
X: Indicates that the content of the toxic and harmful substance in all homogeneous materials of the component is below the limit specified in GB/T26572.  
○: Indicates that the content of the toxic and harmful substance in at least one homogeneous material of the part exceeds the limit specified in GB/T26572.  
Note: Some of the parts marked "x" above contain harmful substances which exceed the standard due to the limitation of current industry technology level, and it is difficult to achieve substitution or reduction for the time being.