


TOSHIBA

MICROWAVE OVEN INSTRUCTION MANUAL

ML-EC42P(SS)

Please review this instruction manual before operating.

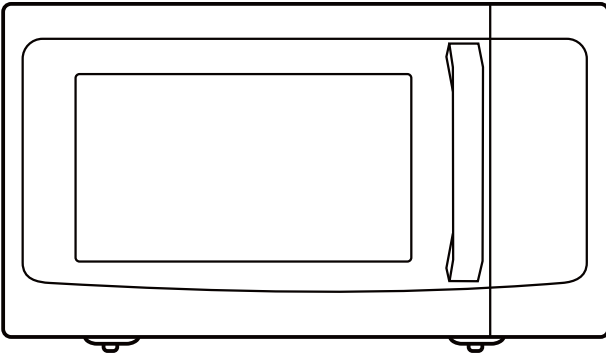

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	01
Important safety instructions	03
Grounding instructions	07
Radio interference	09
Utensils	10
Materials you can use in microwave oven	11
Materials can not be used in microwave oven	13

PRODUCT SETTING

Setting up your oven	14
----------------------------	----

INSTRUCTION FOR USE

Before using for the first time	17
Operation	18
1. Power levels	19
2. Clock setting	19
3. Kitchen timer	20
4. Microwave cook	20
5. Convection cook	21
6. Combination function (convection + microwave)	22
7. Warm hold function	23
8. One touch start	23
9. Time defrost	24

10. Auto defrost function	24
11. Auto bake & roast function	25
12. Sensor cook	26
13. Sensor reheat	26
14. Popcorn	27
15. Air fry	27
16. Favorite function	29
17. Muti-stage cooking	30
18. Turn on/off the buzzer sound	31
19. Energy saver mode	31
20. Lock function	31
21. Cooking end reminder function	31
22. Other specifications	32
23. Turntable reset function	32
24. Inquiring function	32
Cleaning	33

MAINTENANCE

Trouble shooting	35
One year limited warranty	36



NOTE


BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.
It is important not to defeat or tamper with the safety interlocks.

- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

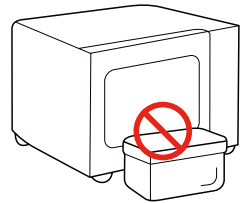

- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
- (1). DOOR (bent)
 - (2). HINGES AND LATCHES (broken or loosened)
 - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

MODEL	ML-EC42P(SS)
RATED VOLTAGE	120V~ 60Hz
RATED INPUT POWER (MICROWAVE)	1500W
RATED OUTPUT POWER (MICROWAVE)	1000W
RATED INPUT POWER (CONVECTION)	1750W
OVEN CAPACITY	1.5 cu.ft.
TURNTABLE DIAMETER	Ø13.6 inch
EXTERNAL DIMENSIONS	21.77x21.5x12.99 inch
NET WEIGHT	Approx. 45.5 lbs



NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.



Read all instructions before using the appliance.



Read and follow the specific:
"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 1.



This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 7.



Install or locate this appliance only in accordance with the provided installation instructions.



As with any appliance, close supervision is necessary when used by children.




This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.



When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.




IMPORTANT SAFETY INSTRUCTIONS


 Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.


THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to persons:


1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.
4. After heating, allow the container to stand in the microwave oven for a short time before

- removing the container.
5. Use extreme care when inserting a spoon or other utensil into the container.

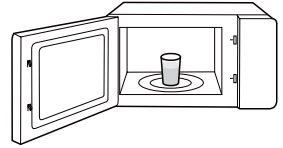


 Keep cord away from heated surface.


 Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.

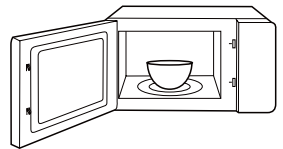


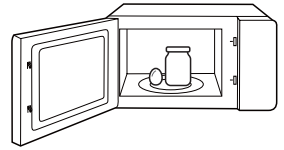
IMPORTANT SAFETY INSTRUCTIONS


 To reduce the risk of fire in the oven cavity:


1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.


 Do not cover or block any openings on the appliance.

 Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.




 Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

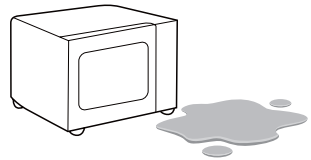



 Do not immerse cord or plug in water or any other liquid.




IMPORTANT SAFETY INSTRUCTIONS

 
 Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.


 Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.


 Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.


 Do not let cord hang over edge of table or counter.

 Do not use paper products when appliance is operated in the toaster mode.



 Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

 Do not cover racks or any other part of the oven with metal foil. This will cause over-heating of the oven.

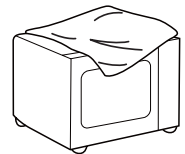

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY(NOT FOR
COMMERCIAL USE)**

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



DANGER

Electric Shock Hazard:
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

GROUNDING INSTRUCTIONS



WARNING

Electric Shock Hazard:


Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1).Clean door and sealing surface of the oven.
 - (2).Reorient the receiving antenna of radio or television.
 - (3).Relocate the microwave oven with respect to the receiver.
 - (4).Move the microwave oven away from the receiver.
 - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

This device complies with part 18 of the FCC Rules.

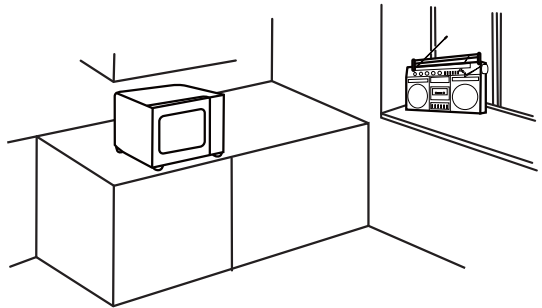

UTENSILS



CAUTION

Personal Injury Hazard:


Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on **"Materials you can use in microwave oven ."** or **"Materials can not be used in micro wave oven."**

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

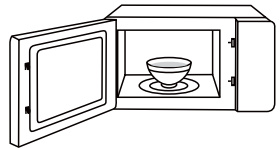





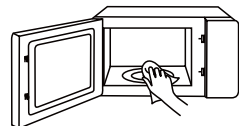












NOTE



 



KEEP THE CAVITY CLEAN








  








MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 <p>Browning dish</p>	<p>Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.</p> 
 <p>Dinnerware</p>	<p>Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.</p> 
 <p>Glass jars</p>	<p>Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.</p> 
 <p>Glassware</p>	<p>Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.</p> 
 <p>Oven cooking bags</p>	<p>Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.</p> 
 <p>Paper plates and cups</p>	<p>Use for short-term cooking/warming only. Do not leave oven unattended while cooking.</p> 
 <p>Paper towels</p>	<p>Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.</p> 
 <p>Parchment paper</p>	<p>Use as a cover to prevent splattering or a wrap for steaming.</p> 
 <p>Plastic</p>	<p>Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.</p> 

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. 
 Thermometers	Microwave-safe only (meat and candy thermometers). 
 Wax paper	Use as a cover to prevent splattering and retain moisture. 

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish. 
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish. 
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing. 
 Metal twist ties	May cause arcing and could cause a fire in the oven. 
 Paper bags	May cause a fire in the oven. 
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. 
 Wood	Wood will dry out when used in the microwave oven and may split or crack. 

SETTING UP YOUR OVEN

 
NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton and oven cavity.



Grill Rack

(Can only be used without microwave function and must be placed on the glass tray.)



Grill Tray

(Can only be used without microwave function and must be placed on the grill rack.)




Glass Tray

(Can be used under all functions)



Instruction Manual

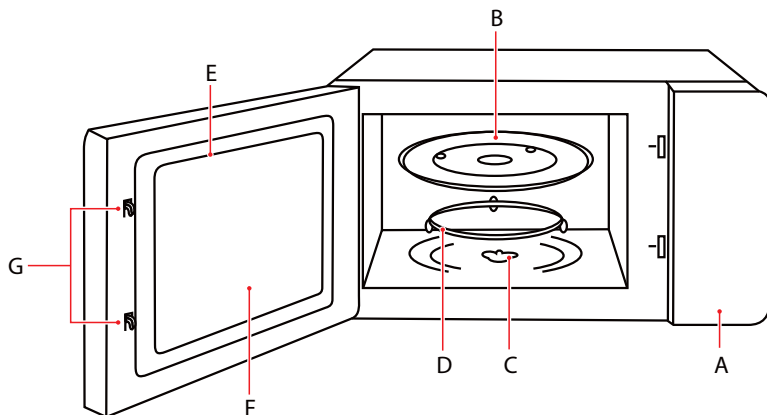

A. Control panel
B. Glass tray
C. Turntable shaft
D. Turntable ring assembly

E. Door assembly
F. Observation window
G. Safety interlock system

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION



Cleaning the cooking compartment and putting the turntable in place.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.

Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

How to put the turntable in place:

1. Place the turntable ring assembly^③ into the recess in the cooking compartment.
2. Place the glass tray^① on the turntable ring assembly^③. Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray^① engages in the turntable shaft^② in the center of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

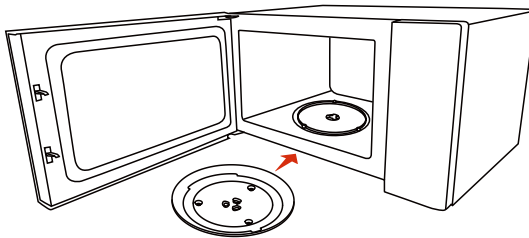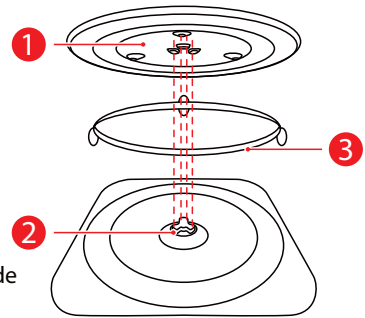

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.


INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents. A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.

The minimum installation height is 3.0ft(91.4cm).

- a. Leave a minimum clearance of 12 inches (30cm) above the oven.
- b. Do not remove the legs from the bottom of the oven.
- c. Blocking the intake and/or outlet openings can damage the oven.
- d. Place the oven as far away from radios and TV as possible.

Operation of microwave oven may cause interference to your radio or TV reception.

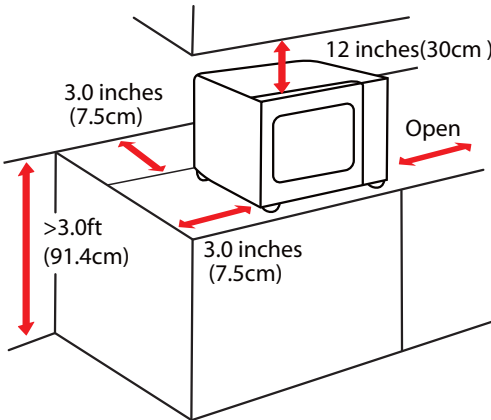


SIDE	DISTANCE (INCHES/CM)
Top	12 inches/30cm
Left	3.0 inches/7.5cm
Right	Open
Behind	3.0 inches/7.5cm
Front	Open

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

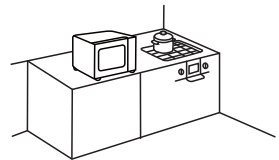

The accessible surface may be hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

The appliance may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**IMPORTANT SAFETY INSTRUCTIONS**" beforehand on page 3.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.



NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

CONTROL PANEL AND FEATURES



1. POWER LEVELS

Ten power levels are available.

Prior to cooking, press Power Level and "PL10" will display. Then press number pads to select a different power level. Please refer to page 16 "MICROWAVE COOK" for detailed power level setting.

LEVEL	POWER	DISPLAY
10	100%	PL10
9	90%	PL9
8	80%	PL8
7	70%	PL7
6	60%	PL6
5	50%	PL5
4	40%	PL4
3	30%	PL3
2	20%	PL2
1	10%	PL1

2. CLOCK SETTING

When the microwave oven is plugged into an outlet, "0:00" will display.

- a Press Timer/Clock twice.

Timer/
Clock

- b Press the number pads to enter the current clock time.

Express Cooking 1- 6min
1 2 3
100°F 170°F 250°F

- c Press Timer/Clock to finish clock setting.

Timer/
Clock



NOTE

- If the numbers entered are not within the range between 1:00 to 12:59, the setting will not be accepted until valid numbers are entered.
- In the process of setting clock, if the STOP/Cancel pad is pressed or if there is no operation within 1 minute, the display will automatically return to the previous clock setting.

3. KITCHEN TIMER

- a Press Timer/Clock once.

Timer/
Clock

- b Press the number pads to enter the time amount.
The maximum time is 99 minutes and 99 seconds.

Express Cooking 1- 6min
1 2 3
100°F 170°F 250°F

- c Press START/+30Sec. to confirm setting, The countdown starts.



- d When it's time. The oven will beep 5 times. The time of day will display if the time has been set.



NOTE

- The Kitchen Timer setting is different from the Clock setting; it is simply a timer.
- During the Kitchen Timer function, no cooking function can be set into operation.
- Kitchen Timer amount cannot be increased by pressing START/+30Sec.
- Pressing STOP/Cancel will cancel the Timer countdown.

4. MICROWAVE COOK

- a Press Micro once.

Micro.

- b Press number pads to enter the cooking time.
The maximum cooking time is 99 minutes and 99 seconds.

Express Cooking 1- 6min
1 2 3
100°F 170°F 250°F

Press Power Level several times to select a different power level if desired.

Power
Level

- c or

Press Power Level once, pads 0 through 9 to select a different power level if desired. See the POWER LEVEL table above.

Power
Level

 
Express Cooking 1- 6min
1 2 3
100°F 170°F 250°F

d Press START/+30Sec. to start cooking. The countdown starts.



Example : To cook the food with 50% microwave power for 15 minutes.

• Press Micro.



• Press the number pads to enter the current clock time.



• Press Power Level , then press "5" .



• Press START/+30Sec. to start cooking. The countdown starts.

 


NOTE

In the process of setting, if the STOP/Cancel pad is pressed or if there is no operation within 1 minute, the oven will automatically return to display the clock.



5. CONVECTION COOK

Press Conv. more times to choose the desired cooking temperature.



a or

  Press Conv. once, press More or Less or number



or



pads to choose the desired cooking temperature. Temperature selections (° F):100,170, 250, 275, 300, 325, 350, 375, 400, 425.

b Press START/+30Sec. twice to start preheating.



c When the oven preheats to the selected cooking temperature, it will beep twice; open the door and place food in oven.

d Press number pads to enter the cooking time.
The maximum cooking time is 99minutes and 99 seconds.



e Press START/+30Sec. to start cooking. The countdown starts.

 


NOTE

- If no preheat needed, press START/+30Sec. once in step b and skip step c above.
- If Convection Cooking without preheating, place food into oven at the start of cooking.
- If preheating, do not place food into oven until cooking temperature is reached.
- Once the oven preheats to the selected cooking temperature, the oven will beep once to remind you to enter the cook time, and the temperature will flash. If no operation in 5 minutes, the oven will beep 5 times and return to display the clock.
- The oven must preheat to the selected cooking temperature, and the oven door must be opened before convection cooking time can be entered.


6. COMBINATION FUNCTION (CONVECTION + MICROWAVE) —

Press Combo more times to choose the cooking temperature.



a or

 Press Combo once, press More or Less or number



or



pads to choose the cooking temperature. Temperature selections (° F): 170, 250, 275, 300, 325, 350, 375.

 
b Press START/+30Sec. to confirm.



- c Press number pads to enter the cooking time.
The maximum cooking time is 99minutes and 99 seconds.



- d Press START/+30Sec. to start cooking. The countdown starts.



7. WARM HOLD FUNCTION

- a Press Warm Hold.



- b Press START/+30Sec. to start cooking. The countdown starts.



NOTE

- Warm Hold function can be used after Microwave cook, Convection cook, Combination cook, Defrost cook and Multi-stage cooking.
- The maximum cook time of Warm Hold function is 99 minutes.
- Cooking will be canceled if you open the door or press STOP/ Cancel during Warm Hold function.

 
8. ONE TOUCH START

- a Instant cooking at 100% power level and 1 to 6 minutes cooking time can be started by pressing number pads 1 to 6.

- b Press START/+30Sec. to increase the cooking time by 30 seconds with each press. The maximum cooking time is 99 minutes, 99 seconds.



- c During cooking, press More or Less pad to increase or decrease cooking time by 10 seconds.



NOTE

- Time can also be added in 30 seconds increments by pressing START/+30Sec. during Microwave Cooking, Time Defrost and Multi-stage Cooking.
- Time cannot be added by pressing START/+30Sec. during Weight Defrost and Kitchen Timer functions.

9. TIME DEFROST

a Press Time Defrost once.



b Press the number pads to input the defrost time. The maximum time is 99 minutes and 99 seconds.

 


c Press START/+30Sec. to start defrosting. The countdown starts.





10. AUTO DEFROST FUNCTION

Press Auto Defrost more times to choose the defrost food type.



a or

  Press Auto Defrost once, press More or Less pad to choose the defrost food type. See table below.



b Press number pads to enter the weight to be defrosted. If the weight input is not between the weight range listed on the table above, the input will be invalid. The machine will not work.



c Press START/+30Sec. to start defrosting. The countdown starts.



LED DISPLAY	FOOD	WEIGHT
dEF1	Meat	0.1-6.0 Lbs
dEF2	Poultry	0.1-6.0 Lbs
dEF3	Fish	0.1-6.0 Lbs
dEF4	Bread	0.1-1.0 Lbs

**NOTE**

- During cooking of meat, poultry and fish, the oven will beep twice to remind you to turn over the food.
- Open the door to pause operation. Turn over food, close the door and press START/+30Sec. to resume defrost cycle. If you do not open door to pause operation, the oven will continue the defrost cycle without interruption.

11. AUTO BAKE & ROAST FUNCTION

- a** Press Auto Bake & Roast more times to choose the menu from "Ab-1" to "Ar-4".

Auto
Bake/Roast

For the Ab-1 to Ab-3 menu:
press the number 1 to confirm the weight



- b** For the Ab-4 to Ar-4 menu:
press the number pads to adjust the weight.



- c** Press START/+30Sec. to start cooking. The countdown starts.



AUTO BAKE & ROAST CHART:

FOOD	DISPLAY	WEIGHT/ PORTION	RECOMMENDED GRILL
Frozen Pizza	Ab-1	10 oz	Higher grill rack
Muffins	Ab-2	6 each	Lower grill rack
Biscuit/DinnerRoll/ Bread Stick	Ab-3	7 oz	Higher grill rack
Frozen French Fries	Ab-4	4-10 oz	Higher grill rack
Beef	Ar-1	2.0-4.0 Lbs	Lower grill rack
Whole Chicken	Ar-2	2.5-6.0 Lbs	Lower grill rack
Turkey Breasts	Ar-3	3.0-6.0 Lbs	Lower grill rack
Pork	Ar-4	2.0-4.0 Lbs	Lower grill rack

12. SENSOR COOK

Press Sensor Cook more times to choose the type of food.

Sensor
Cook

a or

Press Sensor Cook once,
press number pads to choose the type
of food.

Sensor
Cook



Express Cooking 1- 6min
1 2 3
100°F 170°F 250°F

b Press START/+30Sec. to start cooking.
Once the food has been sensed, the countdown starts.



SENSOR COOK CHART:

FOOD	DISPLAY	PAD	WEIGHT/PORTION
Potato	SC-1	1	1-4 PCS (8-10 oz/PCS)
Fresh Vegetable	SC-2	2	1-4 CUP (8.5 oz/cup)
Frozen Vegetable	SC-3	3	1-4 CUP (8.5 oz/cup)
Frozen Entree	SC-4	4	10-20 oz
Rice	SC-5	5	1-2 CUP(7.8 oz/cup)
Casserole	SC-6	6	1-4 CUP(8.5 ozcup)
Ground Meat	SC-7	7	4-32 oz
Fish/Seafood	SC-8	8	4-32 oz
Scrambled Eggs	SC-9	9	2-5 each
Frozen Pizza	SC-0	0	6-12 oz

13. SENSOR REHEAT

Press Sensor Reheat more times to choose the type of food.

Sensor
Cook

a or

Press Sensor Reheat once,
press number pads 1 through 3 to
choose the type of food.

Sensor
Cook



Express Cooking 1- 6min
1 2 3
100°F 170°F 250°F

b Press START/+30Sec. to start cooking.
Once the food has been sensed, the countdown starts.



Auto Bake Chart:

FOOD	DISPLAY	WEIGHT/PORTION
Dinner Plate	Sr-1	8-24 oz
Soup/Sauce	Sr-2	1-4 CUP (8.5 oz/cup)
Casserole	Sr-3	1-4 CUP (8.5 oz/cup)

14. POPCORN

Press Popcorn more times to choose the weight.

Popcorn

a or

Press Popcorn once, press More or Less or number

Popcorn

More

Less

or

1

100°F

2

170°F

3

250°F

pads 1 through 3 to choose the weight. You can choose 1.75 oz, 3.0 oz and 3.5 oz.

b Press START/+30Sec. to cook. The countdown starts.



15. AIR FRY

If you not to set the temperature and time, you need to:

Press "AIR FRY" more times to select menu from H1 to H10.

AIR FRY

a or

Press "AIR FRY" once, press the number pads to select menu from H1 to H10.

AIR FRY

1

100°F

2

170°F

3

250°F

b Press "START/+30Sec." three times to start cooking.

 


If you want to set the temperature and time, you need to:

a Refer to step a above to select the menu,press “START/+30Sec.” confirmation menu.




b In the temperature confirmation interface, you can select 350 ~ 425F with More or Less or number pads, and press the “START/+30Sec.” to enter the time interface.



or



 c In the time confirmation interface, you can add or subtract 30s with More or Less or re-enter the time with the number pads.



or



d In the time confirmation interface, press the “START/+30Sec.” when the closing state and time are not 0 and the temperature sensor is normal.



Air Fry Chart :

FOOD	DISPLAY	WEIGHT/PORTION
Frozen French Fries	H1	About 8oz
Frozen Onion Rings	H2	About 8oz
Frozen Chicken nuggets	H3	About 11oz
Frozen Chicken wings	H4	About 11oz
Frozen Chicken legs	H5	About 14oz
Chicken Tenders	H6	About 8oz
Coconut Tenders	H7	About 8oz
Fish Sticks	H8	About 7oz
Spring Rolls	H9	About 9oz
Mozzarella Sticks	H10	About 8oz

16. FAVORITE FUNCTION

- a** Press Favorite to program and choose up to three cooking functions. Each function will be indicated by 1, 2 or 3 in the display.
- b** Press Favorite repeatedly until your desired setting number appears in the display.
- c** Press START/+30Sec. to begin it.
A maximum of two cooking stages can be set for each setting.

Favorite



To program a setting, follow the steps listed below.

Example: Cook food at 80% Power Level for 3 minutes and 20 seconds; save as memory 2.

- Press Favorite twice; screen displays 2.

Favorite

- Press Micro

Micro.

- Press number pads to enter the cooking time.



- Press Power Level once, then press "8" .

Power
Level



- or
- Press Favorite to save the procedure. Oven beeps once.

Favorite

- Press START/+30Sec. to save the procedure and start cooking.



- Auto Menu cannot be set in Favorite function.
- The next time you want to run the program, just press Favorite twice, and then press START/+30Sec.

17. MULTI-STAGE COOKING

At most 2 stages can be set for cooking. If one stage is Defrost, it will automatically set to be the first stage.



NOTE

Auto Menu and Preheat cannot be set in Multi-stage Cooking.

EXAMPLE: 80% Power Level for 5 minutes followed by 60% Power Level for 10 minutes; saved as memory 3.

- Press Favorite 3 times.

Favorite

- 1 • Press Micro once, press number pads to set cook time.

Micro.

▶ 4 5 6
275°F 300°F 325°F

- 1 • Press Power Level once, then press "8" to choose 80% first stage cooking power.

Power Level

▶ 7 8 9
350°F 375°F 400°F

- 2 • Press Micro again, then press number pads to set cook time.

Micro.

▶ Express Cooking 1- 6min
1 2 3
100°F 170°F 250°F

- 2 • Press Power Level once, then press "6" to choose 60% second stage cooking power.

Power Level

▶ 4 5 6
275°F 300°F 325°F

- Press START/+30Sec. to immediately start multi-stage cooking.



NOTE

- The next time you want to run the program, just press Favorite three times, and then press START/+30Sec.
- If you do not want to save a particular multi-stage program as a procedure, do not press Favorite as the first step. Press START/+30Sec. after programming both stages.

18. TURN ON/OFF THE BUZZER SOUND

 
It is default that the buzzer sounds is onfix spacing of. In waiting state, long pressing on number 8 for 3 seconds, it sounds a long beep, turn o ffor turn on the sound.




- This model has mute function and energy-saving mode.
- This function can work under lock function too.

19. ENERGY SAVING MODE

- a In standby mode, press the " STOP/Cancel " once (less than 3 seconds to avoid starting the child lock function) to enter the Energy Saving mode.



 
- b In child-locked mode, press the " STOP/Cancel " once (less than 3 seconds) and release to enter the Energy Saving Mode .




- c Above operation is the only way to start the Energy Saving mode.
- d The Energy Saving mode works only if the door is closed.

20. LOCK FUNCTION

 - a To lock the microwave so that it cannot be operated by children or other unintended users, press STOP/Cancel pad for 3 seconds. You will hear a long beep. "LOC" will display.



 - b To unlock, press STOP/Cancel for 3 seconds, you will hear a long beep and "LOC" will disappear.



- c If the clock has been set, the oven will return to display the clock. Otherwise, "0:00" will display.

21. COOKING END REMINDER FUNCTION

The oven will beep five times to alert the user that cooking time has ended. "End" will display.

22. OTHER SPECIFICATIONS

- a START/+30Sec. must be pressed to continue cooking if the door is opened during cooking.

 


- b A single beep sounds to indicate that a pad is correctly pressed; if pad is not correctly pressed, no beep sound.

23. TURNTABLE RESET FUNCTION

- a When cooking has finished, if the turntable is not at the initial position, it will enter the turntable reset function. At this time, the lamp, fan and turntable are working, " E E E E " will dynamic display. After the turntable has reset, the oven stops cooking and reminds that cooking has finished.

- b In waiting state, press number key "5" for 3 seconds, there will be a long "beep" denoting turntable reset function is turned off. To turn on the turntable reset function, in waiting state press number key "5" for 3 seconds, there will be a long "beep" denoting that turntable reset function is released.



NOTE

 
- This function only works for one completed cooking. If pause or open the oven door during cooking, the current cooking cannot enter the turntable reset function.
- Under the reset state, if opening the door or "STOP/Cancel" button is pressed, the oven will go back to waiting state.

24. INQUIRING FUNCTION


- a When oven is cooking, press Timer/Clock for the time of day to appear for three seconds in the display.



- b When oven is cooking, press Conv. , Power Level or Combi pads for cooking power to appear for three seconds in the display.



or

 

or



CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information below. Wash new sponge cloths thoroughly before use.

 
Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

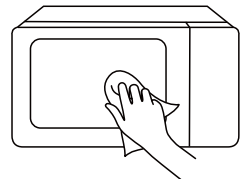

APPLIANCE FRONT PLATE

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

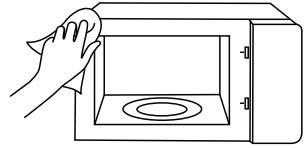

APPLIANCE CAVITY

Hot soapy water or vinegar solution:


Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

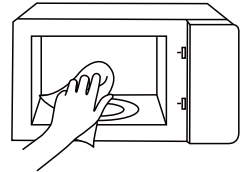

RECESS IN THE COOKING COMPARTMENT

Damp cloth:

Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

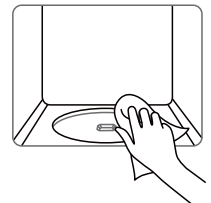

TURNTABLE AND ROLLER RING

Hot soapy water:

When placing the turntable back into its recess, it must engage properly.



DOOR PANEL

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

MAINTENANCE

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.

If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	<ul style="list-style-type: none">a. Electrical cord for oven is not plugged in.b. Door is open.c. Wrong operation is set.	<ul style="list-style-type: none">a. Plug into the outlet.b. Close the door and try again.c. Check instructions
Arcing or sparking	<ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. The oven is operated when empty.c. Spilled food remains in the cavity.	<ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Do not operate with oven empty.c. Clean cavity with wet towel.
Unevenly cooked foods	<ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Food is not defrosted completely.c. Cooking time, power level is not suitable.d. Food is not turned or stirred.	<ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Completely defrost food.c. Use correct cooking time, power level.d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	<ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Food is not defrosted completely.c. Oven ventilation ports are restricted.d. Cooking time, power level is not suitable.	<ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Completely defrost food.c. Check to see that oven ventilation ports are not restricted.d. Use correct cooking time, power level
Improper defrosting	<ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Cooking time, power level is not suitable.c. Food is not turned or stirred.	<ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Use correct cooking time, power level.c. Turn or stir food.

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United State.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customercare@us.toshiba-lifestyle.com

855-204-5313

Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or conse quential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : _____

Serial Number : _____

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer' s warranty rights.

SAVE THIS FOR YOUR RECORDS

Made in China

#DetailsMatter

Customercare@us.toshiba-lifestyle.com
855-204-5313