



Instruction Booklet
iket2702

smarter

goodbye waiting

hello iKettle



Control your iKettle via your smartphone

Use your smartphone or tablet with the iKettle.

Easy one-touch set up

Simple connectivity both quick and secure.

Wake up alarm mode

Wake up with your morning rocket fuel ready to go!

Welcome home mode

Hard day at work? Your hot drink is waiting...

Features

Variable temperature control

Make your perfect tea or coffee just the way you like it.

Multiple user access

Get everyone involved! Connect multiple smart devices to the iKettle.

Keep warm feature

Keep the water warm until you're ready.

Customisable interface

Make the iKettle app your own with interchangeable wallpapers.

Contents

- 1** Temperature guide
- 2** Safety
- 5** Cleaning and maintenance
- 6** Specifications
- 8** Before first use
- 9** Setting up
- 10** Getting connected
- 12** Using the iKettle
- 14** Keep warm
- 16** Wake up mode
- 17** Welcome home mode
- 18** FAQs
- 22** Troubleshooting

65°C	Ideal for green teas
80°C	Perfect for white teas
95°C	Great for coffee
100°C	Best for black teas

Find more detailed tea and coffee guides on the iKettle app, or at:

wifikettle.com

Safety Notice

It's safety first here at iKettle and the safety of our customers is of paramount importance. It is for that reason we ask you to read and adhere to the following notices as well as exercising caution when using any electrical appliance.

1. Before using the iKettle please check whether the voltage you adopt complies with the rated voltage of the product.
2. Do not share the power socket with other electric appliances to avoid overcurrent.
3. If the power cord is damaged it must be replaced by the manufacturer.
4. Do not turn the iKettle on when there is little or no water. This may affect the heating coil and reduce the product's life span.
5. Do not expose to fire, heat, rain or sun.

6. Please use the product on a flat surface.
7. Do not immerse the iKettle into water as it will damage its components.
8. Do not let children use or play near the iKettle. Boiling water and electricity can be very dangerous.
9. The iKettle is compatible only with the iKettle base
10. Warning: Direct the spout away from any power supply.
11. Warning: Do not open the lid while the water is boiling.
12. Caution: Ensure that the iKettle is switched off or on standby before removing it from its base.
13. When cleaning the appliance and reusing please ensure that the iKettle and power supply plug is dry before use.

14. If the iKettle is overfilled, boiling water will be ejected.

15. When the iKettle is boiled be careful when handling, it will be very hot to touch. Only hold by the rubber/plastic handle.

16. The iKettle is intended only to heat water.

17. This appliance is NOT suitable for commercial use.

18. Do not place the iKettle near the edge of surfaces during operation.

19. Ensure that the surface the iKettle is placed upon is level, clean and free of water and other substances.

Cleaning and Maintenance

-Before cleaning the iKettle please ensure that the power has been unplugged.

-Any dirt on the surface of the iKettle can be wiped off by damp cloth. Do not immerse the iKettle into water or into any cleaning agents.

-The iKettle is not dishwasher safe. Hand clean only.

-Descaling: to descale the iKettle pour a descaling agent into the iKettle, as you would water and leave for one hour or follow cleaning agent instructions. Pour out the liquid and wipe clean. Refill with clean water, boil and then empty out the contents.

We would advise that the iKettle should be descaled at least twice a year.

What Do I Need?

A smartphone or tablet.
(yes, its that simple)

Model Specifications

Model iket2702

Capacity 1.8 Litres

Voltage 220-240V

Frequency 50/60Hz

Power 1850-2200W

Connectivity

Wireless 802.11b/g

WPA/WPA2



- A. Washable scale filter
- B. Stainless steel design
- C. 1.8 Litre
- D. 20 minute keep warm
- E. Opening lid with window
- F. Soft grip handle
- G. Digital temp settings
- H. LED Backlit controls
- I. Start/Cancel Button

Not Shown

Remote boil via smartphone
Boil ready notification alert
360 cordless body

Box Contents

1x iKettle
1x WiFi Base Unit
Instruction Manual

Before First Use

Before using the iKettle for the first time, please ensure that the iKettle is clean and all packaging has been removed from the inside and outside of the product.

When using the iKettle for the first time please fill the iKettle with water to the maximum water level, boil the water once or twice and empty.

Refill with clean water and use.

We recommend the use of filtered water for the best taste experience.

Setting Up

When first connecting the iKettle to the power supply, the iKettle gives out two beeps.

The 'On/Off' indicator will blink to show that the iKettle has entered the standby mode.

Pressing the 'On/Off' button again will wake the iKettle to start boiling.

The default temperature setting for the iKettle is 100 degrees.

To use the other available heat settings press the on/off button and then select your desired temperature.

Once you have selected your temperature setting, you can then use the keep warm feature by pressing the 'keep warm' button.

Getting Connected

Connecting your iKettle to your iKettle app couldn't be easier. The application will guide you through a set up installation.

1. Plug in the iKettle and switch it on via the main power supply.
2. Download the iKettle app via your app store or at www.wifikettle.com/app
3. Open the iKettle app and follow the step by step instructions to complete set up.

IMPORTANT: Please make sure that your smartphone is in range of the iKettle network as well as your home network.

UK Support Line

0800 471 4935

wifikettle.com/support

 
Using The iKettle

Press the 'On/Off' button and the iKettle will automatically start to boil at 100°C.

You can then choose from four temperature settings; 60°C, 80°C, 95°C, 100°C. The iKettle also has a keep warm function.

These settings allow you to heat the water to the perfect temperature for making your favourite hot beverages.

Once the required temperature has been reached the iKettle will notify you with a beep and an in-app notification, then automatically enter 'standby' mode.

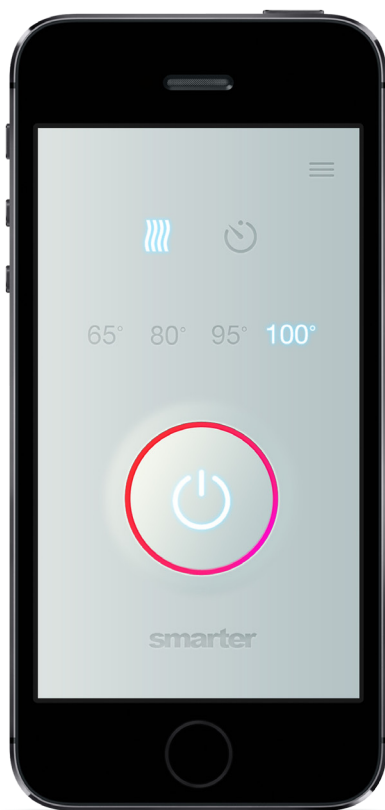

example: iOS application

Keep Warm

When activated the 'keep warm' feature will maintain your selected temperature for 20 minutes. This can be changed to 5, 10 or 20 minutes in your iKettle app settings.




To stop this feature, simply press the 'keep warm' button again.



Wake Up Mode


Go to 'Settings' within your app and press 'Wake up mode'. Set your alarm for the desired time and the iKettle will do the rest.

Press 'Snooze' to delay the boiling of your iKettle or 'OK' to get it going.

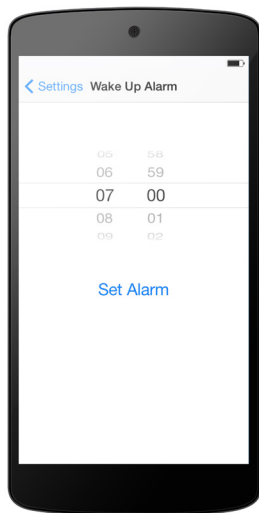

Welcome Home Mode

Go to 'Home mode' in your iKettle app settings and select the earliest and the latest times you would normally arrive home. The app will then recognise your homecoming and ask if you would like the iKettle on.

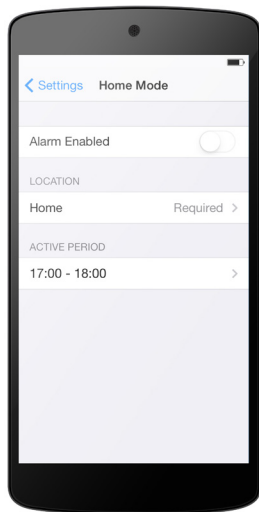

Frequently asked questions

If you can't find the answer you are looking for, please check out www.wifikettle.com or call our helpline on 0800 471 4935.

1. My iKettle cannot connect to my home network?

To start with, we recommend a hard reset of your router and the iKettle. Ensure your base is in the same room as your router (you do not need to have the kettle body on the base when doing the set up). To hard reset your router you will need to hold down the reset button for 30 seconds (this can be found on the back of the router and is sometimes a pin hole button). Please note: this will revert your home network password back to the factory issued password which can be usually be found on your router base.

Once the router has been reset and is up and running, now reset the iKettle. Hold down the 65 degree button until you hear 2 long beeps. Turn your iKettle off and un-plug the base unit, then plug it back in after a few seconds. Now go back into your device wifi settings and reconnect with your home network. Do not connect to the iKettle network until you are prompted to do so!

Launch the app and follow the instructions and enter in your network username and password. Please be aware that the username and password is case sensitive.

Remember, connection can take up to 5 minutes, so please be patient! Please make sure you have a strong wifi signal when setting up your iKettle and make sure your details have been entered in correctly.

Please note: the iKettle works on a 2.4ghz frequency so ensure you are on the correct frequency by checking your router settings. If unsure, please contact your network provider for further instructions.

2. My device can't find the 'iKettle network' when setting up my iKettle?

To hard reset the iKettle simply hold down the 65 degree button until you hear two long beeps.

Turn your iKettle off then on via the plug to reset and then search for the network again. It is a good idea to go into your wifi settings and turn off/on your wifi for a few seconds (this may need to be done a few times).

3. I keep losing connection when trying to remote boil my iKettle?

Make sure that your iKettle has been set up on your home network and is not in direct mode. If your smartphone is displaying the iKettle network in your wifi settings then you are still in direct mode.

This will limit your connection stability and range so it is advisable that you connect the iKettle to your home network. To set the iKettle up on your home network please click on the settings tab within the iKettle app.

Please make sure you have a strong wifi signal when using your iKettle and make sure you are not on your 3G/4G network.

Troubleshooting

If the iKettle suddenly shuts off before the water is boiled please remove any limescale from inside the iKettle.

If the iKettle will not heat please contact the UK support line.

This product and its associated applications are subject to change without notice.


For latest manuals and troubleshooting information please visit our website.

Please note: This product is not calibrated for commercial or scientific use.

UK support line

0800 471 4935

wifikettle.com/support

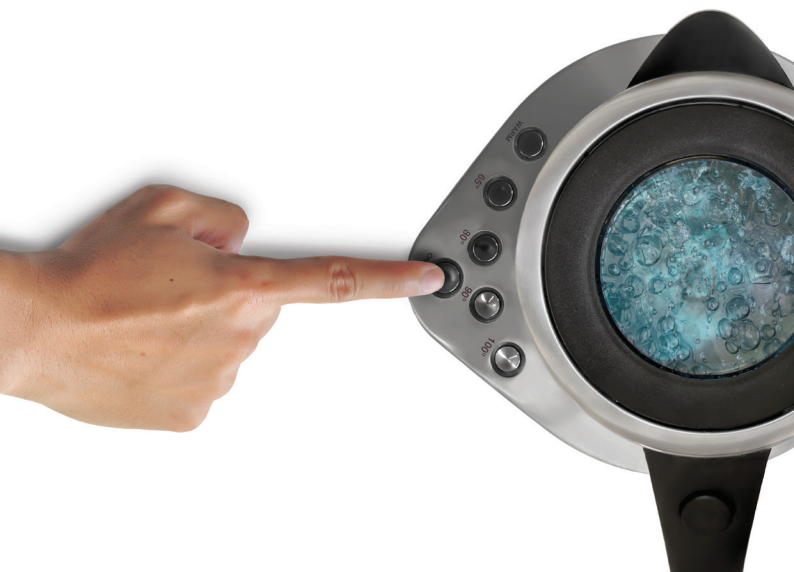

Reset Instructions

If you want to re-locate your iKettle to a different home or change any of your network settings, please remember to reset your device and repeat the set up process.

1. Press down and hold the 65 degree button until you hear two beeps.
2. Turn the iKettle off/on by the mains plug.
3. Delete and then re-install the iKettle app.

Storage Instructions

To store, remove plug from power socket. Clean and dry the appliance before storing, making sure that the lid is closed.

Store the power cord by wrapping in around the designated space in the base of the unit.

Always store upright in a cool dark place.



This symbol indicates that this appliance should not be disposed of in normal household waste. It should be taken to your designated local authority waste centre.

iKettle and wifi kettle is a trademark of Smarter Applications Limited, registered in England. Company Number 08608729.

Due to continued product development, the illustrations and functionality may differ slightly from this manual.

Patent Pending, designed in the UK.

Copyright Smarter Applications 2013.

wifikettle.com