



# STEAM SHOT™ HANDHELD STEAM CLEANER

---

USER GUIDE  
39N7 SERIES



# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR STEAM CLEANER.

Always connect to a polarized outlet (left slot is wider than right). Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

### **WARNING**

#### **TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:**

- » This appliance can be used by children 8 years old and above, and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- » Children should be supervised to ensure that they do not play with the appliance.
- » If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- » Use extra care when cleaning on stairs.
- » Do not use with damaged cord or plug.
- » Do not use outdoors.
- » Always turn OFF this appliance before connecting or disconnecting the nozzle. Do not direct steam at people, animals, or at electrical outlets.
- » Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- » Do not leave steam cleaner unattended.
- » Do not expose hair, loose clothing, fingers, or body parts to openings or moving parts.
- » Do not service steam cleaner when it is plugged in.
- » Do not handle steam cleaner with wet hands.
- » Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- » Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- » Do not unplug by pulling on cord.
- » Do not use appliance in an enclosed space filled with

vapor given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.

- » Do not allow to be used as a toy.
- » Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet, or other delicate, steam-sensitive materials.
- » Do not immerse in water or liquid.
- » Not for space heating purposes.
- » Do not use for any purpose other than described in this User's Guide.
- » Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- » Never put descaling, aromatic, alcoholic, detergent or vinegar products into the steam cleaner, as this may damage it or make it unsafe for use.
- » Unplug by grasping the plug, not the cord.
- » Close attention is necessary when used by or near children.
- » Keep the appliance out of reach of children when it is energized or cooling down.
- » The foot surfaces are liable to get hot during use.
- » Do not open the aperture during use.

### **WARNING**

**SURFACE MAY BE HOT. AVOID CONTACT.**



**THESE SYMBOLS MEAN WARNING:**  
Any use of steam has the potential danger of scalding.

## SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only. Commercial use of this unit voids the manufacturer's warranty.

 
# Thanks for buying a BISSELL® steam cleaner

We're glad you purchased a BISSELL steam cleaner. Everything we know about floorcare went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL steam cleaner is well made, and we back it with a limited one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture and service of high-quality homecare products like your BISSELL steam cleaner.

Thanks again, from all of us at BISSELL.



Mark J. Bissell  
Chairman & CEO

Safety Instructions.....	2
Product View.....	4
Operations.....	5-6
Notes.....	7
Warranty.....	8
Consumer Care.....	8

# Product View

- 1 Safety Cap
- 2 Steam Trigger
- 3 Indicator Light
- 4 Power Cord
- 5 Accessory Nozzle
- 6 Detail Brush Tool (set of 3)
- 7 Flat Scraping Tool
- 8 Angle Concentrator Tool
- 9 Grout Brush Tool



\*Product image may vary

## **WARNING**

Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

## **WARNING**

Do not plug in your steam cleaner until you are familiar with all instructions and operating procedures.

## **WARNING**

To reduce the risk of electric shock, turn Power Switch OFF and disconnect polarized plug from electrical outlet before performing maintenance.

# Operations

## Filling with Water

1. Push down on the safety cap while turning counter-clockwise.
2. Fill measuring cup to the max fill line.
3. Slowly pour water into steamer.

**NOTE: Do not add anything except cool water or you will cause damage to the heating element and void your warranty.**

4. Replace the safety cap by pushing down while turning clockwise.

If your tap water contains a high level of mineral content (hard water) the use of distilled or demineralised water is recommended.

## Power Cord

Unwrap Power Cord before operating unit.

## Indicator Light

The red Indicator Light will go on when the unit is first plugged in. When the steamer is ready to use, the light will turn off.

## Steam Trigger

Push to release steam.

In order to refill the water tank after emptied, the trigger must be engaged to release all the steam/pressure that may be built up. Press the trigger to release all the steam/pressure.

## Tools and Accessories\*

The Accessory Nozzle can be attached directly to the steamer or the end of the extension hose.

The Accessory Nozzle and extension hose attached in the same manner. Align the arrow on the tool with the (I) mark on the Steam Shot™ and turn clockwise until the arrow aligns with the (II) mark on the steamer.

### A. Extension Hose

For cleaning hard to reach areas. Attach to unit and use with the Accessory Nozzle attached.

### B. Accessory Nozzle

Attach to unit or hose. Use alone or with a tool attached

### C. Detail Brush Tool (set of 3)

Attach to end of the Accessory Nozzle for scrubbing stubborn soil. Color coded for specific use.

### d. Flat Scraping Tool


Attach to the end of Accessory Nozzle for removing wallpaper, gum and extra sticky messes.

### e. Angle Concentrator Tool

Attach to end of the Accessory Nozzle to steam clean hard-to-reach areas.


## ⚠️ WARNING

Always unplug your Steam Shot™ before filling/refilling. Press trigger until steamer depressurises. Wait 5 minutes before removing cap.

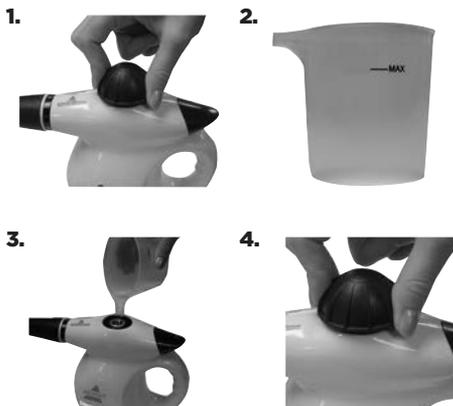

## ⚠️ WARNING

Before disconnecting a tool from the steam cleaner, make certain that steam is no longer coming from the nozzle. Use an oven mitt to remove tools, or wait until they cool before removing.

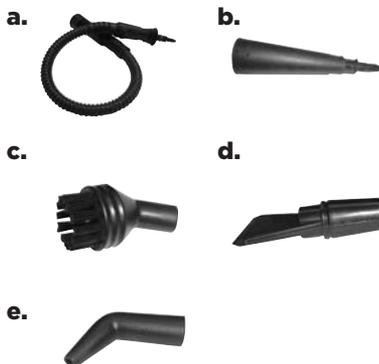

\*Tools and accessories vary by model.

# Operations

## f. Grout Brush Tool

Attach to end of the Accessory Nozzle for scrubbing small cracks and crevices.

## g. Fabric Steamer Tool

Attach to end of the Accessory Nozzle for refreshing and removing wrinkles on clothing or drapes. Attach cloth over tool.

## h. Window Squeegee Tool

Hooks onto the fabric steamer tool (without cloth) for glass and window cleaning.



\*Tools and accessories vary by model

## Steam Cleaning All Living Areas

Stubborn soil that resists traditional hot water, cleaning solutions and vigorous scrubbing can often be effectively removed with high temperature steam. Baked-on grease on the stovetop, dried fruit juice in the refrigerator, stubborn soap scum on sliding shower doors, gum on countertops — steam makes all these far easier to clean. Use your Steam Shot™ to soften and remove stubborn dirt, grime, dry, hardened food, and other household soil from hard surfaces. You can also use your steam cleaner to clean pet cages.

**NOTE: Always remove pets before cleaning.**

1. Fill with cool tap water or distilled/demineralized water.
2. Connect the plug to an appropriate outlet.
3. When red indicator light turns off, the steamer is ready to use. Press trigger to release steam.
4. Wipe surface with a clean, dry cloth.

In order to refill the water tank after emptied, the trigger must be engaged to release all the steam/pressure that may be built up. Press the trigger to release all the steam/pressure.

## Steaming/Freshening Clothes

Use your Steam Shot™ to remove wrinkles from clothes, and freshen clothing that has been stored. Test for color fastness in a hidden area. If color is affected do not use.

1. Hang clothing from a shower rod or clothes hook using a sturdy clothes hanger.
2. Fill with cool tap water or distilled/demineralized water.
3. Connect plug to an appropriate outlet.
4. Attach the fabric steamer tool with pad attached.
5. Press trigger to release steam.
6. Move over fabric taking care not to concentrate steam in a single area.

### **WARNING**

Keep face and all exposed skin away from steam. Failure to do so may result in personal injury.

### **WARNING**

Thermal shock can shatter glass. Before cleaning cold glass surface, carefully warm the surface by directing the steam jet on the glass from a distance of no less than 4 - 6".

## Tip

**Your Steam Shot™ is a very versatile tool. Use it to:**

- » Give your houseplants a refreshing cool cloud mist by using at 12" or more away from plants.
- » Soften gum or adhesives for easier removal.
- » Soften glazing putty on windows for easier removal.
- » Clean cook tops.
- » Clean coolers.
- » Clean sink garbage disposals.
- » Clean exhaust fan reusable filters (always remove from fixture before cleaning).

# Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL® Consumer Care by E-mail or telephone as described below.

It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found online at [www.BISSELL.com/privacy-policy](http://www.BISSELL.com/privacy-policy).

## Limited One-Year Warranty

Subject to the **\*Exceptions and Exclusions from the Terms of the Limited Warranty**, upon receipt of the product BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year, any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental, service. This warranty does not apply to fans or routine maintenance components

such as filters, belts or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the user guide is not covered. This warranty will only be valid if the product is used in the same country in which it was sold.

BISSELL is not liable for incidental or consequential damages of any nature associated with the use of this product. BISSELL's liability will not exceed the purchase price of the product.

**Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.**

## \*Exceptions and Exclusions from the Terms of the Limited Warranty

This warranty is exclusive and in lieu of any other warranties, either oral or written. Any implied warranties, which may arise by operation of law, including the implied warranties of merchantability and fitness for a particular purpose, are limited to the one-year duration from the date of purchase as described above.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**NOTE:** Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

# Service

## Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

## If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area. If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

## Website:

[www.BISSELL.com/service-centers](http://www.BISSELL.com/service-centers)

## E-mail:

[www.BISSELL.com/email-us](mailto:www.BISSELL.com/email-us)

## Call:

BISSELL Consumer Care  
1-800-237-7691

Monday – Friday: 8am - 10pm ET

Saturday: 9am - 8pm ET

Sunday: 10am - 7pm ET

# Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

## You'll receive:

### **BISSELL® Rewards Points**

Automatically earn points for discounts and free shipping on future purchases.

### **Faster Service**

Supplying your information now saves you time should you need to contact us with questions regarding your product.

### **Product Support Reminders and Alerts**

We'll contact you with any important product maintenance reminders and alerts.

### **Special Promotions**

Optional: Register your email to receive notice of offers, contests, cleaning tips, and more!

**Visit [www.BISSELL.com/registration](http://www.BISSELL.com/registration)!**

## **Visit the BISSELL website: [www.BISSELL.com](http://www.BISSELL.com)**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: \_\_\_\_\_

Please record your Purchase Date: \_\_\_\_\_

**NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty page for details.**

## **Parts & Supplies**

**For Parts and Supplies, go to [www.BISSELL.com](http://www.BISSELL.com)** and enter your model number in the search field.

*Love your BISSELL® product?*

Don't keep it a secret.

Let us, and millions of others, know what you think!

Leave your star-rating on [BISSELL.com](http://BISSELL.com)

**[www.BISSELL.com](http://www.BISSELL.com)**



©2019 BISSELL Inc.  
Grand Rapids, Michigan  
All rights reserved. Printed in China.  
Part Number 162-0252 04/19 RevB  
Visit our website at: [www.BISSELL.com](http://www.BISSELL.com)