 


amazon basics

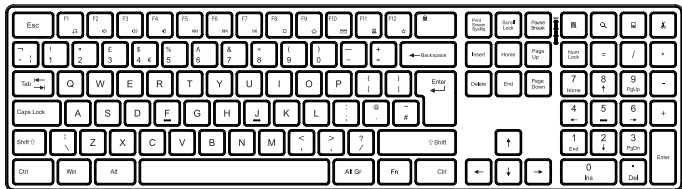

User Manual

Rechargeable Wireless Keyboard Mouse Combo - Ultra Slim
- UK layout gray

BOCJFBF5GR

Contents

Package Contents	3
Compatibility	3
Parts Overview	4
Setting Up the Keyboard and Mouse.....	7
Using the Keyboard and Mouse.....	9
Cleaning and Maintenance	10
Troubleshooting.....	10
Safety Instructions	12
Symbol Explanation	13
Specifications	13
Legal Notices	16
Feedback and Help.....	17

Package Contents

 
- ▶ Keyboard
- ▶ Mouse
- ▶ Nano receiver
- ▶ USB-C charging cable
- ▶ *User Manual*

Compatibility







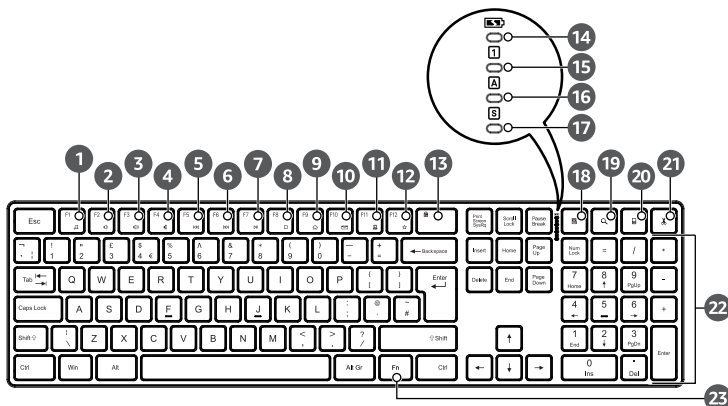








- ▶ Windows 10, Windows 7, Windows Vista, and Windows XP
- ▶ An available USB-C port

Parts Overview


Keyboard Top




No.	Icon	Description
1	🎵	Open media player
2	🔊	Decrease volume
3	🔊)	Increase volume
4	🔇	Mute
5	⏮	Previous track
6	⏭	Next track
7	⏸	Play/Pause

 No.	Icon	Description
8		Stop
9		Open browser home page
10		Open email client
11		Open "This PC" folder
12		Open favorite webpage
13		Function lock
14		Battery LED
15		Number lock LED
16		Caps lock LED
17		Scroll lock LED
18		Right-click key
19		Search
20		Calculator
21		Cut
22	Number pad	
23		Function key

 Keyboard Side and Back

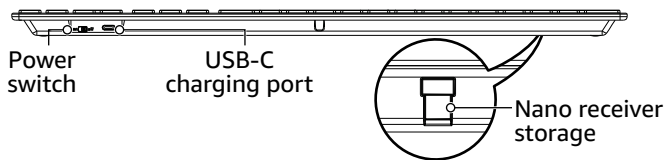

Mouse

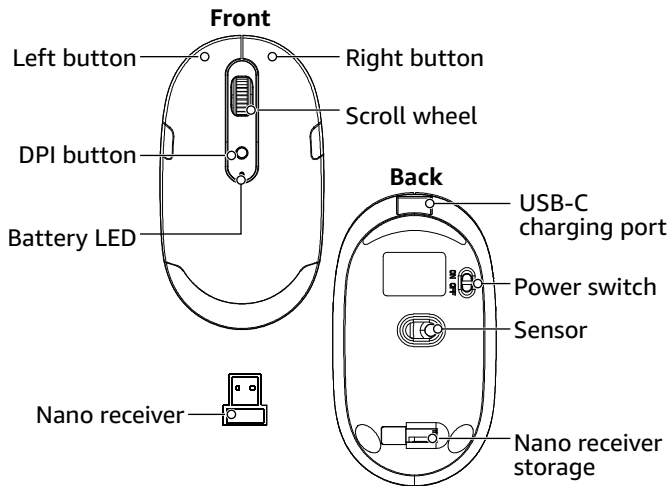 


Setting Up the Keyboard and Mouse


Charging the Keyboard/Mouse

The battery LED blinks red when the battery is low.

 To charge, connect the USB-C charging cable from the keyboard or mouse's USB-C charging port to a USB-C port on your computer or wall charger.

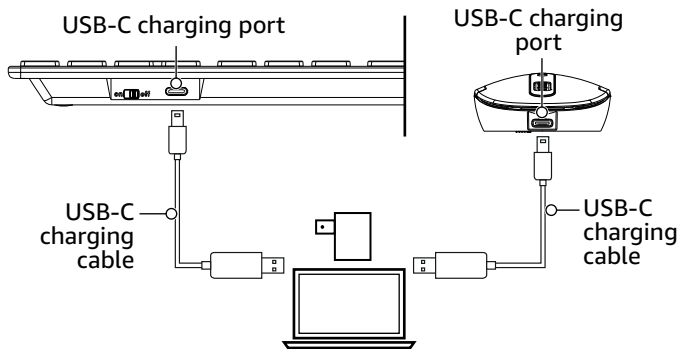


 The battery LED lights solid red while charging, then turns green when the device is fully charged.

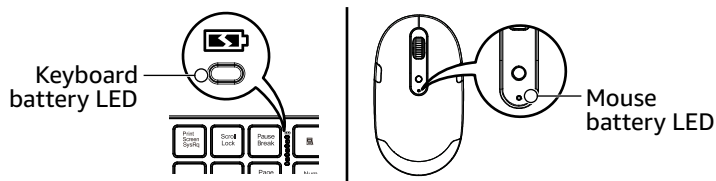


Connecting the Keyboard/Mouse

 
1. Remove the nano receiver from the back of the mouse's nano receiver storage compartment.



 2. Plug the nano receiver into your computer's USB port.

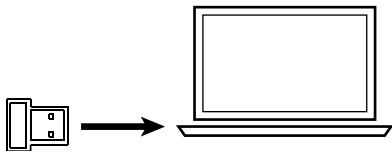

 3. Slide your keyboard and mouse's power switches **ON**. Your devices connect to your computer.

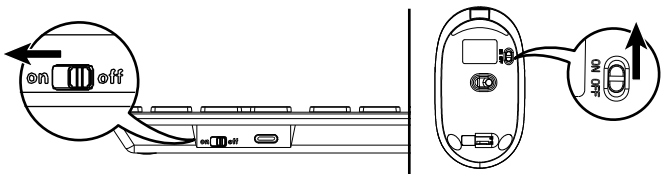



Using the Keyboard and Mouse

Changing the DPI

Press the DPI button to adjust your mouse's speed. You can set the mouse's DPI to 800, 1200, 1600, or 2400.

Using the Multimedia Controls

- Press **Fn** + any function key (F1 through F12). See "Parts Overview" on page 4 for key descriptions.
- When the  (function lock) is turned on, you can use multimedia controls without pressing the Fn key. Press the  (function lock) key to turn the function lock on or off.



Understanding LED indicators

The keyboard's and mouse's battery LEDs show the power status of each device.

LED Status	Description
Lights for 10 seconds	Power on
Blinks red	Battery is low
Solid red	Charging
Solid green	Battery charged

Waking the Keyboard/Mouse

Your keyboard and mouse automatically go to sleep if they are inactive for 60 seconds. Press any key and moving to wake your keyboard and mouse.

Cleaning and Maintenance

- ▶ Clean the keyboard/mouse with a dry lint-free cloth. Do not allow any water or other liquids to enter the interior.
- ▶ Do not use abrasives, harsh cleaning solutions, or hard brushes while cleaning.

Troubleshooting

Problem

Keyboard/Mouse won't pair


Solutions

- ▶ Charge your keyboard/mouse. The device's battery LED blinks red when the battery is low.
- ▶ Make sure the power switch is **ON**.
- ▶ Move your keyboard/mouse closer to your computer.
- ▶ Remove and reinsert the nano receiver.
- ▶ Make sure the keyboard/mouse is compatible with your computer. See "Compatibility" on page 3 for more information.

Problem

Keyboard/Mouse stops working

Solutions

- ▶ Charge your keyboard/mouse. The device's battery LED blinks red when the battery is low.
- ▶ Move your keyboard/mouse closer to your computer.
- ▶ Your keyboard and mouse automatically go to sleep if they are inactive for 60 seconds. Press any key to wake your keyboard and mouse.
- ▶ Remove and reinsert the nano receiver.
- ▶ If the number pad stops working, press **Num Lock** to switch between number entry or navigation.
- ▶ If the multimedia or function keys stop working, press  to turn the function lock on or off.

Problem

Mouse is too slow/fast or jerky

Solutions

- ▶ Make sure the sensor is clear of debris.
- ▶ Use the mouse on a different surface.
- ▶ Press the DPI button to adjust your mouse's speed.

Safety Instructions

Read this user manual carefully before using the keyboard or mouse. It contains important information for your safety as well as operating and maintenance advice. Observe all safety instructions to avoid damage through improper use! Follow all warnings on the product.

Keep this instruction manual for future use. If the keyboard or mouse is passed on to a third party, then this instruction manual must be included.

- ▶ Never use this product if damaged.
- ▶ Do not insert any foreign objects inside the casing.
- ▶ Protect the product from extreme temperatures, hot surfaces open flames, direct sunlight, water, high humidity, moisture, strong jolts, flammable gases, vapors, and solvents.
- ▶ Keep this product and its packaging out of the reach of children and pets.

WARNING: Do not look directly at the LED light.

Battery Warnings

- ▶ Keep away from children. Seek immediate help if swallowed.
- ▶ Do not dispose of batteries in fire.
- ▶ Store unused batteries in their original packaging away from metal objects. If already unpacked, do not mix or jumble batteries.
- ▶ Exhausted batteries should be immediately removed from the keyboard or mouse and disposed of properly.

- ▶ If the battery leaks, avoid contact with skin and eyes. Rinse affected areas immediately with plenty of clean water, then consult a doctor.

Symbol Explanation

	<p>This symbol stands for "conformité Européenne", which means "Conformity with EU-directives". With the CE marking the manufacturer confirms that this product complies with applicable European directives and regulations.</p>
	<p>This symbol stands for "United Kingdom Conformity Assessed". With the UKCA-marking, the manufacturer confirms that this product complies with applicable regulations and standards within Great Britain.</p>

Specifications

<p>Importer's Name/ Trademark, Commercial Registration Number & Address</p>	<p>UK: Amazon EU SARL, UK Branch, 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom, BR017427</p> <p>EU: Amazon EU S.à r.l., 38 Avenue John F. Kennedy, L-1855 Luxembourg 00134248</p>
---	---

Keyboard

Power Supply	3.7V 500mAh
Current Consumption	1.8mA
Battery Life	about 6 months (based on 2 hours/day)
Charge Time	3–4 hours
Frequency Band	2.4 GHz (2.402 GHz – 2.479 GHz)
Maximum Radio-frequency Power	0.82mW
Operating Range	32.8 ft. (10 m)
Compatible Operating Systems	Windows 10, Windows 7, Windows Vista, and Windows XP

Mouse

Power Supply	3.7V 1100mAh
Current Consumption	4.2mA
Battery Life	about 4.5 months (based on 2 hours/day)
Charge Time	5–6 hours
DPI	800, 1200, 1600, 2400
Frequency Band	2.4 GHz (2.402 GHz – 2.479 GHz)
Maximum Radio-frequency Power	0.92mW
Operating Range	32.8 ft. (10 m)
Compatible Operating Systems	Windows 10, Windows 7, Windows Vista, and Windows XP
Sensor	Optical
Body Style	Right-handed

Nano Receiver

USB Connector	USB Type-A
---------------	------------

Legal Notices

Disposal (for Europe only)



The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Battery Disposal



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

Simplified UK Declaration of Conformity

Hereby, Amazon EU SARL, UK Branch declares that the radio equipment type B0CJFBF5GR is in compliance with the Radio Equipment Regulations 2017.

The full text of the UK declaration of conformity is available at the following internet address: https://www.amazon.co.uk/amazon_private_brand_EU_compliance

Simplified EU Declaration of Conformity

Hereby, Amazon EU Sarl declares that the radio equipment type B0CJFBF5GR is in compliance with Directive 2014/53/ EU.

The full text of the EU declaration of conformity is available at the following internet address: https://www.amazon.co.uk/amazon_private_brand_EU_compliance

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.



[amazon.co.uk/review/review-your-purchases](https://www.amazon.co.uk/review/review-your-purchases)

If you need help with your Amazon Basics product, please use the website or number below.



[amazon.co.uk/gp/help/customer/contact-us](https://www.amazon.co.uk/gp/help/customer/contact-us)

amazon basics



amazon.com/AmazonBasics



MADE IN CHINA

V03-01/24