


INSTRUCTION MANUAL

M79

TWS Bluetooth earphones

Product structure diagram

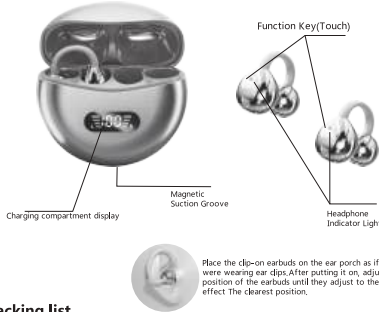

Packing list

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Introduction to product operation

function	operate	Light	Tone
Pair name	M79		
Boot	Headphones in the case of charging bin, take out the headphones automatically, boot/headphones off state, Long Touch Key 3 seconds to boot	The blue light is on	Power on/开机
Shutdown	Put the earphone into the charging bin and shut down automatically. Press the touch button for 5 seconds to shut down the earphone	The red light flashes three times	Power off/关机
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	After the left and right ears are successfully paired, the blue and red lights of the main ear will flash alternately, and the light of the secondary ear will be extinguished	Connected/Pairing successfully
Toggle the Chinese and English prompt tones	Without connecting the smart device, double-click any left/right ear touch key 4 times, language switch, Factory default English	/	English/中文
Smart device connectivity	When the ears are successfully paired, it will automatically enter the state to be connected, at this time, open the Bluetooth list of the smart device to search and click 'M79' to connect, after the earbuds are successfully connected to the smart device, there will be a prompt tone, and the headset indicator will go off	The lights in the left and right ears are turned off	Connected /连接成功
Toggle Music/ Game mode	When the headset is connected to the device, press the left/right ear touch button 4 times to switch the mode.	/	音乐/游戏模式 MUSIC/GAME MODE
Play/Pause	After the music player starts, double-click the left/right earphone touch button	/	/
Previous song	After the music player starts, click the left Earphone Touch Button three times	/	/
Next song	After the music player starts, double-click the right earphone touch button three times	/	/
Increase the volume	After the music player starts, click the touch button on the right headset	/	Maximum volume indicator (knock)
Reduce the volume	After the music player starts, click the touch button on the left headset	/	/
Voice assistant	When the headset is connected to the phone, press the L/R earphone touch button for 2 seconds to wake up the assistant	/	Ding Dong
Clear the pairing history	When the smart device is not connected, tap the left and right ear touch buttons 5 times	/	power off

Answer an incoming call	In the incoming call state, double-click the left/right earphone touch button	/	Ringtone of your phone
Reject an incoming call	Press the left/right earphone touch button for 2 seconds	/	/
Hang up	While on the phone, double-click the left/right earphone touch button	/	/
Clear the pairing history	When the headphones are not connected or disconnected from the Bluetooth device, press the touch buttons on the left and right earphones for 5 seconds to clear the pairing history. Note: The function of clearing the pairing history is only available when the headphones are in the charging bin. When the headphones are connected to a phone, this function is not available. When the headphones are connected to a phone, pressing the touch buttons on the left and right earphones will only clear the pairing history of the current phone. When the headphones are connected to a phone, pressing the touch buttons on the left and right earphones will only clear the pairing history of the current phone.		
Low battery alarm	When the voltage of the earbuds is lower than 3.3V, there will be a prompt up to the ear Powered off	The red light flashes every 5 seconds	Ding Dong
Disconnect	Outside the effective connection range, or manually disconnect the Bluetooth connection of the smart device	The red and blue lights of the main ear flashed alternately, and the secondary ear light went out	Disconnected /断开连接
Automatic reconnection	After powering on or disconnecting, the earbuds will automatically reconnect to the last connected smart device within the effective distance	The lights go out	connected /连接成功
Charge the headphones	The earphone is put back into the charging bin and automatically shuts down and begins to charge. The red light of the earphone is always on, and the light goes out when it is fully charged		
The charging bin charges the headphones	The headphone is put into the charging bin, the charging bin immediately charges the headphone and activates the screen to show the current charge and the charging status of the headphone. The charging indicator lamp turns off when the headphone is fully charged and the charging bin screen shows the charging status stops, the first charging chamber screen shows the remaining light to go off after 15 seconds.		
Charging bin charging	When the battery is too low, charge the battery with a power adapter with a standard output of 5V. The battery screen lights up and flashes to show the current battery.		
The charging bin is fully charged	Charging bin charged screen display always bright number 100		
Note: When the Bluetooth headset is connected to a smart device and the game mode is switched, the usage time and connection distance of the headset will be shortened			

Headset parameters

- Product name: M79
- Bluetooth version : Bluetooth 5.49
- Support mode :AAC/SBC
- Bluetooth transmission distance :10m
- Carrier frequency :2.402GHz-2.480GHz
- Frequency response range :20Hz-20KHz
- Horn size: Φ 10mm
- Horn sensitivity :104dB $\pm$ 3dB
- Horn impedance :16 Ω $\pm$ 5%
- Horn rated power :8mW
- Headphone battery capacity :3.7V/30mAh (polymer battery)
- Charging bin battery capacity: 3.7V/300mAh (polymer battery)
- Charging interface :USB Type-C
- Headset use time : $\geq$ 6-8 hours
- Earphone single charging time : $\geq$ 1.5 hours
- Charging time: $\approx$ 1.5 hours
- Charge the headset: About 2 times
- Shutdown standby time : $\approx$ 3000 hours

Simple troubleshooting

fault	cause	Resolution
Doesn't turn on	The headphones are low on battery	Charge the headphones
The headphones flash red	The headphones are low on battery	Charge the headphones
Charging is silent	The headphones were not put away	Adjust the position where the headphones are placed
Automatic power off	The headphones are low on battery	Charge the headphones
The headphones have an echo	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment
There is a murmur from the headphones	Serious external interference or too far away from the phone	Change the location or be close to your phone
The other party's voice is quiet	The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume
The signal is intermittent	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone


Safety guidelines

- Before using this product for the first time, please fully charge it before using it.
- The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
- Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer to avoid damage to the product caused by a fast charging charger that supports high voltage.
- Please charge in a safe environment, when charging the charging case, please pull out the charging cable as soon as possible after the power is fully charged to avoid damage to the battery caused by long-term charging. The charging method of the charging case is the Type-C interface.
- This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the earbuds will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.
- This product comes with a healthy battery, if it has not been used for a long time, please charge it at least once a month.
- If you feel skin discomfort when wearing it due to individual differences, please stop wearing it and consult a doctor.
- When using this product with Bluetooth connection, please adjust the sound of the earphones to an appropriate volume to avoid hearing damage caused by long-term loud volume.
- If you use this product while engaging in activities that require concentration, you should pay attention to your own safety and the safety of others, such as when driving or cycling, on roads, construction sites, railways, or walking. You should remove your headphones or adjust the volume to ensure that you can hear the sounds around you, including alarms and warning signals.

- Please follow the relevant regulations of your region or country and use this product as required when driving.
- This product contains magnetic materials, please keep away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.
- It is recommended to use this product in an environment with a temperature of -0°C-45°C. When the ambient temperature is below +5°C, battery performance is limited.
- Do not use this product in places where it is expressly prohibited to use wireless equipment, otherwise it will interfere with other electronic equipment or cause other dangers.
- Before approaching medical or industrial equipment or boarding a plane, please ask the local staff if they can use it.
- Before cleaning and maintaining this product, stop using this product, turn off all applications, and disconnect all connections or cables to other equipment.
- Please dispose of waste electronic products properly in accordance with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries and other household waste.

warn

- Please follow the content of this manual to avoid damage to the product due to incorrect operation.
- Keep this product away from children, fire, heat, refrigeration, water and chemicals.
- Do not listen at a loud volume for a long time to avoid adverse effects on hearing.
- Do not immerse the product and accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock hazard.
- Do not place the product in the sun or in a place with high temperature. High temperatures can shorten the life of electronic components, damage batteries, and deform certain plastic parts.
- Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
- Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
- Do not apply greater pressure to this product, or disassemble, beat, or shake this product to prevent damage to the product
- Do not use this product near heat sources, such as radiators, hot air regulators, stoves, or other instruments that generate heat
- Do not block the openings of this product, such as charging ports, indicator lights, microphones, etc.
- Do not use the device in rainstormy weather, thunderstorms may cause the device to malfunction and increase the risk of electric shock.
- Please avoid using this product when this product and its accessories are exposed to rain or moisture, and when you exercise vigorously or sweat a lot, to prevent liquid from penetrating into the product and damaging this product.
- The product belongs to the built-in polymer battery, which cannot be replaced, please do not discard or put it in the fire to avoid explosion, fire and other dangers.
- If the consumer violates the above warning and inappropriate use, the personal and property damage will be borne by the company, and the company will not incur any legal responsibility.

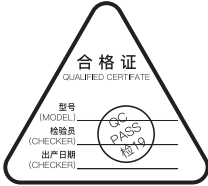

产地：中国·广东