

Troubleshooting

Solution

Clothesline won't stay tight



- Lock switch needs to be fully engaged.
- Lock switch should be engaged before putting clothes on to reduce slack in line.



Clothes move to center of line



- Heavy items should be placed towards the end of the line.
- Lighter items in the middle for optimal weight distribution.



Clothesline has trouble retracting



- The two screws (Circled in the picture) are too tight. This restricts the line.

