

OUKEELAR

Electric Nail Clipper Instruction



Qingdao Meiyike Technology Co. Ltd.

E-mail: suyue623@126.com

Address: Room 2405, D2 Building,
Qingdao International Innovation Park,
No.169 Songling Road, Laoshan District,
Qingdao, Shandong Province

Please read the instructions carefully before you use this product.

Caution (Please be sure to read carefully for the first-time use)

- ⚠ Forbidden to use for babies under 1 year old, children between 1 and 12 years old can be operated with the help of a guardian.
- ⚠ The blade is sharp, children need to be used under adult supervision.
- ⚠ Be sure to place it properly and avoid children touching and playing with it to avoid danger.
- ⚠ Do not touch any body parts other than fingernails to avoid danger.
 - Do not put clothing, accessories or anything else other than your fingernails near the cutter head while the device is in continuous operation, otherwise the cutter head may be damaged or the foreign object may be rolled into the cutter head and cause the cutter head to malfunction.



Direction (Please be sure to read carefully for the first-time use)

- Please charge the device for at least 1 hour for the first time to ensure that the internal battery of the device is charged, and please charge every three months when not in use for a long time.
- This product is not suitable for trimming body parts other than nails.
- Do not use this product for trimming when there is problematic skin such as wounds around the nails.
- Do not wash or soak the product with water for cleaning, keep away from water and fire.
- Keep out of the reach of children.
- It is recommended not to use this product while charging.

Prohibition

- Do not immerse the product in water or any other liquid.
- This product has a built-in rechargeable battery, please do not put it into the fire or in a high temperature charging use, place.
- Do not knock or drop the product, if the product is damaged due to collision and drop, please stop using it.
- Do not modify, disassemble or repair the product by yourself.

Product Description

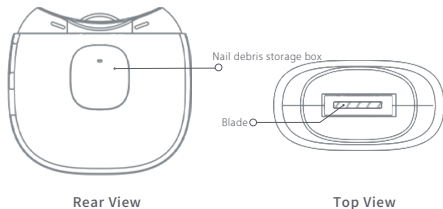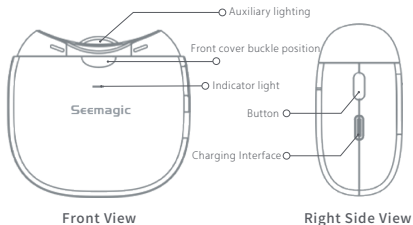

Procedure

1. Power ON/OFF

- **Power on:**

Way 1: [default mode] Long press about 6 seconds (indicator light will breathe three times);

Way 2: Long press 3 seconds to startup.



- **Switching startup methods:** Be keep off, Press the button 6 times within 3s to switch the mode (white indicator light flashing twice quickly).

★TIPS: The 6-second startup method is highly recommended to families with children. Please be sure to place the product properly and out of reach of children.

- **Gear switching and shutdown:** On state, the product will cycle between gear 1 (high gear), gear 2 (low gear), and shutdown when pressing the switch button.

- **Turn off the auxiliary light:** On state, hold down the button for 2 seconds to turn off the auxiliary light.



2. Using


- Remove the front cover of the product and make sure that the side with the indicator light is facing up. (The side with the nail debris storage box is down)
- Place the nail to be trimmed at the opening of the blade. Slightly push the nail towards the blade and move the nail or product (not too fast or too hard) at the same time to ensure that the nail is trimmed fine.

Warning:

- ① Do not stay on the same part for a long time to avoid excessive trimming.
- ② The product realizes the integration of grinding and trimming. It is normal that slight dust-like nail debris will be generated during use.
- ③ In order to protect the electric motor, the product will automatically shut down after every 20 minutes of continuous operation.

3. Cleaning

Turn off the product, press one side of the cover of the nail debris storage box, open the cover, dump the nail debris, and clean the storage box with a cleaning brush. (Do not clean the nail debris storage box when the product is in the state of power on.)

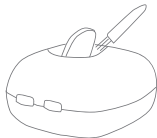

4. Charging

Please charge the product in time under the following conditions:

- When using the product for the first time.
- The indicator light keeps blinking when the product is working.
- The product cannot startup when pressing the switch button, and the indicator light blinks for 3 seconds and then goes out.

Please use the supplied Type-C charging cable with the charger (5V output) to charge the product. During normal charging, the red indicator light will light up and will go out after the charging is complete. It takes about 2 to 3 hours to fully charge.

Warm Prompt

When using an electric nail clipper, the correct way to hold it is that the side with the indicator light is facing up. If the side with the nail debris storage box is facing up, the nail trimming effect will be rough and uneven during use.



Functional Descriptions of Lights

- Working Indicator Light: Front Side White Light
- Charging Indicator Light: Front Side Red Light
- Auxiliary lighting: Blade Side White Light

Status of Indicator Light	Functional Descriptions
The working indicator light is on	The product is working normally.
The working indicator light keeps blinking	The product is working normally. Low battery, please charge.
The working indicator light blinks 3 times then goes out	The battery is out of power. Please fully charge the battery before use. (The electric nail clipper does not start after pressing the switch button, and the work indicator light blinks 3 times and then goes out.)
The red indicator light is on	The product is charging. The red indicator light will go out automatically when it finishes charging.
The auxiliary lighting blinks 3 times then goes out	It indicates that there is a foreign body inside the blade, which makes the blade unable to rotate normally. Please try to clean the foreign body slowly.

Product Name	Electric Nail Clipper	Rated input	5v 0.3A
Product Model	SMNC01	Charging Interface	Type-C
Product Size	64mm*64mm*32mm	Battery Capacity	600mAh
Product Weight	90g	Executive Standard	GB4706.1-2005

After-sales Service Guarantee

Any one of the following conditions is not covered by the warranty:

- No purchase bills and vouchers, or purchase bills and vouchers are unclear or altered;
- Failure caused by the user's failure to operate in accordance with the requirements of the instruction manual;
- Damage caused by improper storage, maintenance, and use of users;
- Failure occurred because of user disassembled, modified or installed other functions by himself;
- Damage caused by force majeure (such as lightning, fire, earthquake, flood and other natural disasters);
- Products purchased from retailers not authorized by the company.

Packing List

- Product Electric Nail Clipper * 1
- Type-C Charging Cable * 1
- Cleaning Brush * 1
- Instruction Manual * 1

