 


4 Control

- Remove remote battery tab
- Press ON, ensure IR communication
- Program 24 hour clock (military time)

Press SET CLOCK.

Adjust time using HOUR+ and MINUTE-
Press ENTER/RESUME to finish

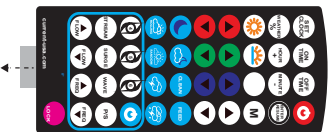

Pre-programmed Settings

ON Time: 07:00 (7:00am)

OFF Time: 18:00 (6:00pm)

WEATHER: OFF

Daylight:W90%,B,G,R-100%

Dawn/Dusk:W10%,B80%,R50%,G20%

Moonlight:B10%,R,G,W-0%

Wave Pump#1:Stream, 100% Flow

Wave Pump#2:Stream, 100% Flow

Wave Pump#3:Stream, 100% Flow

5 Main Light Controls

POWER - Press the Main Power key  to turn the LOOP controller and LED lights ON/OFF.

LOCK/UNLOCK - Press the LOCK key  to lock settings, LOCK icon will appear on controller screen. To unlock settings, press LOCK  for 5 seconds. NOTE: Remote will ONLY work when unlocked.

WEATHER - Press either WEATHER% key  and hold for 5 seconds to turn weather program on or off. To change weather forecast, press WEATHER% key , choose weather program  then press the Hour+ or Minute-  to change forecast from 10% to 50%. Press Enter/Resume  to save.

SET ON/OFF Time - Press either ON or OFF TIME key , use HOUR+ and MINUTE-  to adjust time. Press Enter/Resume  to save.

Change COLOR - Press either Daylight, Moonlight or Sunrise/Sunset key  Use RGBW keys  to adjust light to desired color spectrum. Press same key (Daylight, Moonlight or Sunrise/Sunset  and hold for 5 seconds. Color spectrum is now saved.

For further instructions, please refer to the instruction manual included or visit our website at www.current-usa.com/videos

Additional LOOP Accessories compatible with the Orbit IC:



Adjustable Tank Mount Arm



eFLUX DC Wave Pumps



eFLUX DC Flow Pumps



LOOP Hinge Mount Kit



WARNING!

Read the entire instruction manual to become familiar with the features of this product before operating. Failure to operate product correctly could result in damage to the product, property or personal injury.

Please register this product at www.current-usa.com



current.

Copyright© 2016 Current-USA Inc. LOOP® is a registered trademark of Current-USA. Multiple patents pending.

**Orbit IC LED Light
QUICK START GUIDE**




current
What's Next

Thank you for getting In The LOOP!

For step-by-step video instructions, visit our website at www.current-usa.com/videos

WHAT'S INCLUDED



- Orbit IC LED Light
- LOOP Light Controller w/Mounting Clip
- Light Manifold (HUB) w/Mounting Clip
- 12V DC Power Supply
- Wireless Remote Control
- Remote IR Sensor (optional)
- Cable Wraps

BEFORE INSTALLATION

Follow ALL safety instructions and warnings included with this product.

Find a clean, dry location to mount the LOOP controller, light & pump HUBS either under or outside your aquarium cabinet.

- This product can receive command signals from the wireless remote in two locations:
1. LOOP controller (sensor located on display front)
 2. Remote IR sensor
- Decide if you want the LOOP controller to be located outside your cabinet to receive signals or inside the cabinet and use the remote IR sensor.

Ensure all electrical components are plugged into a GFCI. Keep lights, HUBS and controller dry and free of moisture, water and salt creep.

INSTALLATION

1 Install LED Light

- Slide and adjust docking mounts, install LED Light on top of aquarium

 


2 Mount HUB and Controller

- Choose a clean, dry location for HUBS
- Screw mounting clips into stand location
- Slide HUBS and LOOP controller into mounting clips

 


⚠️ Before connecting cables, please review the following specifications and connections:

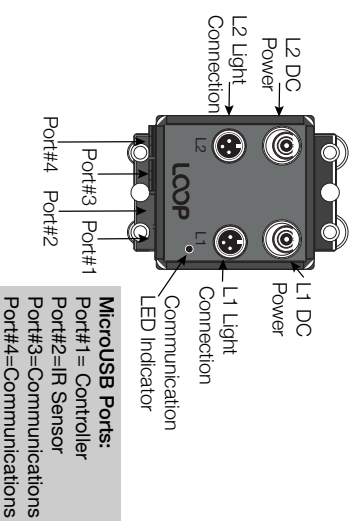

3 Connect

- Connect the following:
- LED light to light HUB (Light cable to HUB Connection L1 Light)
 - LOOP controller to light HUB (LOOP microUSB cable to Light HUB Port#1)
 - Optional IR sensor to light HUB (IR Sensor microUSB to Light HUB Port#2)
 - 12V DC power to light HUB (12VDC cable to Light DC - L1 Connection)
 - Power supply to GFCI outlet

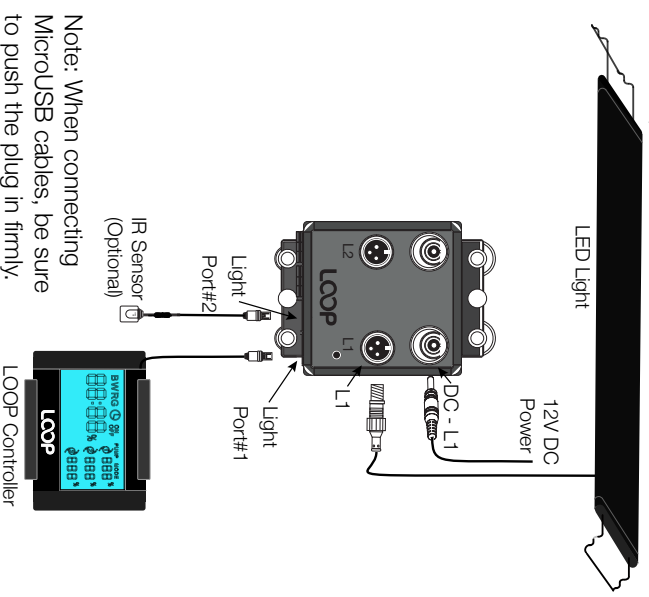

Light Cycle Overview

