

BIUBLE

C2




ELECTRIC SPIN SCRUBBER

USER MANUAL

Please contact:
biuble_service@hotmail.com if
you need detailed operating videos.



In the box

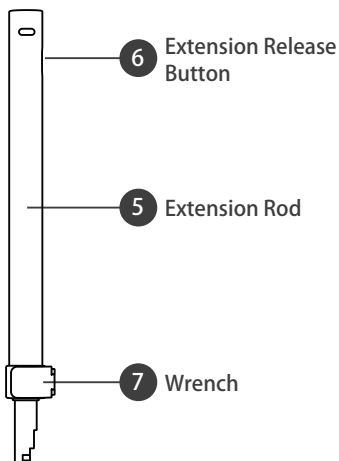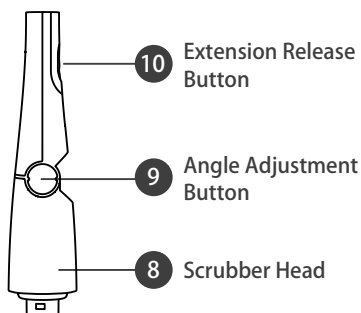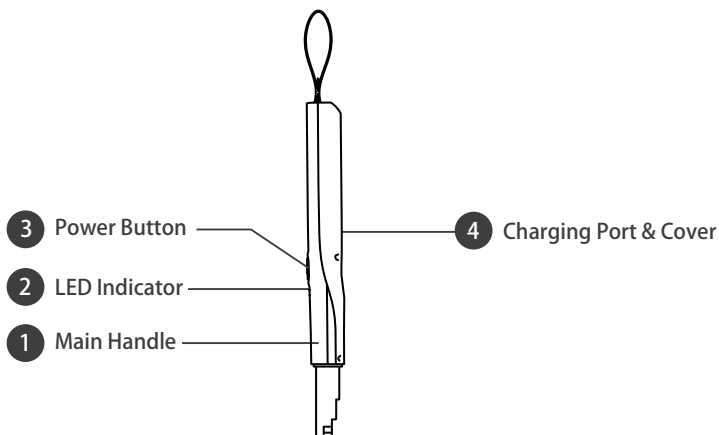

11 Dome Brush



 
12 Large Flat Brush



13 Flat Brush



14 Corner Brush



15 Brush Base



16 Chenille




17 Hook

Assemble

* NOTE: Before assembling any component of this product, make sure the unit is turned off.


How to assemble the brush head

Hold the Scrubber Head with one hand and insert the selected brush head.

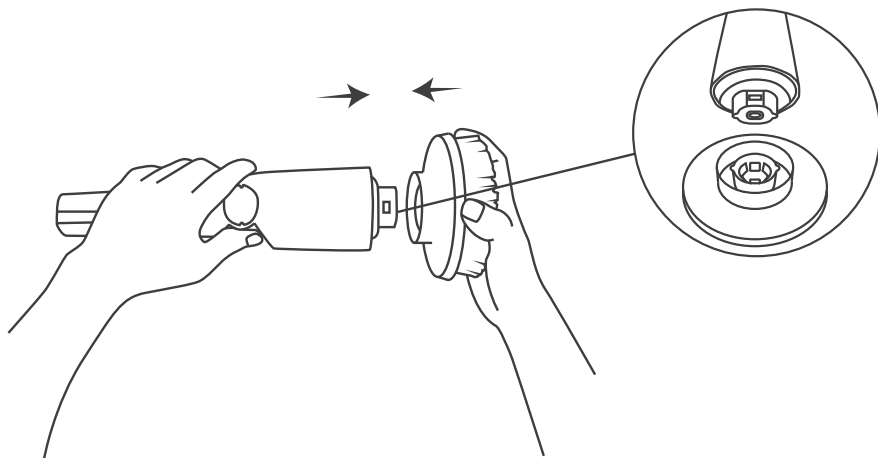


How to pull out the brush head

Hold the Scrubber Head with one hand and pull out the brush head.

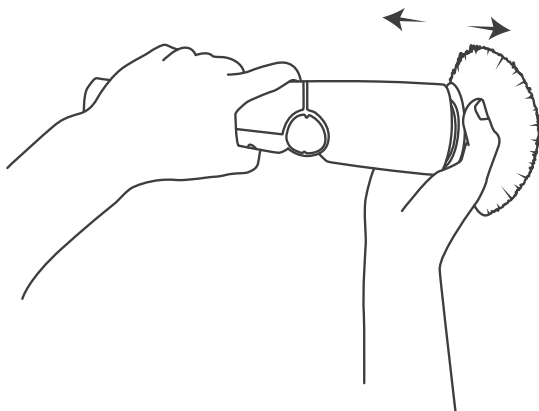


Assemble with Extension Rod


1. Connect the Main Handle to the Extension Rod until you hear a "CLICK".

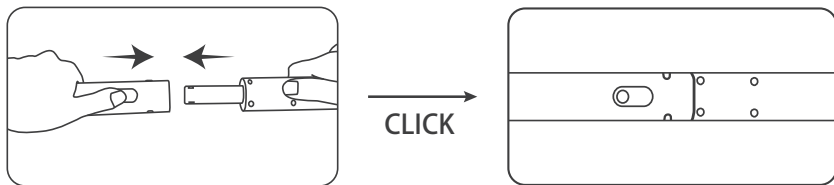

2. Connect the Scrubble Head to the Extension Rod until you hear a "CLICK".

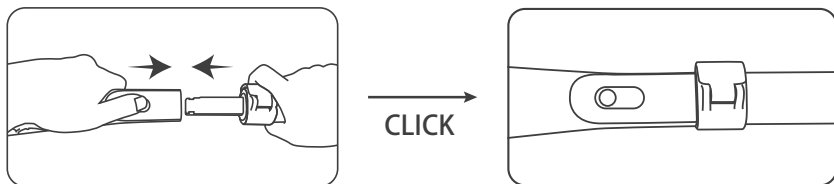


3. Assembly finished, as shown in the picture.

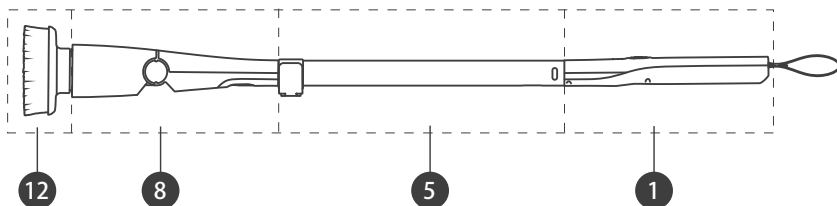

Assemble without Extension Rod

1. Connect the Main Handle to the Scrubber Head until you hear a "CLICK".

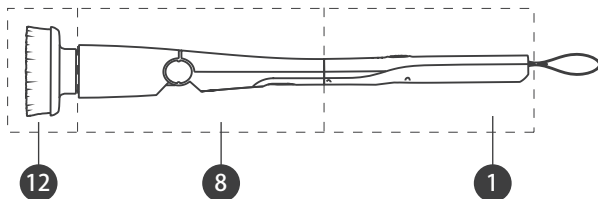

How to use

How to use Extension Rod

Open the telescopic rod wrench (Fig.1), Pull the telescopic rod out to the desired length (Fig.2), Close the wrench (Fig.3) to fix the current length.

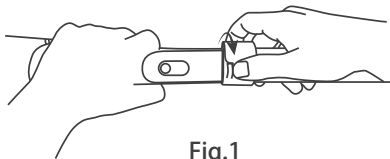


Fig.1

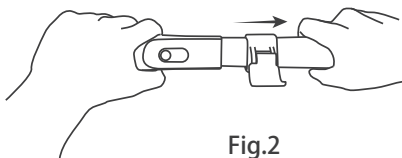


Fig.2



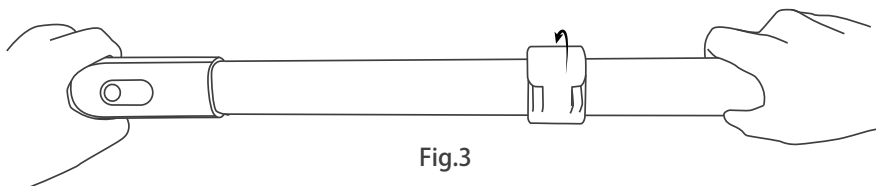


Fig.3

How to adjust the angle of scrubber head

Press and hold the 2 angle adjustment button to adjust the scrubber head in your desired angle.

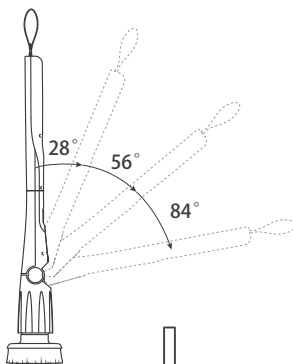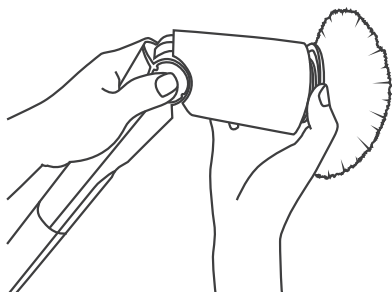

How to work

Press the power button 1 time, power on, enter into low speed.

Press the power button 2 times, enter into high speed.


Press the power button 3 times, power off.



Charging your scrubber

Before using the spin scrubber for the first time or if indicator flash in white color, please fully charge the battery.

Open the silicone charging cover, Insert the charging cord to the spin scrubber and USB Charger (Not Included), Plug the USB Charger into electrical outlet.

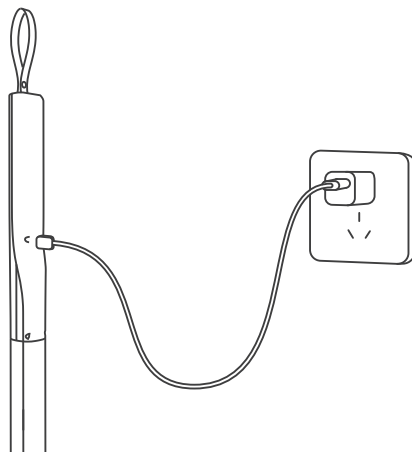

When the spin scrubber is fully charged, the 3 white indicators is solid on. When the spin scrubber is being charged, the white indicator light flash.




Cleaning your scrubber

Handle Part

Gently wipe handle part of the scrubber with a wrung soft cloth.

Brush Head

Disassemble the brush head and immerse it into the water to clean. Clean it with neutral detergent if it is difficult to clean.

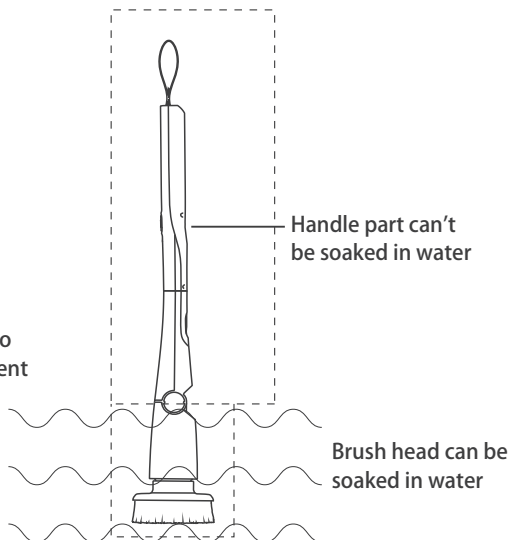


Suggestions for Use of Accessories



Dome Brush

 Round Brush is perfect as a concave cleaning brush for shower, tub, bathtub, sink, baseboard, toilet.



Large Flat Brush

Large Flat Brush is used to clean large flat surface area, like hard floor, tile, wall, door, window, counter, patio furniture, pool, soap scum, grime, stove, carpet, ceramic.



Flat Brush

Flat brush head ideal for cleaning smaller areas such as shower, kitchen, soap scum, grime, grease, stove, grill, counter, door.



 
Corner Brush

Corner brush is great for cleaning tile grout, edges, corners, cranny and tight places.



Chenille

Chenille is great for cleaning ceilings, walls and car glass.



Hook

Choose a flat and smooth wall, wipe it clean, and then firmly stick the hook to the wall. In order to make it more secure, please leave it for at least one hour before use.

Cleaning Tips

For better cleaning effect, it is recommended to use the brush with detergent (such as Mold & Mildew Remover, Water Stain Remover, Oven Cleaner, Bleach Cleaner, All Purpose Cleaner). You could use different detergents for different needs.

For removing stubborn stains, please soak stains into water and detergent for a while, and then use the scrubber to clean, it will shorten your cleaning time.

Suggestion of Storage

Store the scrubber in a ventilated and shade place. Avoid placing it in a wet place or being exposed to strong sunlight.

Specification

Input	DC 5V 2A
Charge Time	2.5 hours
Battery	2 batteries
Rotating Speed	Medium: Fits for Most Surfaces
	High: Fits for stubborn Surfaces(Suggest Grip By 2 Hands)
Working Noise	<70dB

Troubleshooting

①Why doesn't the white indicator flash when charging?

Check if the charging socket is abnormal or power outage.

If the indicator light is solid white after plugging in the adapter, the product is fully charged, just turn it on to use.

②The charging indicator light doesn't turn to solid white after charging over 3hours

Please check whether the socket and charging connection are loose, plug them tightly before charging.

If the product is immersed in water during use, it will damage the internal circuit and cause abnormal charging.

③Why doesn't the brush head spin when the battery is fully charged ?

Please check whether the brush head is tightly connected with the extension rod and handle. For connection method, refer to the installation guide.

If it has been well connected and the product has not been soaked in water before, but the scrubber does not spin after turning on or it stops spinning without pressing the brush head too hard, please contact us.

④Why does the brush head spin less than 90minutes when the battery is fully charged?

Each user may use different downforce during use. If you keep pressing the brush head too hard, the working time will be less than 90mins. In order to prolong the use time, please do not press the brush head too hard.

FCC Statement

Operation is subject to the following conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

Note

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

Cleaning and user maintenance shall not be made by children without supervision;

This appliance can be used by children age from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited 12-Month Quality Warranty

BIUBLE Electric Spin Scrubber warranty extends only to the original customer purchase of the product and does not extend to any product that has been used for commercial, rental, or any other use. (Please contact if you don't use the product until it will be over the warranty time!)

Exclusions From The Terms of The Limited Warranty

This warranty does not cover damage caused by abuse, accident, alteration, misuse, tampering or vandalism, negligent handling or damage due to mishandling in transit or shipping. This warranty does not cover damage or defects caused by or resulting from repairs, service or alterations to the product or any of its parts

Technique Support

If you have any issues or questions regarding our products, please feel free to contact the BIUBLE Customer Service Team: **Email: biuble_service@hotmail.com**

