

Elite Gourmet 



3QT. STIRRING POPCORN MAKER

INSTRUCTION MANUAL

MODEL: EPM330(A~Z)

STIRRING POPCORN MAKER

IMPORTANT SAFEGUARDS	3
PARTS IDENTIFICATION	6
BEFORE FIRST USE	7
HOW TO USE YOUR POPCORN MAKER	8
CLEANING & MAINTENANCE	11
WARRANTY & CUSTOMER SERVICE.....	12

Questions? We're here to help! Visit: shopelitegourmet.com for support on this product.

IMPORTANT SAFEGUARDS

The Elite Brand takes consumer safety very seriously. Products are designed and manufactured with our valued consumers' safety in mind. Additionally, we ask that you exercise a level of caution when using any electrical appliance by following all instructions and important safeguards.

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS CAREFULLY.

2. Do not touch the power cord or plug with wet hands.
3. This product is only suitable for in-home use. Do not use it for other purposes, including outdoors or commercial use.
4. Do not submerge the base or any electric parts in liquid.
5. Please keep this product out of reach of children.
6. Do not put the product in high temperature environments, close to strong magnets, flammable materials including gas, etc. in order to avoid fire accidents.
7. Do not pull, bend, or compress the power cord with heavy objects to avoid accidents such as electric shock or fire.
8. After turning the power on, do not attempt to disassemble the Popcorn Maker. Do not put spoons or other utensils into the popcorn maker.
9. Do not flip the popcorn maker without oven gloves.
10. Do not attempt to disassemble or repair the popcorn maker by yourself. Do not use parts created by a third party manufacturer in the Popcorn Maker.
11. When using electrical appliances, basic safety precautions should always be followed, including the following:
 12. Do not touch hot surfaces. Use oven gloves when handling hot surfaces.
 13. To protect against electric shock, do not immerse cord, plugs in water or other liquids.

IMPORTANT SAFEGUARDS (cont.)

14. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
15. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
16. Do not place on or near a hot gas or electric burner, or in a heated oven.
17. Do not plug in power when not in use.

**SAVE THESE INSTRUCTIONS
THIS PRODUCT IS FOR
HOUSEHOLD USE ONLY**

SHORT CORD PURPOSE

NOTE: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

Longer power-supply cords or extension cords may be used if care is exercised in their use.

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the countertop or tabletop where it can unintentionally be pulled on or tripped over by children or pets.

POLARIZED PLUG

If this appliance is equipped with a **polarized plug** (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.

PARTS IDENTIFICATION



BEFORE FIRST USE

1. Clean the cover/bowl and measuring cup with a non-abrasive sponge or soft cloth before using. Turn the Rotary Knob counterclockwise to remove the stirring rod from the Rotary Knob.
2. Wipe the Stirring Rod and Cooking Surface with a non-abrasive sponge, towel or cloth. Install the Stirring Rod, make sure the Stirring Rod aligns with the Rotary Knob, and tighten the Rotary Knob clockwise to secure.

QUARTS OF POPPED CORN	AMOUNT OF OIL	AMOUNT OF POPCORN KERNELS	AMOUNT OF BUTTER
1	1/2 tbsp.	2 tbsp.	1/2 tbsp.
2	1 tbsp.	4 tbsp.	1 tbsp.
3	1 1/2 tbsp.	6 tbsp.	1 1/2 tbsp.

HOW TO USE YOUR POPCORN MAKER

1. Place the Popcorn Maker on a level surface and plug into electrical outlet.
2. Place vegetable oil onto the Cooking Surface according to chart on pg. 7. **(Fig. 1)**
Measure corn kernels in the included Measuring Cup. **(Fig. 2)**
3. Add kernels to the Cooking Surface. Add the clear cover to the base of the Popcorn Maker.
NOTE: DO NOT attach the Measuring Cup to the top of the Popcorn Maker, as the Steam Vents must remain open.
4. For additional buttery flavor, add pat of butter to the top of the Cover (where the Steam Vents are located) to heat while cooking. **(Fig. 3)**. It is recommended to use 1 tbsp butter per 1/4 cup popcorn.

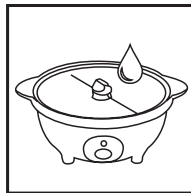 


Fig. 1

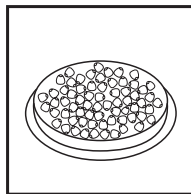 


Fig. 2

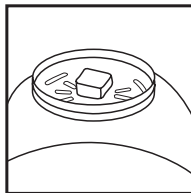 


Fig. 3

HOW TO USE YOUR POPCORN MAKER (cont.)

5. Press the Power Button to start cooking (Fig. 4). Depending on the amount of popcorn and size of kernels, it may take 3-4 minutes for the popcorn to begin popping.
6. Once popping has slowed to one kernel every three seconds or longer, turn the Power Button off and unplug the Popcorn Maker.
7. Add the Measuring Cup to the top of the Cover (Fig. 5). It should fit securely into place.
8. Hold the Bowl Handle and the Base Handle together and flip the popcorn maker over. You can also hold by the Measuring Cup and the Base of the Popcorn Maker. (Fig. 6)

NOTE: DO NOT directly grab the clear cover or the cooking surface, as both will be hot after cooking. Use oven mitts if desired for additional safety!

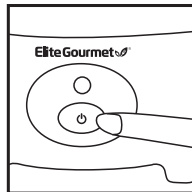 


Fig. 4

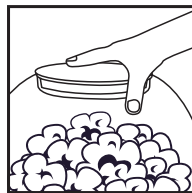 


Fig. 5

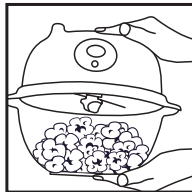 


Fig. 6

HOW TO USE YOUR POPCORN MAKER (cont.)

9. Remove the Base and serve (**Fig. 7**). Be sure to open the Popcorn Maker so the steam escapes away from you, as steam will be hot. Use oven gloves or a towel.

NOTE: Please wait approximately 10-12 minutes before using the Popcorn Maker again, otherwise it will overheat.

TIP: If kernels are not popping as much as desired, try soaking them in water for 10 minutes to add moisture. This can also result in fluffier popcorn. Note: If popcorn is old and completely dry, it will not pop.

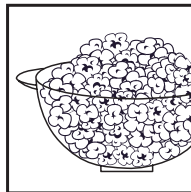 


Fig. 7

CLEANING & MAINTENANCE

1. Be sure to allow the Popcorn Maker to cool before cleaning. Remove the Stirring Rod from the Base by unscrewing the Rotary Knob (Fig. 8). Use a damp, frictionless sponge or damp cloth to clean the Base and the Stirring Rod before reattaching (Fig. 9)
2. Wash the Cover/Bowl and Measuring Cup in warm soapy water with a non-abrasive sponge or soft cloth. The Cover/Bowl and Measuring Cup are top-rack dishwasher safe.
3. Rinse thoroughly and dry with a soft towel.

NOTE: DO NOT submerge the Base into water or other liquids.

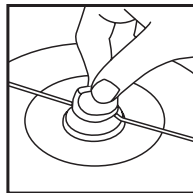 


Fig. 8

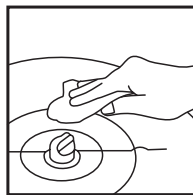 


Fig. 9

**LIMITED WARRANTY* ONE (1) YEAR WARRANTY IS ONLY VALID WITH
PROOF OF PURCHASE FROM AN AUTHORIZED DEALER
PLEASE DO NOT RETURN TO STORE OF PURCHASE.**

If you have any problems with this unit, contact Customer Service for support.

1. Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
2. Retail stores/merchants selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.
3. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
4. At its sole discretion, Maxi-Matic USA will either repair or replace the product found to be defective during the warranty period.
5. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
6. Consumer's remorse is not an acceptable reason to return a product to our Service Center.
7. This limited warranty covers appliances purchased and used within the 50 U.S. states plus the District of Columbia and does NOT cover normal wear of parts or:
 - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.

- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Lost or missing parts of the product. Parts will need to be purchased separately.
- Damages of parts that are not electrical; i.e. cracked or broken plastic/glass, scratched/dented inner pots.
- Damage from service or repair by unauthorized personnel.
- Extended warranties purchased via a separate company or reseller.
- Acts of nature such as fire, floods, hurricanes, tornadoes, etc.

8. This warranty does not apply to re-manufactured merchandise.

Maxi-Matic, USA shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

***One Year Limited Warranty valid only in the 50 U.S. states plus the District of Columbia, excluding Puerto Rico and the Virgin Islands.**

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary by state, province, and/or jurisdiction.

****Any instruction or policy included in this manual may be subject to change at any time.**

MAXI-MATIC, USA

18401 E. Arenth Ave. City of Industry, CA 91748

Visit: shopelitegourmet.com for Live Chat Support and Contact Us Form

RETURNS

A. Any return of defective merchandise to Maxi-Matic, USA must be processed accordingly by first contacting customer service (support@maxi-matic.com) to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.

B. IMPORTANT RETURN INSTRUCTIONS. Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic, USA:

1. Carefully pack the item in its original carton or other suitable box with sufficient cushioning to avoid damage in shipping.
2. Before packing your unit for return, be sure to enclose:
 - a. Your name, full address with zip code, daytime telephone number, and RA#,
 - b. A sales receipt or PROOF OF PURCHASE from an authorized dealer,
 - c. The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and
 - d. Any parts or accessories related to the problem.

3. Maxi-Matic, USA recommends that you ship the package via UPS ground service for tracking purposes. We cannot assume responsibility for lost or damaged products returned to us during incoming shipment. For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.
4. All return shipping charges must be prepaid by you.
5. Once your return has been received by our warehouse, Maxi-Matic, USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.
6. Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Elite Gourmet

Elite Customer Service Center

Mail

Maxi-Matic, USA
18401 E. Arenth Ave
City of Industry, CA
91748-1227

Website

shopelitegourmet.com

Visit our website for Live Chat Support
& Contact Us Form
Register your product online

Por favor visita **shopelitegourmet.com** para
descargar un manual de usuario en español.



We take pride in the fact that Elite Gourmet products are continuously improving. To keep you well informed of these changes and to reduce paper consumption, we've included this QR code for you to scan and easily download the most recent updates to your product to your mobile device. Just access your camera, point at the QR code & your mobile device will do the rest.



elitebymaximatic



@elite_by_maximatic

Elite is a registered trademark of Maxi-Matic, USA.
Copyright Elite by Maxi-Matic.

Actual product may vary from the images/illustrations in this manual due to continual product improvement.

