

User Manual of Product 1:

New World Pet Products Folding Metal Dog Crate; Single Door
42"



New World®
Pet Products

by **MidWest** Homes for Pets®

800-428-8560
midwesthomes4pets.com
3142 S. Cowan Rd.
Muncie, Indiana 47302

Assembly Instructions for Model Numbers B24, B30, B36, B42, B48, B24DD, B30DD, B36DD, B42DD, B48DD

IMPORTANT INFORMATION

Warning: Remove collars, tags, and leads from pet before placing it in the crate to prevent possible entanglement. DO NOT leave young animals unsupervised for extended periods of time. Our main concern is your pet's well-being. If your pet has never been kept in any enclosure, specific training may be necessary for your pet's safety. A pet, not specifically trained to be restricted, may attempt to escape from this enclosure, which could cause serious injury to your pet or damage to this product. New World/MidWest will not accept liability or warrant any loss to improper use of this product by a pet that has not been properly trained.

Unwrap and remove all parts from the box. Keep the box and packing material until the product is assembled. In case of return or exchange, failure to return product in similar condition as received could result in limited reimbursement. Please save sales receipt as proof of purchase for warranty purposes. Check to ensure you have all the parts below. If you discover any parts are missing, immediately call our toll-free service helpline at 800-428-8560 (Monday - Friday 9 a.m. to 4 p.m. EST) or email us at info@midwesthomes4pets.com.

ASSEMBLY INSTRUCTIONS



1. Lay the crate on a flat surface so the plastic pan is on the bottom and the wires are facing up.
2. Grab any wire on the top panel and turn it like the page of a book.
3. Grab the top and side panel and pull upwards until the sides are vertical. This will form the shape of the crate.

Make sure the bottoms of the two side panels rest inside the bottom panel (as illustrated), and that one edge of the top panel is "inside" the side panel and "outside" of the other side panel.


4. Reach in the home and pull the door panel toward you until it fits into the clips on the side panels.
5. To secure the door panel to the top panel, gently pull the door panel outward while pushing down on the top panel. Fit the hooks on the door panel over the last wire on the top panel.

Note: Sizes 42" and 48" have a "U-Wire" on the top panel that hooks over end panel. 36" crates have a straight "U-Wire" on the top panel that rests on top of the end panel. 24" and 30" crates do not require a U-Wire.

6. Repeat steps 4 and 5 with the end panel.

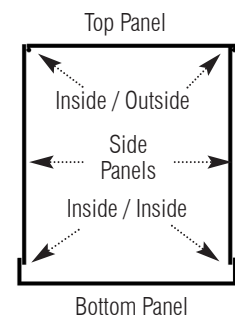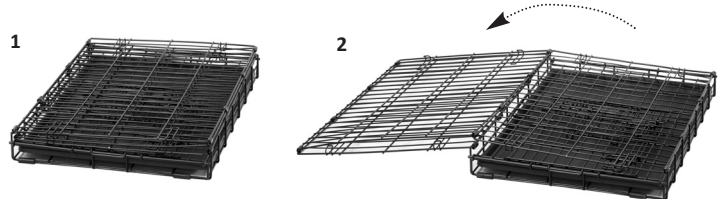

U-Wire for Size 36"

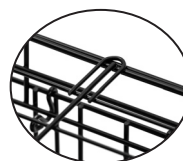


U-Wire for Sizes 42", 48"



To Operate the Doors

Lift the handle 90° so the locking tip will clear the wire on the front panel, then slide the bolt to the left and swing the door open.

To close, swing the door back toward the crate, push the door firmly against crate, lift the handle to a 90° angle and slide the bolt to the right, making sure the locking tip engages on the right side of the wire on the front panel. Be sure the handle is in the down position.

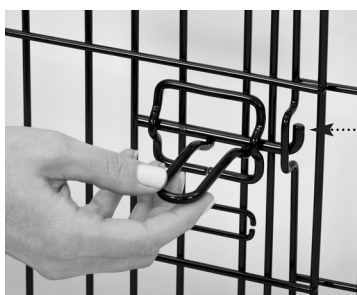

Locking Tip



Removing the Plastic Pan

The pan stop is under the front door panel on the wire that touches the floor. The pan stop wraps behind and then over the bottom wire of the front door panel to create a barrier that prevents the pan from sliding out of the crate. To remove the plastic pan for cleaning, disengage the pan stop and slide out the plastic pan. When the pan is in the crate, make sure it is secured with the pan stop fully engaged.



To Fold and Transport the Crate

Fold down the crate by reversing the assembly process starting at step 6.

Maintenance

To protect the finish of your crate and the bottom pan, use only mild, non-abrasive cleaners and water. Any coarse scrubbing or abrasive materials could damage finish.

Do not expose the plastic pan to direct sunlight for extended periods of time as this may lead to warping or damage to the pan.

To help reduce noise, place a piece of carpet or cut a piece from the crate carton and place it inside the crate beneath the pan.

TOLL-FREE SERVICE HELPLINE: If you have any problems or questions with the assembly of your new New World crate call our Service Helpline at: 1-800-428-8560 between 9:00 a.m. and 4:00 p.m. (EST) Monday through Friday.

LIMITED MANUFACTURER'S WARRANTY

- For one (1) year from the date of original purchase, MIDWEST Homes For Pets ("MIDWEST") warrants to the purchaser of this crate that, should it prove defective by reason of improper workmanship and/or material, MIDWEST will repair or replace, at its option, any defective part of the crate, without charge for the part or for shipping. Replacement parts are warranted for the remainder of the original period.
- THIS WARRANTY DOES NOT COVER defects in the crate caused by any animal, any physical abuse to or misuse of the crate, any damage caused by the original purchaser or any third party, or any defects arising or discovered more than one (1) year from the original retail purchase date.
- STEPS TO OBTAIN WARRANTY SERVICE:
 - The purchaser must call MIDWEST's HELPLINE, 800-428-8560, to report the alleged defect to a customer service representative or obtain missing parts.
 - The customer service representative will determine if the defect is covered by this warranty, and if it is, will authorize and instruct the purchaser in how to obtain corrective action.
 - MIDWEST may require the purchaser to present the sales receipt or other proof of purchase prior to authorizing any return or replacement. No returns or replacements will be permitted without proper authorization. If a return or replacement is authorized, you may be requested to return the item to MIDWEST or to make the item available for pick-up by MIDWEST.
- ANY EXPRESS WARRANTY NOT PROVIDED IN THIS WARRANTY DOCUMENT, AND ANY REMEDY FOR BREACH OF CONTRACT THAT, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF ONE (1) YEAR. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.
- UNDER NO CIRCUMSTANCES SHALL MIDWEST BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.
- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.