 


Instruction

D30 Product Instruction

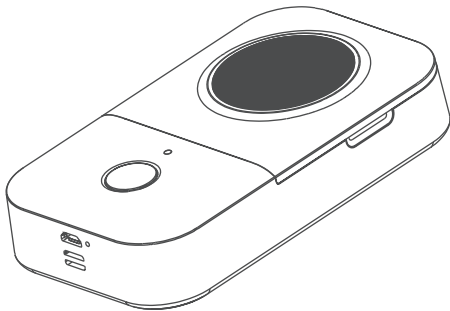

Please read this instruction carefully before using this product and keep it properly.
For more detailed information, please check the official website: www.phomemo.com



Operation guide QR code

 **YouTube** Please scan the QR code to get the printer operation guide.

Table of Contents

01 ▶

Packing List

02 ▶

Parts
Description

02 Appearance

03 Power Button and
Indicator light

04 ▶

App Download
Method

05 ▶

Boot Guide

06 ▶

Paper Roll
Installation

08 ▶

Printer
Connection

09 ▶

Confirm the
Label Size

10 ▶

Printing Guide

10 Select Edit Version

11 Lite Mode

14 Creation Mode

18 ▶

Product
Specifications

19 ▶

Daily
Cleaning

20 ▶

Solutions for
Common
Problems

22 ▶

Product
Warranty

23 ▶

FCC Caution

24 ▶

Warranty /
Maintenance Card


Packing List



Printer*1



 Product instruction*1




Charging line*1

The number of paper rolls in the list is subject to the actual shipment.

Parts Description Appearance Introduction

 01 Printer display

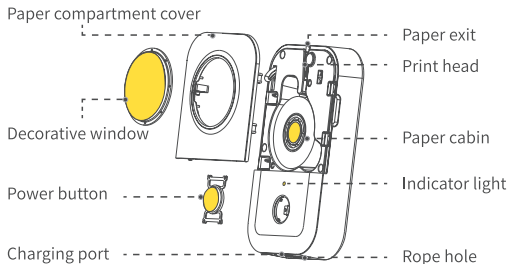

02 Label paper display

Various labels available for purchase

 


Gap paper display



Continuous paper display

Parts Description Power Button and Indicator Light

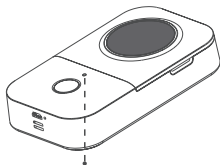

Indicator light

Power button description

Button	Operation method	Functions
Power button	Press and hold 2s	Turn on/off
	Click	Print out the paper
	Double click	Print the content of the self-test paper

Power indicator status

 Green-Keep on	Normal status (printing)
 Green-Flash slowly	Harging with power on
 Green-Flash quickly	Charging with power on
 Red-Keep on	Error (lack of paper, cover opened, high temperature)
 Red-Flash slowly	10% battery
 Red-Flash quickly	5% battery

App Download Method



NOTE

- This product needs to be connected to the printer in the App;
- Due to the requirements of mobile phone system, the Android mobile phone will use the user's geographic location when connecting, so that the user needs to turn on the GPS and confirm the authorization.

Method I: Please use your mobile phone to scan the QR code to download the App



Method II: Search and download



Google Play



 
App Store




Print Master

Boot Guide

01 Press and hold for 2s to turn on

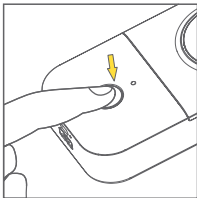


 02 Open the paper compartment cover of the machine

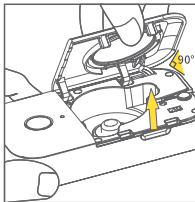


Paper Roll Installation

 
- 01** Take out the label paper, tear off the anti-loosening sticker

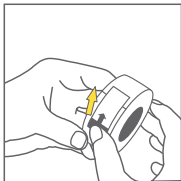

 - 02** Put the printing paper in the compartment with the printing side left

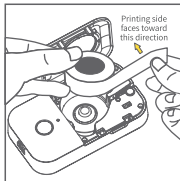


 - 03** Pull out the label paper by 5mm in length for normal printing

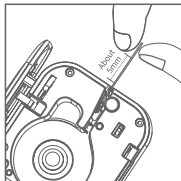


Paper Roll Installation

 
04 Close the paper compartment cover of the machine

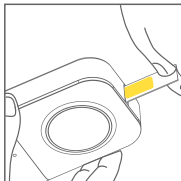

 05 Click the power button to identify the label position

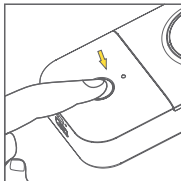

 06 Come out a piece of paper, positioning completed

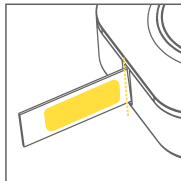


NOTE


- When installing or replacing the label roll for the first time, the label position identification is required; (Step **05**)
- If the label position identification is not carried out (Step **05**), failures may occur such as first printing missing, not centered, etc.

Printer Connection

 01 Turn on GPS(Android mobile phone only)

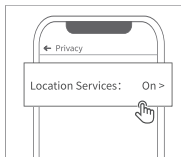


02 Open the App

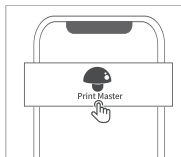 

03 Click to search **Connect now** for the device



 04 Connect immediately

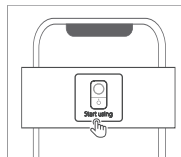


NOTE

- When connecting device in the App, please make sure that your printer is turned on and Bluetooth of your mobile phone is turned on.
- Due to the requirements of mobile phone system, the Android mobile phone will use the user's geographic location when connecting, so that the user needs to turn on the GPS and confirm the authorization.

Confirm the Label Size

Method I:

 Check the antiloosening paste (Please refer to the actual size used)

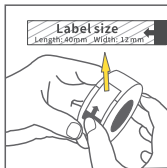


Method II:

Check the label paper packaging




Method III:

 Use a ruler to measure

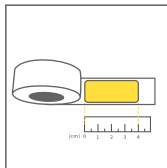


Method IV:

 Check the label paper pads (the old and new versions of label paper are being replaced, please refer to the actual shipment)

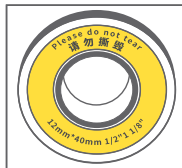


Printing Guide **Select Edit Version**

 
Lite Mode: Edit simply, print speedly



 Creation Mode: Multifunctional, covers more needs



 The user can view more operation tutorials and switch editing versions in the “Home”.

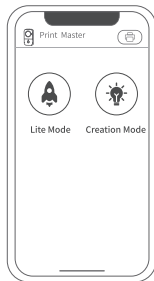


Printing Guide Lite Mode


01 Click "Label"



 02 Click to select the corresponding label size (Please refer to the actual size used)

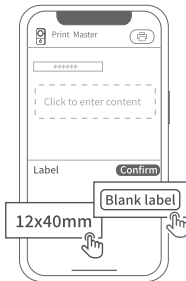

03 Click the blank box to enter text

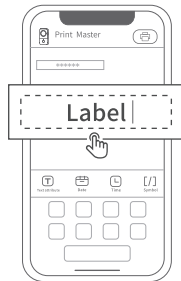 

11

 


 
NOTE

• If the matching template is not selected, there will be undesirable situations such as centered layout of printed content, uneven layout, etc.

Printing Guide Lite Mode


04 Edit function description

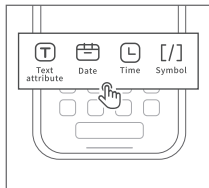


Functions	Operation method	Example
	Click to insert text. User can edit the text size, typesetting and select various fonts, etc.	
	Add date	
	Edit specific time point	
	Unit symbol	

Printing Guide Lite Mode

 05 After editing, click to “Print”

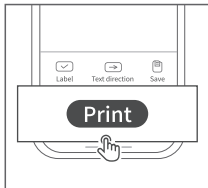

 
06 After the printing is completed, tear off the label

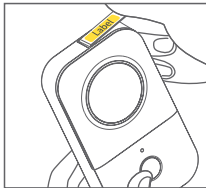


Printing Guide

Creation Mode

 
01 Click the size box and select corresponding label size

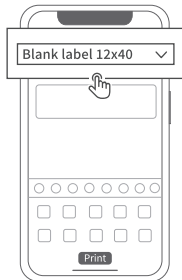

 02 Click to select the corresponding label size (Please refer to the actual size used)

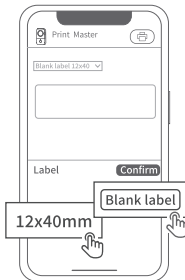

03 Click “(T)” to input text

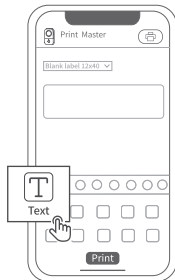 


NOTE

• If the corresponding size template is not selected correctly, there will be undesirable situations such as centered printing layout and uneven layout, etc.


Printing Guide Creation Mode

04 Edit function description

 
Shortcut keys

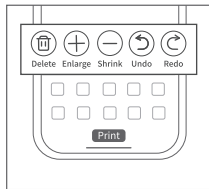

Editing function

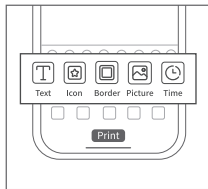 

Editing function

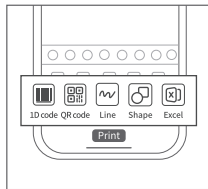 

NOTE

• App functions will be updated with new functions in irregular, please refer to the actual function.

Printing Guide Creation Mode


Functions	Description
	Click to insert text. User can edit the text size, typesetting and select various fonts, etc.
	Icon function, click to insert all kinds of cute icons.
	Click border function, and choose various cute borders to decorate your label.
	Click to insert the picture you want to edit and print.
	Insert date and specific time.
	Click to scan the code to identify. It can quickly identify the text content in the QR code.

Functions	Description
	Click to insert a one-dimensional code. Enter the information to be edited, then a one-dimensional code can be automatically generated, and the layout can be adjusted.
	Click to insert a QR code. Enter the information to be edited, then a QR code can be automatically generated, and the layout can be adjusted.
	Insert a line. User can choose a dashed line or a solid line.
	Click to insert round or square shapes.
	Support table import, therefore quickly generating a list that needs to be printed.
	Click to recognize text in the picture.


Printing Guide

Creation Mode

 05 Click the print label after editing

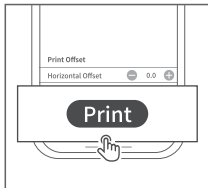

 06 After the printing is completed, tear off the label

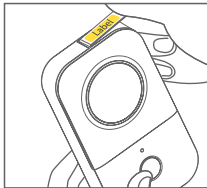


Product Specifications

Product name	Small Label Printer
Product model	D30
Printing technology	Thermal printing
Effective printing width	12mm
Supported consumables	Pre-cut paper, black mark paper, continuous paper
Printing density	Light, standard, dark
Printing resolution	203 dpi
Print head service life	50 KM
Communication interface	Bluetooth 4.2
Product size	131.5*75.5*29 mm (5.2*2.9*1.2 inch)
Power Input	5V --- 2A
Power supply method	Micro USB
	Lithium battery
Supported operating system	Android
	iOS

Daily Cleaning

 
01 Turn off the printer

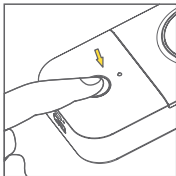


02 Use a cotton swab dipped in a little alcohol



 03 Wipe the print head gently

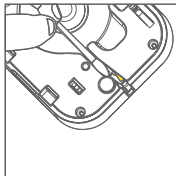

 04 Wait for the alcohol to evaporate and then turn it on and double-click the power button to print labels

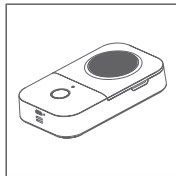

Solutions for Common Problems

Not centered, misplaced, offset, skipped, etc.

Please check Whether the paper roll is correctly placed in the machine?

Please make sure that the label is placed in the machine with printing side facing left. If it is placed incorrectly (reversed), printing will fail.

Please check Whether to select the corresponding label size and pattern in the App?

Whether the matching label size and pattern have been selected in the App. Please confirm the size and pattern on the label packaging, and select the matching template in the App.

Please check After the machine is turned on, whether to click the power button to allow the machine to calibrate and position the label?

When installing or replacing label paper roll for the first time, the user needs to click the power button to print a blank label so that the print head can identify the position of label paper.

Printing blurry

Please check Whether the power of machine is sufficient.

 
On the "Profile" page, click "Printer" to view the specific power level. If the remaining power of printer is less than 10%, you can charge it for at least half an hour before use.



Solutions for Common Problems

Please check Whether there is foreign matter or glue on the print head?

There is foreign matter or glue on the print head. Please use a cotton swab dip with a little alcohol to gently wipe the dirt on the print head. Do not turn on the machine immediately after wiping. After the alcohol is evaporated and dry, double-click the power button to print the self-check page after turning on the machine to check the effect.

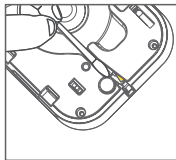

Printer cannot be connected

 
Please check The status of the printer is on, and the mobile phone bluetooth has been turned on?

Please check Is the device connection performed in App?

This product needs to perform the device connection in App.

Please check Is the mobile phone authorized?

Because of the phone system's requirements, Android phones will use your location when it is connected, and you need to turn on GPS and confirm authorization (other phone systems don't need to turn on this function).

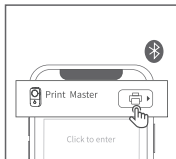

Product Warranty

Thank you for choosing the Small Label Printer.

- ① We will provide customers with reliable "replacement/return" support during the one-year warranty period from the date of purchase;
- ② Please keep the warranty card in a safe place so that you can read it when needed.

 +1855 957 5321(US only)

 support@phomemo.com

 www.phomemo.com

 **YouTube** Please scan the QR code to get the printer operation guide.



Operation guide QR code

This manual has been carefully checked. If there are printing errors or misunderstandings in the content, please consult customer service.

Note: If the supporting software is updated, it will be compiled into the new version of the manual without notice.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

Warranty/Maintenance Card

☐ Replace

☐ Return

User Information	Name : Gender : Phone :
	Address :
Product Information	Date of purchase :
	Product order number :
	Product serial number :
Reason for Return (Replace / Repair / Request Maintenance)	Fault description :

Thank you for choosing our products!

 support@phomemo.com

 www.phomemo.com

 **YouTube** Please scan the QR code to get the printer operation guide.



Operation guide QR code