



Instruction Manual

Please read carefully before use and keep for future reference.

Table of Contents

Thank You	3	Using the AUX Input	14
In the Box	3	Using the USB/CARD Player	15
Before You Start	4	About USB Drives and Memory Cards	15
At a Glance	5	Loading a USB Stick Drive or Memory Card.....	15
Connect Power	9	Playing Music from USB and Memory Cards.....	16
AC Power.....	9	Warnings and Precautions.....	17
Battery Power.....	9	Specifications	21
Basic Functions.....	10	Support	21
Turning the Unit On and Off	10		
Adjusting the Volume.....	10		
Selecting an Equalizer Preset	10		
Using the Radio.....	10		
Using the CD/MP3 Player	11		
About Compact Discs	11		
Loading a Disc.....	11		
Playing a Disc.....	12		
Repeat, Random, and Intro Playback.....	13		
Repeat Album Playback (MP3, USB, Card only).....	13		
Programming a Playlist	14		

Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.

We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at **www.naxa.com** and see all that we have to offer!

In the Box

Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support team at **www.naxa.com/naxa_support**.

- NPB-250 portable MP3/CD player
- AC power cable
- User manual

Before You Start

Please take note of the following before you start.


- Do not block the ventilation openings or holes.
- Avoid installing the unit in locations described below:
 - Places exposed to direct sunlight or close to heat radiating appliances (such as electric heaters, or on top of other stereo equipment that radiate heat).
 - Places lacking ventilation or dusty places.
 - Places subject to constant vibration.
 - Places that are humid or moist.
- Operate turning controls and switches as instructed in manual.
- Before turning on the power for the first time, make sure that the power cord is properly installed.
- Store your tapes or CD in a cool area to avoid damage from heat.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.


WARNING: Remove batteries if exhausted or if they will not be used again for a long period. The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst, therefore:

- Do not mix battery types, e.g. alkaline with zinc carbonate.
- When inserting new batteries, replace all batteries at the same time.


At a Glance

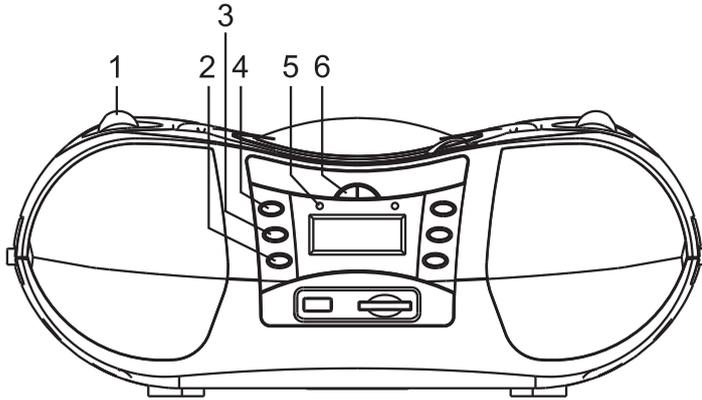




1	Volume dial	Turn the dial to adjust the volume level.
2	SKIP DN key (Previous/Reverse)	Previous: Press to skip to the previous track. Reverse: Press and hold to scan quickly in reverse through the current track.
3	SKIP UP key (Next/Forward)	Next: Press to skip to the next track. Forward: Press and hold to scan quickly forward through the current track.
4	PLAY/PAUSE key	Press to start, pause, or resume CD playback.
5	Power Indicator	Lights up when power is on.
6	USB/CARD key	Switch between the USB and CARD memory reader when the player is USB/CARD mode.

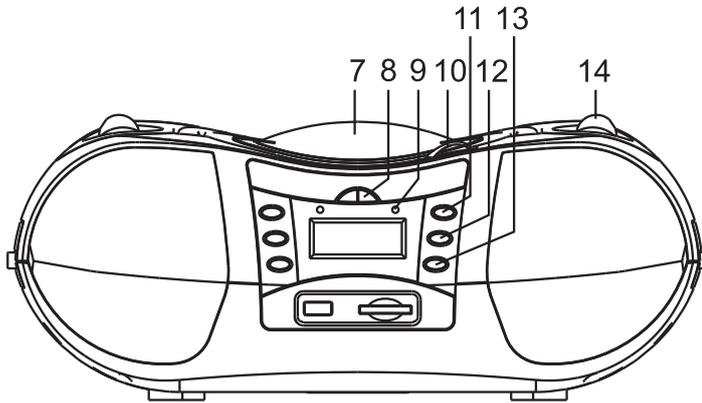

7	CD compartment	Load compact discs here. The label side should face up.
8	MODE key	Press to change the playback mode (repeat, random).
9	FM Stereo indicator	Lights up when the radio is tuned to an FM stereo signal.
10	CD door latch	Lift the CD door at the latch to open the CD compartment [7]. Never open the compartment while a CD is playing or spinning!
11	STOP key	Press to stop CD playback.
12	PROG/EQ key (Program/ Equalizer)	PROG: Create a custom playlist. Press to enter Program mode. EQ: Press to cycle through the audio equalizer presets.
13	+10/ALBUM key	+10: Press to skip forward 10 tracks. ALBUM: Press and hold to select an album number when playing MP3 files that have been saved in directories (folders).
14	Radio Tuning dial	Turn the dial to tune to a radio station. The frequency scale is printed next to the dial.

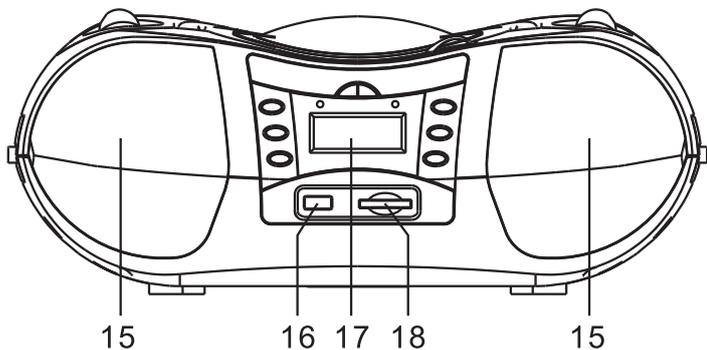

15	Speakers	Full-range drivers deliver powerful stereo sound.
16	USB Port	Load USB memory sticks here.
17	LCD screen	Displays player status information.
18	Memory card slot	Load memory cards here. Refer to the Specifications section of this manual for a list of supported memory cards.

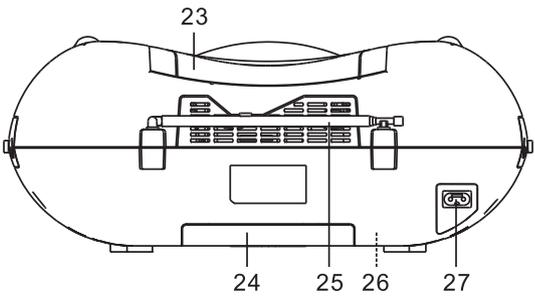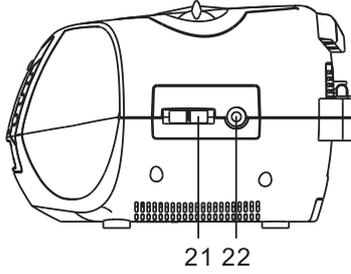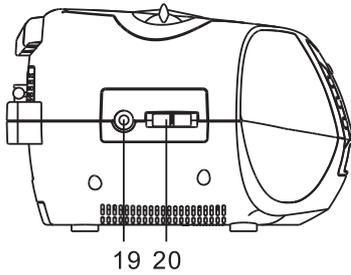

19	Headphone out jack	Connection for stereo headphones or earphones with a 3.5 mm plug. The player will mute the speakers when this connection is in use.
20	FUNCTION switch	Set the switch to the position of the desired function mode. Set the switch to OFF to turn the player off.
21	Band switch	Set the switch to the desired radio band.
22	AUX Input jack	Play audio from a device that is connected to this 3.5mm input jack.
23	Handle	Raise the handle to transport the unit safely and easily.
24	Battery compartment	Load 8 UM-2 "C" size batteries into the compartment for portable power.
25	Antenna	Extend the antenna fully and adjust its position to optimize FM radio reception.
26	AC Voltage switch (dual voltage only)	Available only on models that support dual-voltage. Make sure the switch is correctly set to match your household power supply.
27	AC power socket	Connection for the included AC power cable.

Connect Power

The unit can be powered by AC household power, or by batteries.

AC Power

This unit operates on AC 120 V ~60 Hz power.

With the included AC power cable, connect the AC power socket [27] found on the rear of the player to a wall power outlet that provides AC 120V ~60Hz power.



Please be sure the power outlet you plug this unit into is working and receives constant (unswitched) power.

Contact your local power utility if you are not sure which type of power you have.



Do not attempt to operate the radio on any other power source. You could cause damage to the unit and void your warranty.

Battery Power

Install 8 UM-2 “C” size batteries to enjoy music wherever you are.

1. Remove the lid from the battery compartment [29] found on the back of the main unit.
2. Load eight “C” size batteries, taking care to match the polarities marked on the inside of the compartment.



Remove the batteries if they are exhausted or will not be used for a long time.

Batteries contain chemicals that may be regulated by your local government. Dispose of them properly according to regulations.

Basic Functions

Turning the Unit On and Off

To turn the unit on, set the FUNCTION switch [20] to one of the function positions (e.g., CD/MP3/AUX, RADIO, USB/CARD). The power indicator [5] will light up.

To turn the unit off, set the FUNCTION switch [20] to the OFF position.

Adjusting the Volume

Turn the VOLUME dial [1] clockwise or counter clockwise to increase or decrease the volume level, respectively.

Selecting an Equalizer Preset

Use the equalizer presets to tailor the acoustic dynamics of the sound output to the audio you are listening to.

Press the PROG/EQ key [12] to cycle through the audio equalizer presets: POP, ROCK, CLASS(ICAL), JAZZ, BASS, and NORMAL.

Using the Radio

Set the FUNCTION switch [20] to the RADIO position to start using the radio.

1. Select a frequency band. Set the BAND switch [21] to the AM, FM, or FM ST. position.
2. Turn the Radio Tuning dial [14] to tune to a radio station; the current station can be seen on the frequency scale printed to the right of the dial.
3. Optimize radio reception:
 - Fully extend the telescopic ANTENNA [25] and adjust its orientation to optimize FM radio reception.
 - The AM antenna is built into the player. Adjust the orientation and position of the player itself to optimize AM radio reception.



Select the FM mono band when tuning to a station with a weak signal. Select the FM ST (stereo) band when the signal is strong.

Using the CD/MP3 Player

Set the FUNCTION switch [20] to the CD/MP3/AUX position to start using the CD/MP3 player.

About Compact Discs

This player is compatible with all digital audio CDs, digital audio CD-Recordable discs (CD-R) and CD-Re-writable discs (CD-RW) that have been finalized, and CD-DA format digital audio CDs.

This player is also compatible with MP3-CDs. These are compact discs that contain MP3 audio files on them.

 *Only handle a CD by its edge. Avoid touching the label or the playable side with your hands or any other object.*

Loading a Disc

1. Open the CD compartment [7]. Lift up from the CD door latch [1] found on the lower right corner of the compartment.

2. Load a compatible disc. Place the CD into the compartment with its label facing up.
3. Close the CD compartment [7]. Lower the door; the spring hinge will help close the compartment securely.
4. The player will attempt to read the disc once the compartment is closed.
 - The LCD screen [17] will show the amount of playable tracks on the disc.

 *To ensure good system performance, wait until the player recognizes and reads the disc before proceeding.*

 *MP3-CDs take longer to read because they have more data on them. Please wait patiently until the player has recognized the disc.*

Playing a Disc

With a compatible disc in the CD compartment [7]:

- Press the PLAY/PAUSE key [4] to start playback.
 - Play will start from track 1
- To pause playback, press the PLAY/PAUSE key [4] while a disc is playing.
 - The LCD screen [17] will read “PAUSE.”
 - Press the PLAY/PAUSE key [4] again to resume playback.
- To stop playback, press the STOP key [11].
 - The LCD screen [17] will read “STOP.”
- To select a track to play:
 - Press the SKIP UP key [3] to skip to the next track. The LCD screen [17] will change tracks accordingly.
 - Press the +10/ALBUM key [13] to skip forward 10 tracks. The LCD screen [17] will change tracks accordingly.
- Press the SKIP DN key [2] to skip back to the previous track. The LCD screen [17] will change tracks accordingly.
- To scan through a track at high speed:
 - Press and hold the SKIP UP key [3] during playback. Play will advance quickly through the current track; release the key to resume playback at normal speed.
 - Press and hold the SKIP DN key [2] during playback. Play will reverse quickly through the current track; release the key to resume playback at normal speed.
- To select an album to play (MP3 only):
 1. Press and hold the +10/ALBUM key [13]. The LCD screen [17] will flash the current album number.
 2. While the album number is flashing, use the SKIP UP and SKIP DN keys [3, 2] to select an album number. Press the +10/ALBUM key to enter your selection. The LCD screen [17] will flash “000” to allow you to select a track within the album.

3. While the track number is flashing, use the SKIP UP and SKIP DN keys [3, 2] to select a track number. Press the PLAY/PAUSE key [4] to start playing the track.



Selecting an album will only work on media that contain MP3s organized within folders/directories (e.g., CDs, memory cards, USB flash drives).

Album numbers correspond with the folders/directories that the MP3 files are saved within.

Repeat, Random, and Intro Playback

You can change the order in which the tracks of a CD are played by pressing the MODE key [8]. To cancel these special playback modes, press the STOP key [11].

- To repeat a single track, press the MODE key [8] until “REPT 1” appears on the LCD screen [17]. The current track will replay repeatedly until play is stopped.

- To repeat all the tracks, press the press the MODE key [8] until “REPT ALL” appears on the LCD screen [17]. The player will replay all tracks on the CD until play is stopped.
- To play the tracks on the CD in a random order, press the press the MODE key [8] until “RANDOM” appears on the LCD screen [17]. The player will shuffle the playback order before each track is played.
- To play just the first 10 seconds of each track, press the MODE key [8] until “INTRO” appears on the LCD screen [17]. The player will play the first 10 seconds of a track and then skip to the next one.

Repeat Album Playback (MP3, USB, Card only)

To repeat all the tracks in an album (i.e., a folder or directory), press the MODE key [8] until “REPT DIR” appears on the LCD screen [17].



Repeat Album mode (REPT DIR) is not available when playing a regular audio CD.

Programming a Playlist

When the CD is stopped, you can select up to 20 CD tracks to play in any order that you choose.

1. Press the STOP key [11] to make sure that playback has stopped.
2. Press the PROG/EQ key [12]. The LCD screen [17] will flash “P-01”.
3. Use the SKIP UP or SKIP DN keys [3, 2] to choose a track to enter into the playlist. You may also use the +10/ALBUM key [13] to choose a track.
4. Press the PROG/EQ key [12] to save the track into the playlist. The LCD display [3] will then flash the next playlist track number (e.g., “P-02”).
5. Repeat steps 3 and 4 until your playlist is complete.
6. Press the PLAY/PAUSE key [4]. Play will start from the first track in the playlist and stop once all of the programmed tracks have been played.
7. Press the STOP key [11] to stop the programmed playlist, then press the STOP key [11] a second time to clear the playlist from Program memory.

Using the AUX Input

Set the FUNCTION switch [20] to the CD/AUX position to play devices connected to the AUX Input jack [22].

1. Connect the audio source to the player. Use an optional audio patch cable to connect the 3.5mm headphone or line-out jack of the audio source to the 3.5mm AUX Input jack [22] found on the rear of the player.
2. Prepare the player. Set the FUNCTION switch [20] to the CD/MP3/AUX position. Turn the VOLUME dial [1] to lower the volume level.
3. Prepare the audio source. Start playback on the device. Set the volume level of the device to approximately 80% of its maximum.
4. Adjust the final volume. Turn the VOLUME dial [1] of the player to set the volume to a comfortable level.



Use the audio source to control playback (e.g., stop, play, next). Use the player to control the volume.

Using the USB/CARD Player

Set the FUNCTION switch [20] to the USB/CARD position to play files from a USB stick drive or memory card.

About USB Drives and Memory Cards

This player can play supported audio files from USB stick drives connected to the USB port [16]. It can also play supported audio files from memory cards loaded in the Memory card slot [18].

For a list of supported audio files, please refer to the Specifications section of this manual.

For a list of supported memory card types and capacities, please refer to the Specifications section of this manual.



There are many different memory card and USB stick types and manufacturers. Although this player should support most of these memory devices, it is impossible to guarantee compatibility with ALL memory card and USB drives.

Loading a USB Stick Drive or Memory Card

1. If you have a USB memory stick drive, plug it into the USB port [16] found on the front of the player.



If you feel resistance when plugging your USB drive in, stop! Turn it over and try again. The USB port accepts drives in one position only.

2. If you have a memory card, insert it into the memory card slot [18] found on the front of the player. The gold contacts should face down when inserting the card.



If you feel resistance when inserting a card, stop! Make sure the label is facing up and try again. The card slot accepts memory cards in one position only.

3. Set the FUNCTION switch [2] to the USB/CARD position. The player will attempt to read all the compatible files on your memory device, then playback will start automatically from the first track.



The player will always try to read the USB drive first. If no USB drive is installed, it will try to read the memory card next.

4. To switch between the USB player and the memory card player, press STOP [11] to stop playback, and then press the USB/CARD key [6].



The USB/CARD key will not work during playback.

Playing Music from USB and Memory Cards

Using the USB/CARD player is the same as using the CD player. To learn how use the player's controls, please refer to the "Using the CD/MP3 Player" section of this manual ("Playing a Disc," "Repeat, Random, and Intro Playback," Repeat Album Playback (MP3, USB Card only)," "Programming a Playlist").

Warnings and Precautions

	CAUTION WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of significant magnitude to constitute risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

CLASS 1 LASER PRODUCT CLASS 1 LASER PRODUCT APPAREIL LASER DE CLASSE 1 PRODUCTO LASER DE CLASE 1	CAUTION INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM	
This product contains a low power laser device.		

On Protection Against Laser Energy Exposure

- As the laser beam used in this product is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the disc compartment door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment, and unplug the AC-DC adapter from the wall outlet. Make it a practice to remove the AC-DC adapter by grasping the main body and not by pulling the cord.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- Invisible laser radiation when open and interlock has failed or been defeated. Avoid direct exposure to beam.
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Important Safety Information


1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing



the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.

10. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
11. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
13. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
14. **Outdoor Antenna Grounding:** If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA70 provides information with regard to proper grounding of the mast and support-

ing structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

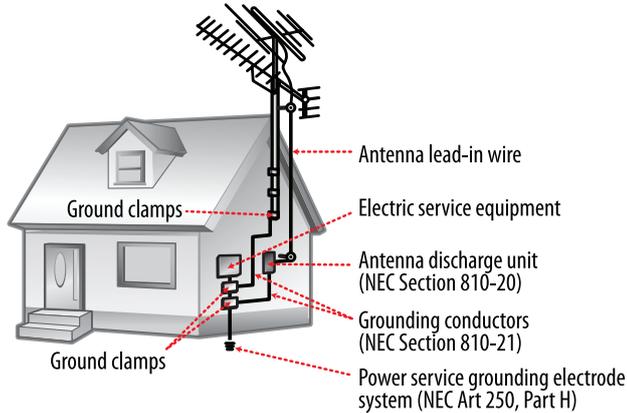

15. **Lightning:** For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
16. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

17. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
21. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
22. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.

23. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

WARNING

This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. ***Wash hands after handling.***

CAUTION

This product is equipped with a polarized plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

NEC NATIONAL ELECTRICAL CODE

Do not apply oil or petroleum products to this product.

GRAPHIC SYMBOLS WITH SUPPLEMENTARY MARKINGS ARE LOCATED ON THE BOTTOM OF THE UNIT. USE OF ANY CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE HEREIN SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Specifications

Power requirements	AC 120 V ~60 Hz DC 12 V (8 x UM-2 “C” batteries)
Power consumption	13 W
Weight	3.92 lbs
Dimensions	13.9 x 8.9 x 5.4 in (LWH)
Media Support	CD, CD-R/RW, USB, SD, MMC
Media Formats	CD-audio, MP3
Receiving Bands	AM, FM
Tuning Range	AM 530 – 1700 KHz FM 88.0 – 108.0 MHz
Audio output	Max 3 W x 2 (6 W total)
Input	3.5mm AUX audio
Output	3.5mm headphone

Note: Product are improved continuously. We reserve the right to modify the product and specifications without prior notice.

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

NAXA Technical Support

2320 East 49th St.
Vernon, CA 90058

http://www.naxa.com/naxa_support/

