


BALTRA®

MIXER GRINDER

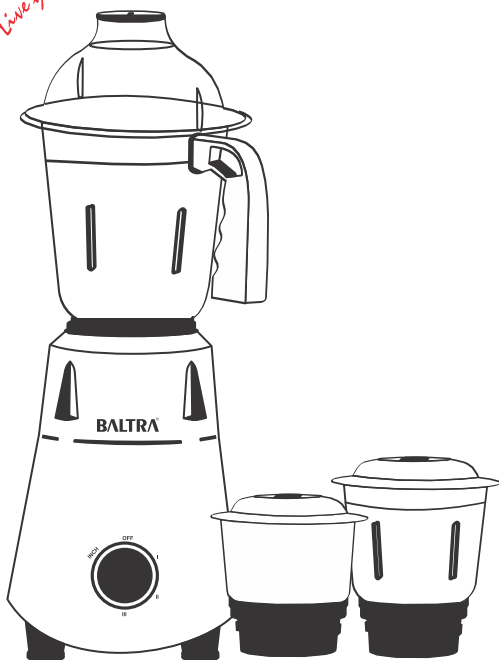

Live your home...



User's Manual Cum Warranty Card

Dear Customer


*It has been immense pleasure to serve you with our product
and we thank you for choosing **BALTRA®** for your use*

*Kindly go through the Instruction Manual carefully and before
using the product to enjoy a hassle free operation for the same*

Balra Home Appliances

PARTS DESCRIPTION

1. Liquidizer Lid / Dome
2. Liquidizing Jar
3. Chutney Jar Lid
4. Chutney Jar
5. Dry Grinding Jar
6. Dry Grinding Jar Lid
7. Speed Knob
8. Main Unit
9. Jar handle
10. Body Base
11. Jar Socket

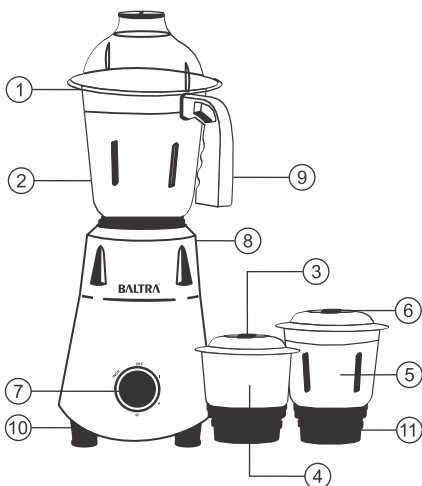

The Product features and accessories may vary on the basis of product Purchased by the Customer.
The Company have full Rights to Change any Specification without any Prior notice.

ACCESSORIES

Mixer Grinder - 3 Jars: • One Liquidizer • One Dry Grinding Jar • One Chutney

Mixer Grinder - 2 Jars: • One Liquidizer • One Chutney

USING THE **BALTRA®** MIXER GRINDER

Place your **BALTRA®** Mixer grinder on a flat surface at a convenient height so that you can operate it easily. To prevent rotation of jars there are two locking slots on top of the motor unit. Please ensure that your jars are locked in the wedges properly before operating.

BLENDING AND LIQUIDIZING

Place the liquidizer jar on the motor unit and then turn clockwise to lock in the top body socket for blending and liquidizing for fruit juices, soups, cocktails, milk shakes with fresh fruits.

WHIPPING

Lock the liquidizer jar as above to the motor unit. Use the pulse switch for whipping lassi, frothy milk shakes, frothy hot & cold coffee, fluffy omelette, stiff egg whites, fresh cream & also butter churning & mayonnaise.

TECHNICAL CHARACTERISTICS

01	Rated Voltage	230 V – AC Only – 50 Hz (Single Phase)			
02.	Type	Domestic Electric Food Mixer (Liquidizer & Grinder)			Domestic Electric Food Mixer (Liquidizer, Grinder & Juicer)
03	Input	450 W	550 W	750 W	500 W
04	Rating	15 minutes (3 Minutes ON / 2 Minutes OFF)			
05	Protection	Class - II	Class - I/Class - II	Class - I/Class - II	Class - II
06	Insulation	Class 'H'	Class 'H'	Class 'H'	Class 'H'
07	Capacity				
a.	Liquidizer	0.75 litre	1.0 litre		0.75 litre

Note : This mixer is not suitable for Egg Whisking Test

DRY GRINDING

Make sure that the dry grinding jar is absolutely clean and dry before use. Place & fix the jar to the motor as above.

Dry grind roasted coffee, red chilli, pepper, raw rice, bajra (millet), dhania (coriander), wheat for porridge, chana dal (gram) etc.

WET GRINDING CHUTNEY

Place and fix the chutney jar to the motor unit as above.

Chutney of coconut, coriander leaves, mint, green chilies, ginger, garlic & spinach paste etc. can be made. The chutney jar can also be used for dry grinding for small quantities.

OVERLOAD PROTECTOR

Your BALTRA mixer grinder is protected against sudden overloads.

If Such a situation occurs the mixer grinder will automatically trip off and hence protect the motor. The machine can be restarted after waiting for 2-3 minutes. The red button of the overload protector switch located at the bottom of the mixer grinder has to be pressed for reoperation.

CLEANING

Fill about half the jars with lukewarm water, a little mild detergent & cover the Lid. Place the jars along with the blades on the motor unit & run at the lowest speed for about 30 seconds. This clears out the particles from under the blade. All the jars can be cleaned by the same method. The blades, jar lids & the inner portion of the jars can be cleaned in running water.

USEFUL HINTS

- Keep Your Baltra Mixer Grinder Away from Direct Sunlight.
- After 3 min. continuous use, allow 2 min. rest before next use.
- Never immerse the motor unit in water, Clean the body with a soft damp cloth.
- Always dry with the soft clean clothes. Never use abrasive powders.
- Never use boiling liquids.

Never run the mixer grinder without any load.

The Lid of the Jars Should be Properly Locked, Otherwise the Mixer grinder will not work.

SAFETY RECOMMENDATION

Check the mains lead from time to time whether its damaged or not. If it is damaged, The mixer grinder must not be used (check before using it) until the mains lead has been replaced. Only **BALTRA**® authorised technicians may carry out repair and adjustment Take your mixer grinder to your nearest dealer of **BALTRA**® or to nearest Authorised Service Center.

Read carefully the instructions before use. Any use, which does not conform to these instructions, will absolve **BALTRA**® from all liability. Never leave the **BALTRA**® mixer grinder (whether or not it is in use) within reach of children without supervision. The use of this mixer grinder by handicapped and aged persons must only occur under supervision.

Check that the voltage rating of your mixer grinder corresponds to that of your electrical system.

Any connection error will invalidate the warranty.

Never use your mixer grinder if it is not working correctly or if it has been damaged. For your own safety, use only **BALTRA**® accessories and spare parts, which are suitable for your mixer grinder.



SAFETY RECOMMENDATION

Only qualified person may carry out repairs and adjustments of a technical nature. In the event of malfunction, contact your retailer or your nearest **BALTRA®** Authorised Service Center.

ATTENTION

Unauthorised Repairs & Adjustments will Lead to the Loss of the warranty claim.