 


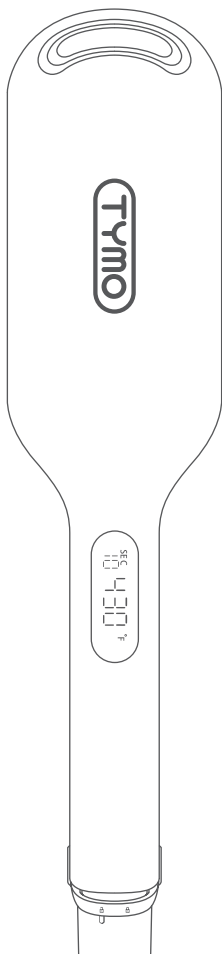

ROVY
WAVE CURLING IRON

USER MANUAL

✉ csteam@tymo-tech.com



Thank you for choosing TYMO ROVY Wave Curling Iron, Please read this user manual carefully before you start.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

THESE WARNINGS APPLY TO THE APPLIANCE, AND ALSO WHERE APPLICABLE TO ALL TOOLS, ACCESSORIES, CHARGERS OR MAINS ADAPTERS. TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off:

To reduce the risk of death by electric shock:

1. Do not use while bathing.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. If an appliance falls into water, 'unplug it' immediately. Do not reach into the water.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons, follow these precautions.

5. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
6. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
7. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
8. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.

9. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
10. Never use while sleeping.
11. If your appliance cuts out, unplug it from the mains supply socket and leave to cool.
12. Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
13. Do not use the appliance for any other purpose than curling hair.
14. This appliance is hot when in use. Do not let eyes and bare skin touch heated surfaces.
15. Do not place the heated appliance directly on any surface while it is hot or plugged in.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.
18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
19. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
20. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
21. **WARNING** :Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



22. Do not use this device in a bathtub, shower, or water-filled reservoir.
23. Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
24. An appliance should never be left unattended when plugged in.
25. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
26. **Warning**: Be careful about burns because this device is high temperature.

27. Do not allow it to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
28. Do not use an extension cord with this appliance.
29. Do not handle any part of the plug or appliance with wet hands.
30. Do not use any lubricants, cleaning agents, polishes, or air fresheners on any part of the appliance.
31. Contact the TYMO Customer Services Team when a service or repair is required. Do not disassemble the appliance as incorrect reassembly may result in an electric shock or fire.
32. When the appliance has been unpacked, check it if it has transport damage and ensure that all parts have been delivered. If parts are missing or the appliance has been damaged, please email the TYMO Customer Services Team.
33. If the appliance does not work, or is not working properly, please email the TYMO Customer Services Team. DO NOT attempt to repair the appliance. Repair work by the unqualified persons can cause serious risk to the user and will void the warranty.
34. ~The symbol indicates Ac voltage.
35.  The symbol indicates Class II equipment.



RECYCLING

This product bears the selective electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU to be recycled or dismantled to minimize its impact on the environment. The user has the choice to give their product to a competent recycling organization or to the retailer when they buy new electrical or electronic equipment.

This product can be used across EU member states.

SAVE THESE INSTRUCTIONS


SPECIFICATIONS

Product Description: Wave Curling Iron
Model No.: HC507/HC507B/HC507P/HC507W/HC507G/HC507N/HC507PS
Power Supply: 100-240V-50/60Hz
Power: 132W
Heating Method: PTC Heating
Heating Temperature : 280°F-430°F (140°C-220°C)

PACKAGING LIST

Packaging List	Quantity
TYMO ROVY Wave Curling Iron	1

 PRODUCT OVERVIEW

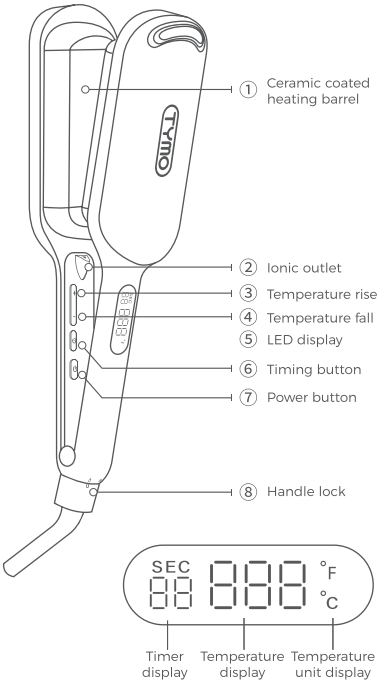


HOW TO USE

1. Wash and dry your hair, comb your hair thoroughly (Other than heat protect-ant for hair,do not use any spray, styling agent or other inflammable chemical hair-care products), then wrap a towel around your neck to avoid possible skin scalding.
2. Insert the plug into a power socket. The LED display will display 'OFF' with a flashing light. Press the 'Power button' for 2 seconds to start the appliance.
3. Press the 'Temperature rise' or 'Temperature fall' to choose levels according to different hair types. After heating to the set temperature, the LED temperature display will show the temperature level.
4. Press and hold both 'temperature rise' and 'temperature fall' for 1-2 seconds, to convert between °F and °C.
5. Press the 'Timing button' to select a different styling reminder time, the first working time of the product is set to 6 seconds. Press the 'Timing button' for 2 seconds to turn on or off the timer reminder function.
6. Press and hold the 'Power button' for 2 seconds to turn off the appliance after using.


• Handle lock

* When the product is not in use, the handle lock can be rotated to keep the product in a closed state for easy storage.

 Rotate it to the left to open the handle lock and to the right to close it.

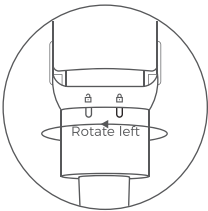

• Unlock

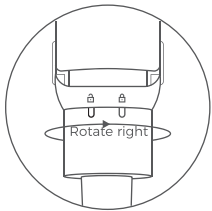 

• lock

 
* There will be a prompt sound under the situations below:

1. Turn on/off the appliance.
2. Reach the styling set time.
3. Reach the temperature level that has already set.

TO CREATE DEEP WAVES

1. Hair should be clean and completely dry before using the styling iron.
2. Start with a section of hair that is 2 inches wide and place hair in between barrels.

3. Starting at the scalp, lightly clamp, moving toward the ends of your hair.
4. Hold the styler 4-10 seconds prior to releasing and sliding down.
5. This process requires some overlapping to create waves in the hair. Repeat the process until you have achieved the look you desire. Some experience is necessary when learning to use this styler. After using the styler several times, you will learn the ideal way to style your hair easily.

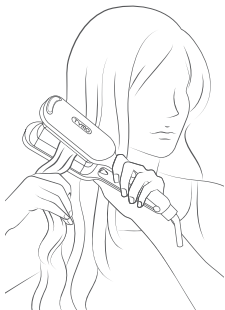

Temperature Setting

- 140°C-150°C/280°F -300°F : Soft and thin hair
- 160°C-170°C/320°F -340°F : Thin, fine or bleached hair
- 180°C-190°C/360°F -370°F : Dyed or Dark colored hair
- 200°C-210°C/390°F -410°F : Normal or Slightly curly hair
- 220°C/430°F : Thick, curly and wavy hair

△ NOTE

- Negative ions are on by default when the appliance is working.
- The appliance has intelligent features of high efficiency and energy saving. After 30 minutes working, it will be switched off automatically. If it is put into use again, you can press the 'Power button' to restart the appliance.
- The appliance has user friendly features of auto-memory. The last power level setting and styling set time will be remembered in next use.
- While using the appliance, your hair should be dry, otherwise, it may fail to reach the styling effect or desired result.

Styling time reminder

Set the styling time that suits your hair type to prevent hair from damaging.

Anti-scald design

Fully wrapped plastic design effectively reduces the risk of scald.

W-shaped structure

Style more hairs at a time for deeper waver.

Worldwide Use

The appliance is designed with the universal voltage of 100-240V AC, which allows you to use it in any countries within this voltage range. A correctly specified travel adapter is required for traveling (not supplied).

CAUTION

- When the appliance is used for the first time, slight burned smell or little mist may be produced, which is from remaining test material on metal parts of the appliance and will disappear in a few seconds.
- It is a normal condition, please feel free to use it. If the temperature is set too high, it will take the risk of burning hair!
- You shall choose the suitable temperature and use the appliance properly according to your hair condition, otherwise, it may make your hair dry or even scald.

MAINTENANCE INSTRUCTIONS

- This appliance is virtually maintenance-free. It contains no serviceable parts.
- Keep free of dust and dirt by wiping with a dry cloth when unplugged and cool.
- Before storing in a safe, dry location, allow appliance to cool.
- Do not wrap the cord around the appliance. If cord becomes twisted, untwist prior to use.
- Do not attempt to repair appliance.
- This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
- Do not attempt to defeat this safety feature.

STORAGE

- Allow the appliance to cool before storing.
- When not in use, disconnect the appliance and store in a safe, dry location. Keep out of the reach of children. Do not wrap the cord around the appliance.
- Fold the cord in the same way as it was first delivered in its packaging.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY

The product warranty is governed by regulations in force and applied upon showing the original legible purchase receipt complete of all its parts. For support service under warranty, please take the original purchase receipt to the store where the product was purchased.

Membership Registration
- Go Online NOW!



SCAN TO JOIN



PROFESSIONAL HAIR STYLER



 tymobeauty.com



 [Instagram](#)



 [TikTok](#)

 tymobeauty.com

 csteam@tymo-tech.com

R0104