

BRABANTIA 5.5L AIR FRYER

Instruction Manual
BBEK1131



www.brabantia.com/electrical-appliances

 **brabantia**



THANK YOU FOR PURCHASING OUR 5.5L AIR FRYER

We hope it will delight you and that it
will get a special place in your home.
Enjoy!

IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including but not limited to the following:

1. Do not immerse the housing in water or rinse under the tap due to the electronic and heating components.
2. Avoid any liquid entering the appliance to prevent electric shock or short-circuit.
3. Keep all food ingredients in the basket to prevent any contact from the heating elements.
4. Do not cover the air inlet or the air outlet when the appliance is operating.
5. Do not fill the pan with oil. Filling the pan with oil may cause a fire hazard.
6. Do not touch the inside of the appliance while it is operating.
7. Check if the voltage indicated on the appliance fits the local mains voltage.
8. Never let the power cord hang over the edge of a counter or table or touch hot surfaces.
9. Keep the appliance and its mains cord out of the reach of children.
10. Keep the mains cord away from hot surfaces.
11. Do not connect appliance to an external timer switch.
12. Do not place the appliance on or near combustible materials such as a tablecloth or curtain.
13. Do not place the appliance against a wall or against other appliances. Leave at least 10cm free space on the back and sides and 10cm free space above the appliance.
14. Do not place anything on top of the appliance.
15. Do not use the appliance for any other purpose than described in this manual.
16. Do not operate the appliance unattended.
17. During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
18. Be careful of hot steam and air when you remove the pan from the appliance.
19. If you see dark smoke coming out of the appliance, immediately unplug the Air Fryer and wait for the smoke emission to stop before you remove the pan from the appliance.
20. Ensure the appliance is placed on a horizontal, even and stable surface.
21. The use of accessories is not recommended by the appliance manufacturer as it may cause injuries.
22. This appliance is designed for household use only. It may not be suitable to be safely used in environments such as staff kitchens, farms, motels, and other non-residential environments.
23. Always unplug the appliance while not using.
24. The appliance needs approximately 30 minutes to cool before handling or cleaning safely.

25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
26. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person to avoid a hazard.
27. Young children should be supervised to ensure that they do not play with the appliance.
28. Appliance not intended to be operated by means of an external timer or separate remote-control system.
29. Do not use the Air Fryer outside.

DO NOT THROW AWAY INSTRUCTIONS

CAUTION: Do not leave Air Fryer unattended when in operation. To reduce the risk of fire, keep oven interior completely clean and free of food residue, oil, grease and any other combustible materials.

CAUTION: A fire may occur if the Air Fryer is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the Air Fryer, on top of the Air Fryer, or in contact with the Air Fryer sides or bottom surfaces: paper, cardboard, plastic or the like.

SAVE THESE INSTRUCTIONS

 
 
THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLD AND SIMILAR APPLICATIONS SUCH AS: STAFF KITCHEN AREAS IN SHOPS, OFFICES AND OTHER WORKING ENVIRONMENTS.

FARMHOUSES. BY CLIENTS IN HOTELS, MOTELS, AND OTHER RESIDENTIAL TYPE ENVIRONMENTS; BED & BREAKFAST TYPE ENVIRONMENTS

FOR HOUSEHOLD USE ONLY

NOT INTENDED FOR COMMERCIAL USE

KNOW YOUR AIR FRYER

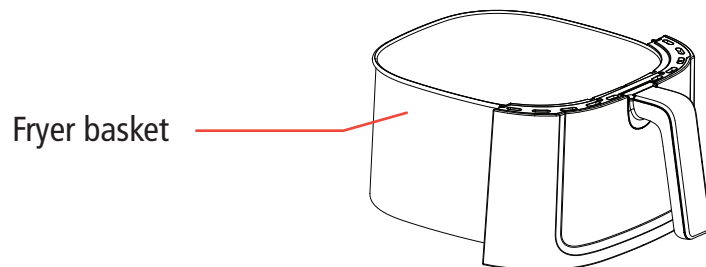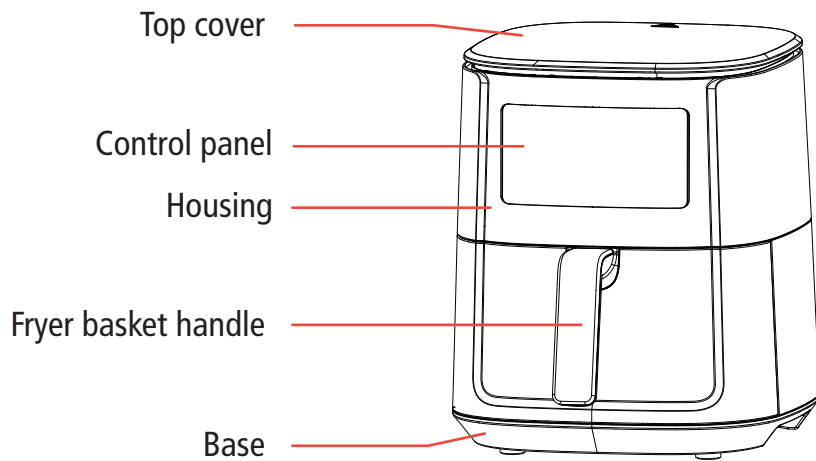

BEFORE FIRST USE

1. Remove all packaging materials and stickers or labels.
2. Clean the basket and pan with in warm, soapy water, then rinse and dry thoroughly. Do not immerse the main unit in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean Air Fryer or its accessories, as this could cause damage.
3. Wipe inside and outside of the appliance with a soft, damp cloth and dry thoroughly.
4. Place the appliance on a stable, horizontal and even surface.

 
Warning: Do not place the appliance on non-heat-resistant surface.

Note: When using the Air Fryer for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside.


OPERATING INSTRUCTIONS

Preparation

1. The product should be stably placed on a flat table (Figure 1), so that the power cord has a sufficient length to be plugged into the socket and the air circulation around the product should be maintained, and it should not be close to combustible materials.

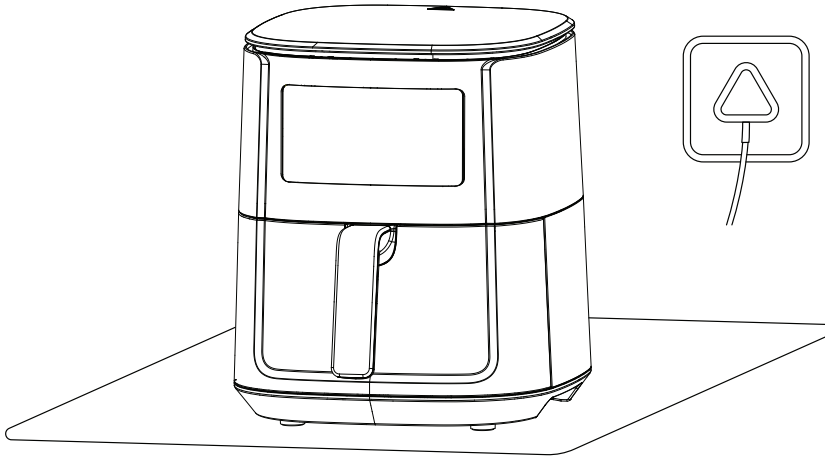

 2. Before use, put the fry basket pad into the bottom of the fry basket (Figure 2).

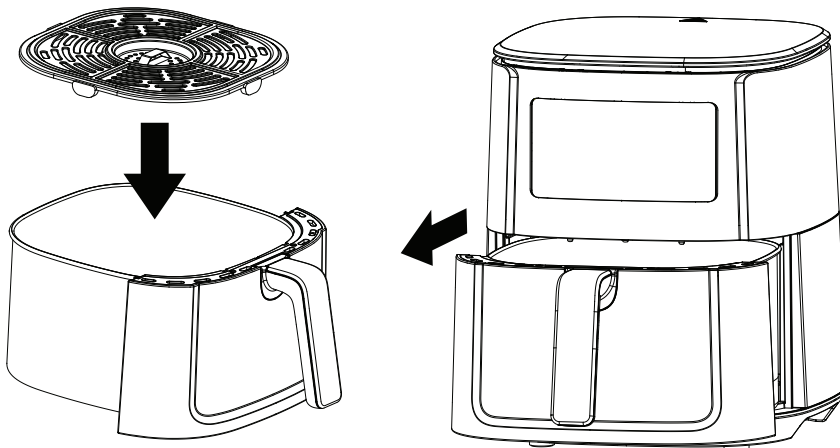

INSTRUCTIONS FOR CONTROL PANEL



Button-Switch

After the product is plugged in, the machine emits a beep, the LED light on the product panel is always on for one second, and then goes out, the light  flashes and the product enters the shutdown state. Press the button , the function key LED light is always on,  the light flashes, the digital screen displays "-- / 180°C", the machine enters the standby state. Press  to select function mode, press the , the machine starts to work, and  the light is always on. Press the button  again, the machine stops working and the light  flashes. When the product is working or in standby mode, long press the button  for 1.5 seconds, the machine stops working, and the light  flashes.

Button-Menu

In the product standby state, press the function selection key , it enters the defrost mode and starts working. Or each time the function selection key is pressed, the working mode is switched cyclically, the corresponding mode light flashes, the 6 menu mode already contains the default temperature and time, after selecting the function mode, press the key  again, the original flashing state becomes constant light, the machine starts to work.

Attention:

1. In order to achieve better food performance, the machine must be preheated before placing the ingredients: plug in, press  twice to automatically preheat, and the buzzer will sound 5 times when the temperature of the machine reaches 180°C, indicating preheating finish.

2. If a menu mode is selected and the product does not touch any function key, the selected function key and the  will flash. Under working conditions, touch the  key to stop the machine
3. You can also manually change the default temperature and time of the menu mode according to different ingredients

The corresponding time and temperature of the 6 menu modes are as follows:

Mode	Default temperature (°C)	Default time (min)	Minimum temperature (°C)	Maximum temperature (°C)	Minimum time (min)	Maximum time (min)
Defrost 	80	20	40	200	1	60
French fries 	180	18	40	200	1	60
Fried chicken 	200	25	40	200	1	60
Grilled shrimp 	160	18	40	200	1	60
Roast 	180	20	40	200	1	60
Grilled fish 	200	18	40	200	1	60

TIME/TEMPERATURE SETTINGS



Button-Time setting

Touch the TIME key, the display shows "--" flashing, enter the time setting, touch the "+" key, time +1; touch the "-" key, time -1; time can be adjusted between 1-60, if 10 seconds. If there is no operation, it will automatically exit the time setting; by default, touch the "+" / "-" key to enter the time setting state.

Button-Temperature Setting

Touch the TEMP key, the display shows 180°C flashing, enter the temperature setting, touch the "+" key, the temperature +5; touch the "-" key, the temperature -5; the temperature can be adjusted between 40-200, if 10 seconds. If there is no operation, it will automatically exit the temperature setting; press and hold the TEMP key for 3 seconds to switch between Celsius and Fahrenheit.

Display-Menu mode

6 default menus can be arbitrarily selected in menu mode: Defrost, French fries, Fried chicken, Grilled Shrimp, Roast, Grilled fish.

Display-Temperature and Time Screen

In standby mode, the display shows "--/180"; when using the preheated function, when the temperature does not reach the set temperature, the temperature marquee shows, the machine starts to work, and the display shows "END" when the temperature reaches the set temperature. When using the menu mode, the display shows the set temperature and time; when the machine stops working, the display shows "END"; when the basket handle is pulled out or not in place, the display time pauses and flashes.

During work, touch the POWER button to exit the working mode, the fan will stop working after 60 seconds of delay, and enter the standby state;

- After the fry basket is pulled out, the machine memorize the working menu mode before, the working time remain unchanged, the fan stop rotating, and enter the memory mode
- The working time is automatically reduced to zero, the fan stops working after 60 seconds of delay, and enters the standby mode, and LED shows "END"

Attention:

The following conditions must be met to enter the working mode:

- The basket must be in place
- The following conditions will exit the working mode
- During work, touch the POWER button to exit the working mode, the fan will stop working after 60 seconds of delay, and enter the standby state
- After the fry basket is pulled out, the machine memorises the working menu mode before, the working time remain unchanged, the fan stops rotating and enters the memory mode;
- The working time is automatically reduced to zero, the fan stops working after 60 seconds of delay, and enters the standby mode.

After use, unplug the power plug and wait for the Air Fryer to cool down before moving the product.

 
PRODUCT FEATURES

This product is an electronic time-controlled Air Fryer, suitable for home cooking. Used for baking food, it has the advantages of exquisite design, multiple functions, fast speed and convenient use.


1. Cooking with less oil, healthy and worry-free.
2. Digital display at a glance.
3. Touch control, simple operation.
4. Three-dimensional air duct with uniform thermal field.

HOW TO USE

1. Hold the handle of the fry basket with your hand, pull the fry basket out, and place the fry basket on a flat table.

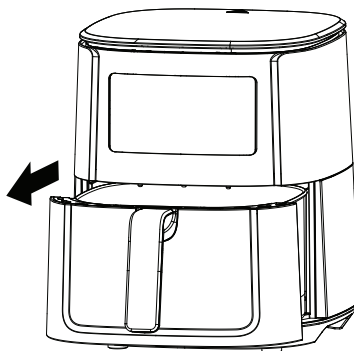

2. Put the ingredients in the basket.


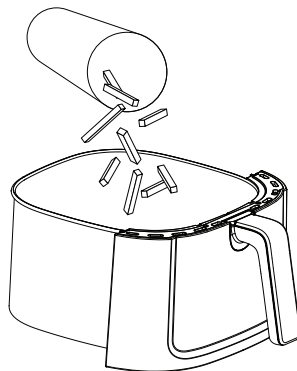


3. Then put it in the Air Fryer.
4. Plug the power cord into the socket.
5. Adjust to the right time and temperature through the control panel.



6. When the food is cooked, unplug it. Carefully take out the fry bucket, hold the handle of the fry basket, pull it straight out, and lay it flat on the table; then take out the baked food.

Please handle it carefully, remember to lay it flat on the table to avoid being burned by steam or dumped by the fry bucket, or burned by oil or hot food

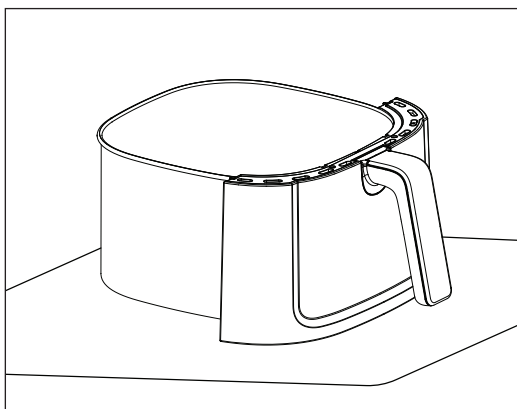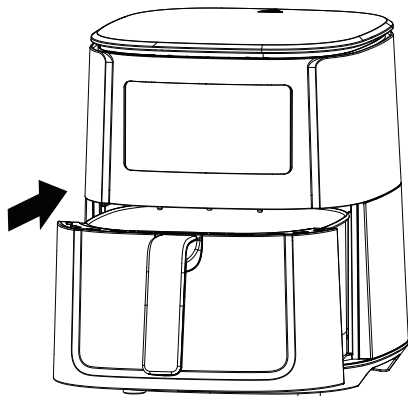

TROUBLESHOOTING

No.	Fault	Causes	Exclusion method
1	No power	The power plug is not inserted in place	Reconnect or find another socket
2		The fry basket is not in place	Pull out the frying basket again returned to the house, assembly in place
3	The motor does not work or there is abnormal noise	Foreign objects are stuck in the fan blades or the air inlet is blocked	Check the air inlet and cavity after power off, If there is foreign matter inside, if there is still a fault, please contact the retailer you purchased this product from or the New Zealand Brabantia Agent toll free number 0800 127 727.

SAFETY PRECAUTIONS:

In order to ensure safe use and avoid injury and property damage to you and others, please follow the safety precautions below. Failure to follow safety warnings and misuse can cause accidents.

Warning

- It is strictly forbidden to put the product near flammable materials, please pay attention to curtains, fabric curtains, curtain walls or similar items to prevent fire.
- When using this product do not put your hands or face close to the vents to avoid burns. Do not cover the vents with cloth, etc., to avoid accidents or damage to the product.
- Do not attempt to fix this product yourself. Only certified technicians can carry out decomposition and maintenance to avoid fire, electric shock, or injury.
- Only use AC 220V to avoid fire and electric shock.
- Do not use if power cord plug or cord body is damaged.
- Do not operate if the power cord is strongly bent, close to high temperature, tied up or damaged in any way as it may cause fire and electric shock.
- Do not pull the plug with wet hands to avoid electric shock or injury.
- Do not move or shake the product during use.
- Do not let children operate alone, put it in a place where infants and young children cannot touch to avoid dangerous accidents such as electric shock and burns.
- Do not insert pins, wires or other objects into the vent hole at the bottom of the product to avoid electric shock.
- Do not immerse the unit housing in water or drench in water.
- If there are dust or water marks on the power cord plug, plug and product socket, please clean it in time to avoid fire, electric shock or short circuit.
- For product repairs or replacement parts, contact the retailer you purchased this product from or the New Zealand Brabantia Agent toll free number 0800 127 727.
- The plug must be inserted into the socket thoroughly to avoid fire, electric shock, short circuit.
- If the power cord is damaged, to avoid danger, it must be replaced by a manufacturer or a certified electrician.
- This product cannot be connected to an external timer or remote-control system for operation.
- Do not put the following items into the product for baking, such as: paper, plastic or flammable products.
- There should be enough space around the product, with a distance of more than 20 cm from other items, and the surface should not be covered by any items.
- This product is limited to indoor use.

- Note: Some important components, such as fuses and other improper or unauthorized repairs may cause short circuit protection product failure, resulting in overheating or fire.
- The product must be used on a stable, heat-resistant table to avoid product damage or accidents.
- When using the product, only touch the specified operation interface to prevent burns.
- The product cannot be operated without fry basket.
- When the product is not in use, please be sure to unplug the power cord.
- While cooking, do not cover the vents with hands or cloth, curtains etc. to avoid accidents or damage to the product.
- While cooking, do not put your hands or face close to the vents to avoid burns.

SAFETY CARE WHEN COOKING

Please read the following and always use caution when cooking as food can become extremely hot and may cause a hazard.

1. Children should not use the Air Fryer without supervision as it is an electrical appliance and can cause a hazard with extreme high temperatures.
2. Always carefully follow the manufacturer's instruction manual.
3. Use oven gloves to remove food the Air Fryer.

CARE & CLEANING

- Unplug your Air Fryer and allow it to completely cool before cleaning.
- Do not use abrasive cleaners, as they will damage the finish. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Apply the cleaning agent to a cloth, not directly onto the Air Fryer.
- Please do not use cloth that is too wet to clean the Air Fryer to prevent water from entering the Air Fryer, which may cause short circuit and fire.
- Do not use excess pressure when cleaning the area of the control panel as it could cause damage.
- To clean the interior walls, use a damp soapy cloth or sponge. Never use harsh abrasives or corrosive products including oven cleaner sprays. These could damage the Air Fryer surface. Never use steel wool pads on the Air Fryer or accessories.
- The Air Fryer Basket and Fry Basket Pad should be hand-washed in hot, sudsy water. These parts are not dishwasher safe.
- Always clean the Fry Basket Pad after each use. Excess food particles could cause smoking and will be hard to remove from tray. To remove baked-on grease or burnt food particles you can soak the Fry Basket Pad in hot, sudsy water or use nonabrasive cleaners.

Persons with pacemakers, hearing aids, or cochlear implant users, please consult authorized medical personnel and refer to the instructions of the medical device provider.

NOTE: Do not use any abrasive material or sharp utensils to clean the oven or any of its parts.

NOTE: Allow all parts and surfaces to dry thoroughly before using the appliance again.

SPECIFICATIONS

Rated voltage/ Frequency: 230-240V~50-60Hz

Rated power: 1700W

ENVIRONMENT FRIENDLY DISPOSAL



This marking indicates that this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material resources. To dispose of your appliance correctly, please contact or take it to your local refuse/recycling centre. Alternatively, contact your local council for information on your local re-use centre. Please make this product environmentally safe for recycling.



WARRANTY

THE WARRANTY WILL ONLY BE VALID IF THE PRODUCT IS RETURNED WITH A PROOF OF PURCHASE TILL SLIP AND ORIGINAL PACKAGING.

Warranty policy

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and not amount to a major failure.

The distributor for Brabantia products in Australia, Sheldon and Hammond Pty Ltd, guarantees this product or domestic use only. No warranty is provided for commercial use. Sheldon and Hammond does not provide warranty for items bought from overseas retailers or from parallel importers.

For all enquiries, please contact Sheldon and Hammond Pty Ltd on our toll-free number 1800 808 9 71.

Warranty exclusions:

The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
2. The product has been used for any purpose other than its intended function.
3. The damage or malfunction of the product is caused by any of the following:
 - Incorrect voltage
 - Accidents (including liquid or moisture damage)
 - Misuse or abuse of the product
 - Faulty or improper installation
 - Mains supply problems, including power spikes or lightning damage
 - Infestation by insects
 - Tampering or modification of the product by persons other than authorised service personnel
 - Exposure to abnormal corrosive materials
 - Insertion of foreign objects into the unit
 - Usage with accessories not pre-approved by Brabantia

Please refer to and heed all warnings and precautions in this Instruction Manual.

Due to continuous product development, specifications may be subject to change without prior notification.



Manufactured by SRB Pacific Limited under
exclusive licence of Brabantia Nederland B.V.

SRB Pacific Limited,
PO Box 113068, Newmarket,
Auckland 1149, New Zealand

PRODUCT INFORMATION

BBEK1131 5.5L AIR FRYER