




3+

Included Hardware: Matériel inclus :

 Seat Assembly
Assemblage du siège

 Base Assembly
Assemblage de la base

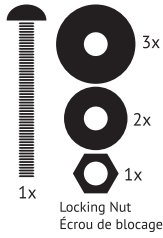 Boom Assembly
Assemblage de la flèche


Assembly Instructions

Adult assembly required.


CAUTION: Inspect for damage before and after use.

If damaged, do not use.

Product is designed and intended for use by one child at a time only. Parental supervision is recommended to prevent other child/person from getting too close while the Dig & Roll is in use.

Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water. Always wear shoes when using. Max weight of child using the Dig & Roll must not exceed 110 lbs.


- 1** Slide both pieces together and screw into place with washers as illustrated below. Then, tighten the hex nut onto the end of the screw.

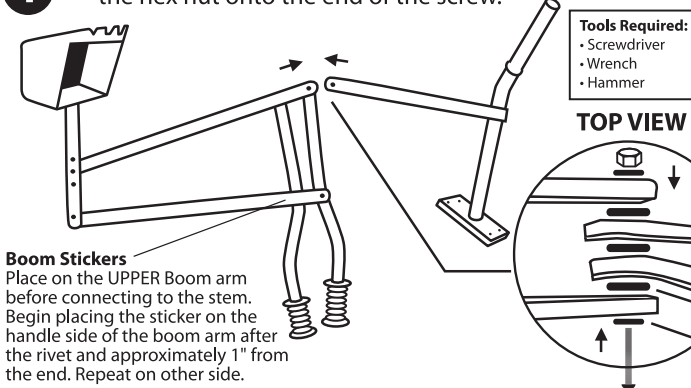


Boom Stickers

Place on the UPPER Boom arm before connecting to the stem. Begin placing the sticker on the handle side of the boom arm after the rivet and approximately 1" from the end. Repeat on other side.


- 2** Turn the Dig & Roll upside down and slide the seat onto the metal plate, making sure the plate is inside the grooves on the underside of the seat.

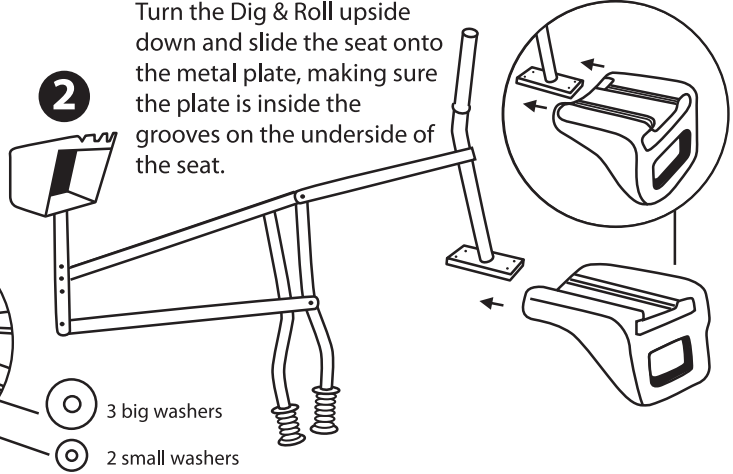


- 3** Slide a washer onto each of the four small screws and screw the plate firmly onto the seat.

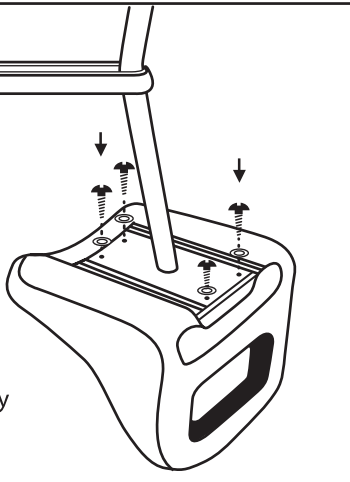


- 4** Leave the Dig & Roll upside down and fit the base onto the stem.

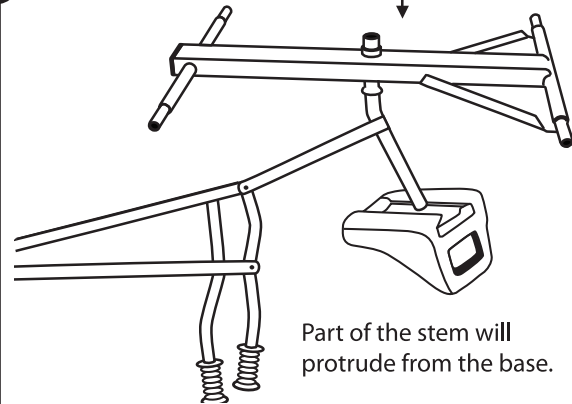

- 5** For easy assembly and disassembly, use Linchpin to connect stem to base. Open ring, insert linchpin through holes and close ring.

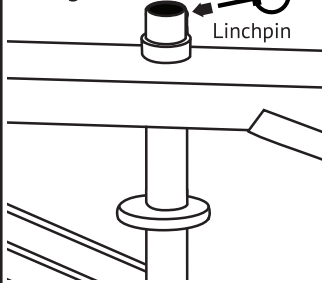

- 6** 1. Slide washer onto axle
2. Slide wheel onto axle
3. Slide another washer onto axle
4. Slide lock washer onto axle and tap plastic tube with hammer

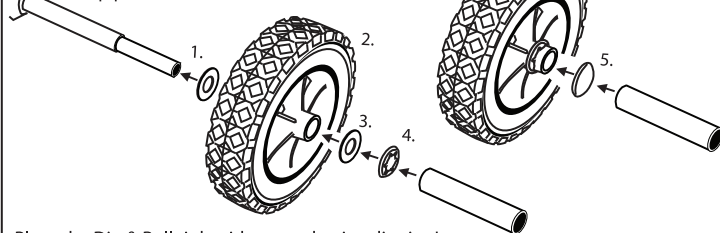

Place the Dig & Roll right side up and enjoy digging!

FOR BEST RESULTS: The Big Dig and Roll works best on level ground in sand, dirt or grass.

CAUTION: Skill is required to avoid falls or collisions causing injury to the user or third parties.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

WARNING: ADULT ASSEMBLY REQUIRED -
Unassembled toy contains parts that may have sharp points and sharp edges. Keep away from children under 8 years until fully assembled.

CAUTION: ADULT SUPERVISION RECOMMENDED.
As always read instructions before use.

AVERTISSEMENT :
RISQUE D'ÉTOUFFEMENT - Petites pièces.
Ne pas donner aux enfants de moins de 3 ans.

AVERTISSEMENT : ASSEMBLAGE À EFFECTUER PAR UN ADULTE -
Les morceaux à assembler peuvent contenir des bords tranchants et pointus. Garder hors de la portée des enfants de moins de trois ans avant que le montage ne soit complet.

ATTENTION : LA SURVEILLANCE D'UN ADULTE EST RECOMMANDÉE.
Comme toujours, veuillez lire les instructions avant l'utilisation.

Weight limit:
110 lbs.

Poids maximum :
110 livres / 49,8kg

How to operate:

Always keep both hands on the handle grips.
Never operate without enough clearance.
Do not operate around pets.

Storage & Maintenance:

Keep stored away from stairs or paths. Wash clean with damp cloth.

©2021 For Product and Packaging
BREYER ANIMAL CREATIONS®
Division of Reeves International, Inc.,
14 Industrial Road, Pequannock, NJ 07440 U.S.A.

Made and printed in China.

thebigdig.com

Missing Parts? Go to thebigdig.com
and use contact form