

TempPro




Cook Like A Pro Every Time!

Digital Instant Read Thermometer Instruction Manual

6016-V20211111 EN

Diagram

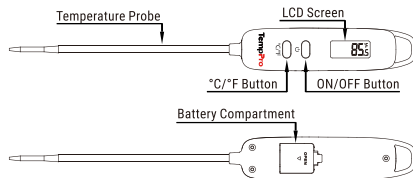

1. **LCD Screen:** Displays the current temperature.
2. **ON/OFF Button:** Press once to turn ON/OFF it. (Note: Remove the plastic film in the battery compartment when first use.).
3. **°C/°F Button:** Press the °C/°F Button to select which temperature unit to display.
4. **Temperature Probe:** Insert stainless steel temperature probe into food or meat to measure internal food/meat temperature.
5. **Battery Compartment:** Holds one LR44 (AG13) button battery to power the unit.

Specifications

1. Temperature Range: -58°F~-572°F(-50°C-300°C). If the temperature is below -58°F(-50°C) or above

- 572°F (300°C), LL.L or HH.H will show on the display.
2. 10-minute Auto-off feature
3. Resolution: 0.1°C/°F
4. Temperature Accuracy: $\pm 1.8^{\circ}\text{F}$ ($\pm 1^{\circ}\text{C}$) in range between 32 to 212°F (0 to 100°C)
6. Power Supply: 1×AG13 (1.5V)

Troubleshooting:

Won't Turn on

- Remove the plastic film in the battery compartment when first use.
- Try to replace battery AG13 (also named LR44).
- Check if the polarity (+) and (-) is in the correct direction.

How to Clean

Wipe the probe tip with a damp cloth or sponge and then dry it. Do not submerge it in water, it is not waterproof.

Inaccurate Reading

The sensor that detects the temperature is relatively small at the front end of the probe. It is recommended to insert the probe into the center of food when using it.

How to Use

1. Press the  button to turn on the thermometer.
2. Press the °C/°F button to select the temperature unit. Please note that the temperature unit will be saved based on your last selection when powering on the thermometer for your next use.
3. Insert the tip of the probe into the food being cooked. The thermometer will start to measure the internal food temperature.
4. Wait until temperature reading stabilizes on display.
5. Press ON/OFF button to turn off the thermometer. This thermometer also comes with auto-off feature: it will automatically turn off after 10 minutes of inactivity.

Care of Your Thermometer

- Do not place the unit in dishwasher or immerse in any liquid.
- Do not leave exposed to extreme high or low temperatures since this will damage electronic parts and plastics.
- Do not leave the thermometer inserted in food during cooking.

- Remove battery if stored for more than four months.

Warning

Do not ingest the battery, Chemical Burn Hazard, (The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

This appliance can be used by children aged from 8 years, Children shall not play with the appliance.

Disposal of the Electronic Appliance



This electronic appliance should not be disposed of with normal household waste. Dispose of the unit at an approved facility or at your local recycling center. Please observe the current rules and regulations

when disposing of the appliance. Contact your local council if in doubt.



CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Customer Service

Call or Text: +1(877)230-0040

Email: service@temppro.com

Hours: Weekdays 8:00 AM-8:00 PM EST(USA)