 
 


Candle LED Portable Lamp User's Manual

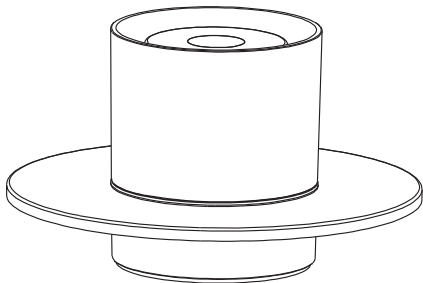 


Model No.: 1140003
Touch Control Version


Package Contents



Portable Lamp



User's Manual &
Warranty Card

 

USB Type-A to
Type-C Adapter Cable

Specifications

Name: Candle LED Portable Lamp

Input: DC5V 2A

Power: 1W

Materials: PMMA+ABS+Brass

Model: 1140003

CCT: 2400K (Warm White)

 
CRI(Ra): ≥ 90

Finish: Electroplated

Thank you for choosing LED portable lights. The lamp is made of high-quality LED and professional optical configuration, which can perfectly provide 2400K light to provide a comfortable lighting experience. A 4-level touch dimmer is applied to create an integrated product that is pleasant, decorative and functional.

Introduction

To ensure proper operation, please read the manual carefully before using this product. Please keep this manual in a safe place for future references.

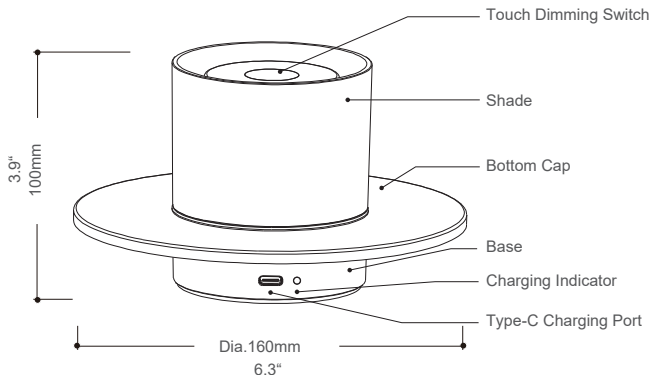



Instruction

It is recommended to charge the portable lamp for 3 hours before using the portable lamp, and then fully charge it with 100% power, so that it can work for 9 hours. To charge the product, please place a Type-C charging port on the base of the fixture, use the included USB Type-C to Type-A cable to plug it into the 5V 2A adapter (not included), and then plug it in Power outlet.

5V 2A mains port



USB Type-A to
Type-C Adapter Cable

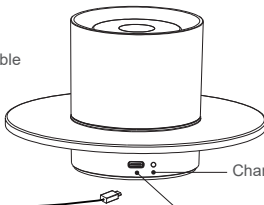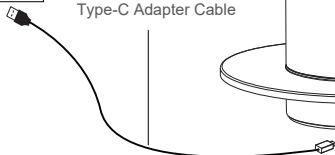

Charging Indicator

Type-C Charging Port

- Green light indicates full charged
- Red light indicates lamp is in charging

 
When the light blinks or the lamp is automatically turned off, please charge the lamp.
**Turn off the lamp before charging*

Dimming Instruction


Turn on the power switch at the bottom of the lamp, equipped with 4-level touch dimming function, so that users can freely adjust the lighting to suit their needs. To control the dimming of the lamp, lightly touch the button located on the top of the lampshade.

How to dim:


1. Turn on/5% Brightness
- ↓
2. 15%
- ↓
3. 50%
- ↓
4. 100%
- ↓
5. Turn off

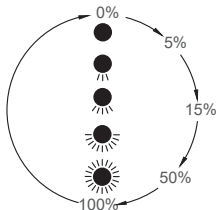

4-Stage Touch Dimming

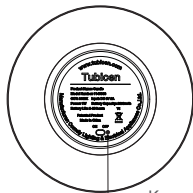 

Keep power switch off
when not in use

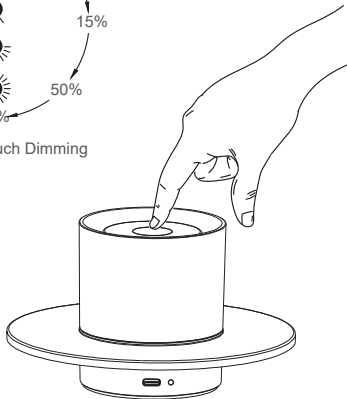 

Precautions

- * Please ensure that the working voltage of the light fixture corresponds to local voltage requirements. Using inappropriate voltage may cause damages to the product and bring hidden safety risks.
- * Do not discard the product as household waste. Please dispose of the discarded as electronic products in accordance with local laws and regulations.
- * Product should be kept in ambient temperatures, between -10°C~45°C
- * When the fixture has not been in use, please charge the battery every three months to avoid battery self-discharge and damage to the battery.
- * Wipe the fixture carefully and gently with a soft cotton cloth, to avoid surface scratches.
- * To clean the light fixture properly, please refrain from using abrasive or soluble cleansers, to avoid damaging or corroding the surface.