 


Contact our experts

support@ppllee.net

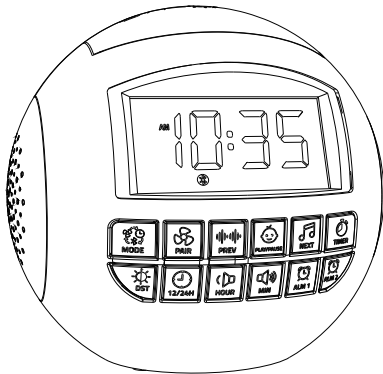

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2A6CL-CR1002

Bluetooth Referenced Qualified Design ID(s) : 79808

CR1002M


ALARM CLOCK & WHITE SOUND MACHINE
CREATE YOUR PERFECT SLEEP ENVIRONMENT

<https://www.ppllee.net>

CE FC RoHS Made in PRC

Version 1.0 (BT)

Chapter 1 PRODUCT DIAGRAM

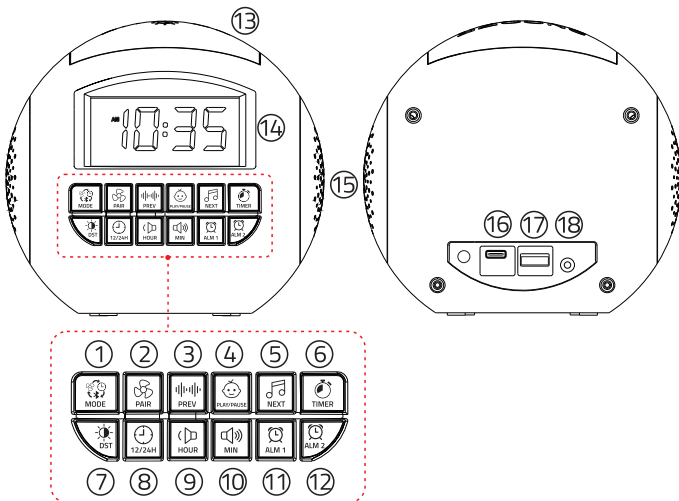

Buttons

1. Time/Noise Machine/Bluetooth ON/OFF
2. Fan Sound
3. White Noise Sound
4. Lullabies Sound
5. Other Sound
6. Timer Button
7. Dimmer & DST
8. Set Time Button / 12/24H
9. Hour & Volume Down
10. Minute & Volume Up
11. Alarm 1
12. Alarm 2

Parts

13. Snooze & Night Light
14. Display
15. Speaker
16. Type-C Charging Jack
17. USB Charging Jack
18. DC IN Jack Port

Chapter 2 WHITE SOUND SETTING


1. Press to turn on the sound machine.
2. Press to choose the sound type.
3. Short press the sound type button again to next sound
Long press the sound type button to previous sound.
4. Press to decrease the volume. Press to increase the volume.
5. Press again to turn off the sound machine.

4 Kinds of Sound/42 Soothing Sounds :






- | | |
|----------------|-----------------------|
| Fan Sound x 6 | White Noise Sound x 5 |
| Lullabies x 15 | Natural Sound x 16 |

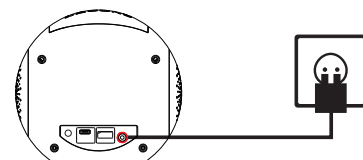Chapter 3 OUTLET POWERED & BATTERY BACKUP

1. Pull the insulator out of battery compartment to activate CR2032 backup battery.
NOTE: Backup battery(included) doesn't support time display , only support memorize Time & Alarm setting.
2. Connect the adapter to DC jack , then plug into a 100~240V AC wall power outlet.



Chapter 4 TIME SETTING

1. Press  button once, the display  starts flashing.
2. Press  button to set the hour, and press  button to set the minute.
3. Press  button to save time or wait for another 10 seconds to confirm automatically.


To change 12H/24H time format

Hold press  button to change 12H/24H time format.


Chapter 5 DST SWITCH

Hold press  button to active DST function, hold press it again to deactivate it.

Chapter 6 DIMMER

Repeatedly press  button to adjust the brightness of display to your preference.





Chapter 7 TIMER

Repeatedly press  button to adjust an optional timer to your preference: 15, 30, 60, 90, 120, 180, 480 minutes or continuous play.

- 03 -






Chapter 8 BLUETOOTH

CONNECTING & DISCONNECTING

1. Repeat  button until it's in Bluetooth mode.
2. Once in Bluetooth mode, the  icon will flash while searching for the last connected device.
4. Open your device and select CR1002M from the Bluetooth list to start pairing.
5. Once pairing is successful, the  indicator will stop flashing and a beep will sound from speaker.
6. Press  button to disconnect your device from CR1002M, a beep sound to confirm the device has been disconnected successfully. You can pair a new device now.













NOTE: If the Bluetooth connection fails, please disconnect the Bluetooth from the previous device and reconnect. When the machine has no sound, please adjust the machine and device volume.

PLAY OPERATION IN BLUETOOTH MODE

1. Repeat  or  button to adjust the volume.
2. Press  button to play or pause the music.
3. Press  button to play previous music, press  button to play the next music.








- 04 -

Chapter 9 ALARM SETTING

1. Hold press  button, the alarm indicator  will light up, the display  starts flickering.
2. Press  button to set hour, press  button to set minute. then press  button to confirm alarm time setting.
3. Press  or  to select to your preferred ringtone. then press  button to confirm your ringtone selection.
4. Press  or  button to adjust the alarm ring volume for your preference. then press  button or wait for 10 seconds to save alarm setting.




Setting ALARM2 is the same as ALARM1.

When alarm goes off

1. Press  button to temporarily turn off alarm for 9 minutes. Alarm will ring in every next 9 minutes.
2. Press  or  to turn off the alarm for 24 hours, the alarm indicator will still be on, alarm will be activated again after 24 hours.
3. To completely turn off the alarm, double press corresponding  or  button, and the indicator  or  will turn off.

- 05 -

Chapter 10 NIGHT LIGHT

1. Turn on NIGHT LIGHT
Press  button to turn on the night light.
2. Turn off NIGHT LIGHT
Hold Press  button for 2 seconds or press it repeatedly until the night light turns off.
3. Switch NIGHT LIGHT Color
When the night light turns on, press  button to switch to the color as you desired.
The night light colors and modes are as below: Gradient, Blue, Ice Blue, Green, White, Yellow, Red, Purple.

Chapter 11 CHARGING PORT

The sound machine has a USB and Type-C Port to charge your phone, tablet or other devices at the same time.

The maximum charge current is 1 Ampere.

- 06 -