 


Lifelong

KITCHEN

MAKING IT POSSIBLE

Oven Toaster Griller 23L

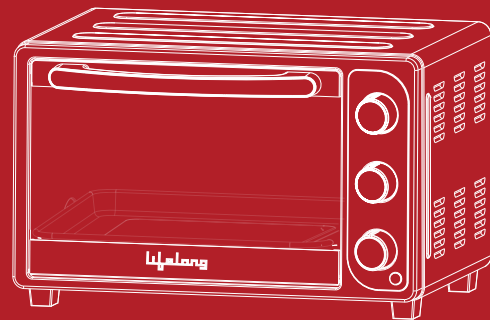

Auto
Timer
Shut



Variable
Thermostat
Settings



Cooking capability: Baking, Grilling, Toasting

 
**2 YEAR
WARRANTY**

Dear Customer

Congratulations on your Lifelong Purchase. Our name stands for high-quality and thoroughly tested products. This amazingly versatile home appliance will help reduce your kitchen drudgery.

Please read these instructions carefully before use.

NAME OF PARTS

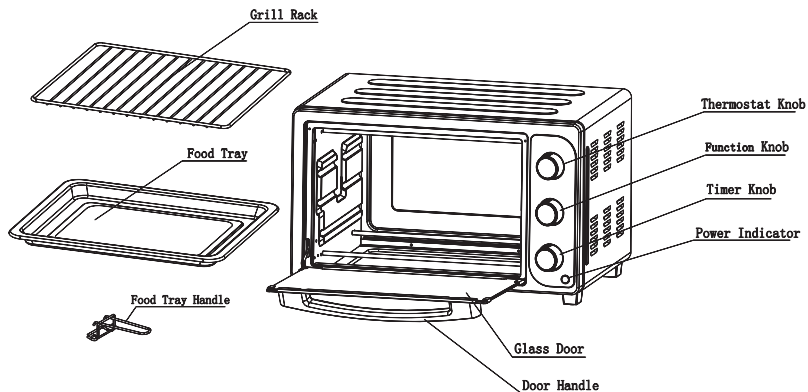


SPECIFICATIONS

Model No.	LLOT23
Power supply	220V-50Hz
Power consume	1380W
Packaging meas.	497x355x320mm
Net weight	6.2KGS


Warning: If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

PRECAUTIONS

 If the oven is positioned too close to a wall, the wall will be burned or stained. Be sure the curtain etc. are not in contact with the body. Do not put anything between the bottom of the body and the surface on which it is set; an object so placed could be burned.

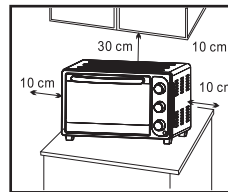


 - Do not put anything on the oven while using it. The heat could cause deformation, cracking etc.

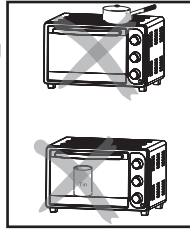


- Any bottled or tinned food can not be heated directly as it would broke out and hurt the person.

 - Be careful not to burn yourself during use or immediately after use. The metal parts and glass window of the door become extremely hot during use; do not touch it.



 - AC power must be taken from a properly-wired outlet. Insert the plug completely into the socket. Do not use an electric light outlet. Never connect multiple plugs to the same outlet.



Always use the food fork while inserting or removing the tray. Touching it will cause severe burns.



Do not apply water when is the surface of the glass panel is hot. It may cause the glass to break.

- When unplugging the cord, always take hold of the plug itself. Never pull on the cord; doing so could break the wires inside the cord.

 


- Do not position the unit close to a gas burner or other source of high temperature or do not direct an electric fan etc; during use. Doing so could prevent correct temperature control.



- Do not wet the power cord not handle the unit with wet hands. Always unplug the cord after use, or whenever the unit is to be left unattended. A malfunction while the plug is inserted into the outlet could cause a fire.




 
 
 
 


When cooking oil-splashing dishes such as roast chicken, it is recommended to put 2 sheets of aluminium foils on a tray in order to diminish oil splashing. Put one on a tray. Then oil will drip to a gap between foils.

HOW TO USE

Food Tray and Baking Net

How to use Food Fork

<p>Food Tray</p> 	<p>Roast Chicken, Hamburg Steak, Gratin, Sponge Cake, Almost all other oven-cooked foods.</p>	
<p>Baking Net</p> 	<p>Baked Potatoes, Dry Foods.</p>	
<p>Food Tray and Baking Net</p> 	<p>For foods which will drip (boiled fish; etc.)</p>	

 
The trays are not perfectly square.

Note:

Be careful when removing pudding and other hot liquids.

RACK SUPPORTS

You can adjust the tray at 4 different positions according to the dishes you want to cook. For instance, when making macaroni gratin and you want to have the top part cooked the most, use the second or the second rack support. For cooking a chicken, use the fourth rack support.

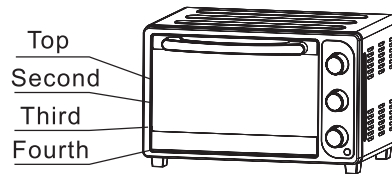

OPERATING INSTRUCTIONS

Before using the unit for the first time:

Heat the empty oven.

1. Insert the tray and baking net.
2. Set the temperature control dial to "250°C" and heat the empty oven for about 10 minutes.

Note:




There may be some smoke and a burning smell at first, but this is not a malfunction.

TEMPERATURE CONTROL DIAL

Set the temperature control dial for the dishes which you are going to cook.

HEAT OPERATING SWITCH

Select "Upper", "Lower", "Upper + Lower" according to the dishes you are going to cook.

-  Upper
-  Lower
-  Upper + Lower

**TIMER**

 
1. Set the arrow on the timer knob to the number which indicates the cooking time (minutes) according to the dishes you are going to cook.
2. Set the timer by turning it clockwise. The oven will turn off automatically at the end of the selected time and a bell will ring.

- When setting the timer to less than 5 min, turn it to more than 6 min and then back to the selected time.

3. The oven can be turned off manually during cooking by turning the timer counter-clockwise to the "0" position.

NOTE:


If the inside of the oven is dirty, cooking may take slightly longer than usual.

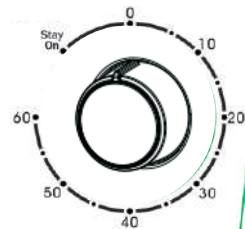

METHODS OF CLEANING



 Take off the plug and cool down before cleaning.

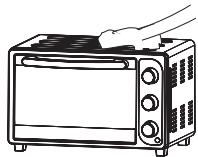

When cleaning, wash the interior and exterior surface, tray, net or food fork with soft cotton (or sponge) dip in neutral cleaner. Then wash with clean water. Do not use hard brush or any others to wash, so as not to scrape the interior surface of the oven, the protector of the tray, the net and the food fork.



Do not use the toxic and abrasive cleaners such as gasoline, polishing powder, solvent.

BAKING REFERENCE OF COMMON FOOD

Type of food	Number or thickness	Temperature(°C)	Time(min.)
Sandwich	2-3 pcs	200	2~3
Toast	2-4 pcs	250	2~5
Hamburger	2-3 pcs	200	3~5
Fish	/	200	7~10
Ham	2 cm	200	7~12
Sausage	3-4 pcs	200~250	8~10
Cake	/	150	20~30
Steak	1-2 cm	250	10~15
Chicken	Half chicken	175~200	30~40

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 2 years

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

- This warranty is void if:
 - The completely filled warranty card is not presented at the time of servicing the product.
 - The product is not operated according to the instructions given under the user manual.
 - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - Product label specifying the model number, serial number and production code has been removed and altered.
 - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
- All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
- Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

Lifelong Online Retail Private Limited

For queries and complaints:

please contact: customercare@lifelongindia.com

www.lifelongindiaonline.com