

AQUARIUM INSTRUCTIONS FOR USE

For Household Use Only

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



5 Gallon PanaView Aquarium Kit Model AP15005

Children under the age of 13 should be supervised by an adult with the setup, maintenance and care of fish.

ISZ-5G-GN

COPYRIGHT 2019

1. Your Aquarium

People of all ages enjoy looking at aquariums. Aside from the belief that an aquarium is beautiful, many also believe having an aquarium can be relaxing, rewarding and a great conversation piece all at the same time. You will have many enjoyable hours with your new aquarium and fish.

Included in your Aquarium Kit:



Power Filter uses Tetra Whisper® Small Cartridge to keep filter running efficiently



4. Rinsing Gravel and Decor

 
Rinse aquarium, filter, stones, plastic plants, and other decorations under running tap water. Place gravel in a colander or new bucket and rinse under running tap water until water runs clear. Never clean aquarium, decorations or filter with household soaps as they can harm your fish.



***Gravel and Decorations not included with aquarium kit**

2. Important Instructions

Read This Section before operating this unit. **For Household Use Only.** Remove all parts from package carefully. Confirm your tank has not been broken or damaged during shipment before you start the setup process. Completely install aquarium before operating. The LED Hood, powered by a 12V power adapter (ASZEC6S), and the power filter (ASZEP10-PL), both plug into 120V household outlet. To avoid the unit plugs or receptacle from getting wet, position the tank and stand to one side of a wall mounted receptacle to prevent water from dripping onto it. A "Drip Loop" should be made with the cord as shown at right to keep receptacle dry.

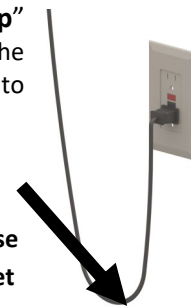

Recommended to use GFCI Electrical Outlet if possible

5. Adding Water

Fill the aquarium with water to within two inches from the top of the tank. Treat water with a de-chlorinator to remove chlorine and chloramines from tap water that can be harmful to your fish. Check thermometer to confirm water temperature in aquarium has reached room temperature.



3. Tank Placement

Leave enough space in back of the aquarium to allow easy access to the filter and various electrical cords from the electrical equipment.

Good places for your aquarium

- On a table or aquarium stand that's capable of bearing the weight of your filled aquarium.

Places to avoid

- Near direct sources of sunlight (e.g. windows), unwanted algae growth may occur.
- Near direct sources of heat or air conditioning (e.g. radiator, forced air vent).
- Drafty areas.
- Around sources of noise (e.g. stereo speakers, TV).
- Do not place aquarium on any surface that can be damaged by water or where water can come in contact with other electrical appliances.



6. Installing Hood and LED Light

Insert USB connector plug into USB port located at the side of the hood..

 
 


This uniquely designed hood can either be tilted back by lifting upward from the front or completely removed for tank maintenance.

7. Installing Power Filter

Locate the adjustable hanger mounting bracket inside the box. Place the hanger bracket at 90° and align one of the adjustment holes onto the mounting post, rotating it upwards until hanger is vertical. Install the filter inside the aquarium by hanging the filter onto the aquarium rim in notch in center of tank.

PLACE HANGER AT 90 DEGREES ON POST

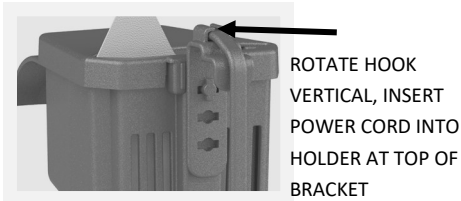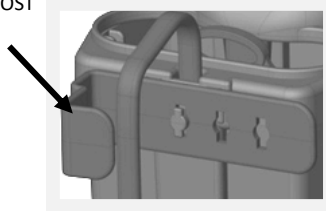

ROTATE HOOK VERTICAL, INSERT POWER CORD INTO HOLDER AT TOP OF BRACKET

 
9. Operating LED Light

To select preferred color, press on the BLUE BUTTON. Each consecutive press of the button changes the color or setting. There are 7 color selections along with 4 transitioning and or color combinations plus off selection.



8. Water Level

The water level of the filled aquarium should be above the line on the front of the filter housing. To raise or lower the Filter adjust the hanger mounting bracket by rotating the hanger bracket 90°, removing it, and replacing it in an alternate alignment hole.

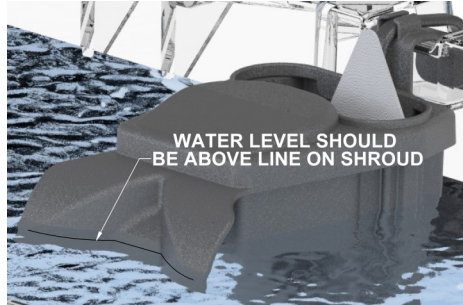

WATER LEVEL SHOULD BE ABOVE LINE ON SHROUD

10. Optional Heater

Select proper sized heater appropriate for your aquarium size. Read and follow the heater's instructions. Check with your retailer for recommended heater settings. Adjust heater settings as directed. Confirm water temperature with thermometer. Always use a power strip with surge protector to safeguard your electrical equipment.

Heater and Thermometer not included, must be purchased separately



Remove knock-out with small saw or hacksaw, cutting through the connected tabs



LED LIGHT FCC COMPLIANT



FCC Verification Tested
Certificate Of Conformity
PRSZ1707281E

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED WARRANTY

KOLLER PRODUCTS LLC warrants this aquarium product to be free from defects in material and workmanship under normal use and service and according to the provisions as specified in the accompanying assembly and operating instructions, for a period of 1 year from date of purchase.

This warranty does not cover and KOLLER PRODUCTS LLC is not liable for the cost of repair or replacement of parts which have been subject to misuse, negligence, accident, improper installation, damage during shipment or handling, normal deterioration due to wear and exposure or defects caused by unauthorized parts or modification.

UNDER NO CIRCUMSTANCES WILL KOLLER PRODUCTS LLC BE LIABLE FOR ACCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROPERTY OR EQUIPMENT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you the legal rights, which vary from state to state.

**WARRANTY HELP
REPLACEMENT PARTS
OR
TECH SUPPORT
IF ANY COMPONENTS ARE
DAMAGED OR MISSING
DO NOT RETURN TO RETAILER
PLEASE CONTACT
customercare@kollerproducts.com
(800) 545-1344**

Whisper® is a registered trademark of Spectrum Brands.

Manufactured by Koller Products, LLC
Shawnee, KS 66218 USA