

MANUAL

AGARO

Wet & Dry Vacuum Cleaner




Model: ACE

Item no - 33290



Know your product

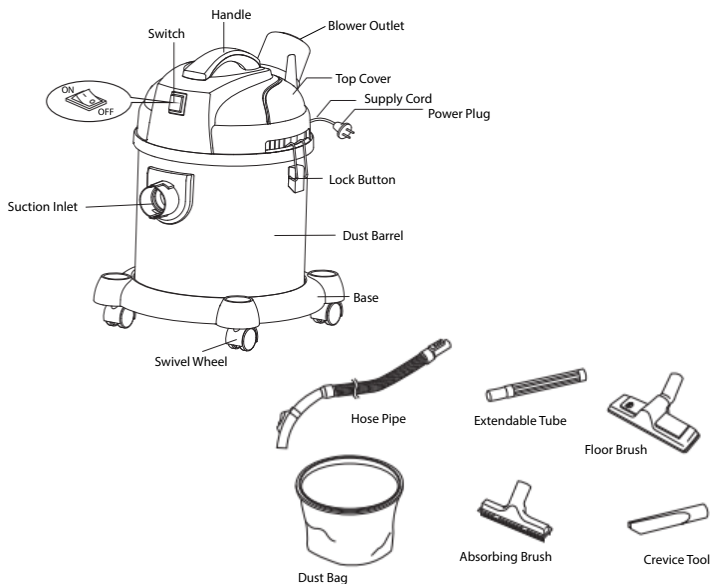


You can choose suitable accessories as per the requirement:

- Floor Brush: For cleaning the dust on hard floor or the carpet
- Absorbing Brush: For cleaning the water on hard floor or the carpet
- Crevice Brush: For cleaning corner edge or tight spots

Caution

- This appliance is for domestic use only
- Before using the appliance, check that the mains power voltage corresponds to the voltage shown on the rating plate
- Do not use it near any flammable and explosive place. (Fig 1)
- Do not block the flow of air. Blocking the air suction or exit may damage the motor. (Fig 2)

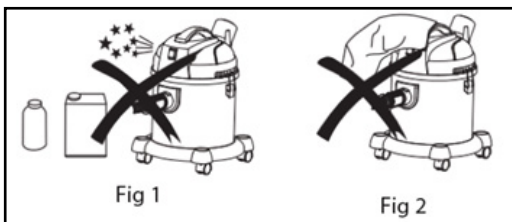

- Do not use to suck ashes, lighted cigarettes or any combustible material
- Do not use against any sharp materials
- Do not turn over the vacuum cleaner otherwise the water/dirt may damage the motor (Refer: Fig-3)

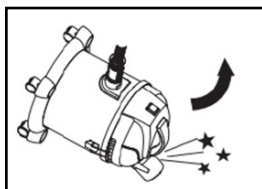


Fig-3

- Always remove the plug from the power socket when the appliance is not in use and before carrying out any cleaning or maintenance operation
- Check the hose periodically. Replace it in time if there is any way damaged
- If the supply cord is damaged, it must be replaced immediately
- Never use methylated spirits or other solvents to clean the appliance
- Never leave the appliance unattended when it is switched on
- This appliance should not be used by children and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge until they are given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved

How to use

Connecting the accessories

Insert the flexible hose in to the air intake duct. To do this, slide the intake duct cover, insert the hose and press until it clicks into the position. (Fig 4)

To remove it, press down the button and pull out the hose. (Fig 5)

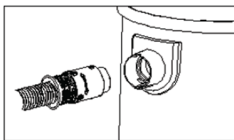


Fig-4

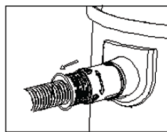


Fig-5

To use the blow function, just need plug the hose into blowing port. Connect the flexible tube, extension tube and accessories correctly (Fig6)

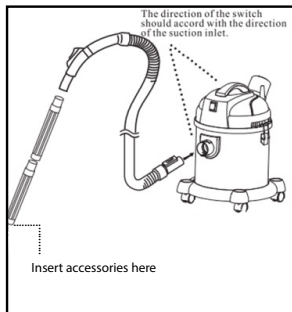


Fig-6

Switch on the vacuum cleaner

Before use please check the dust bag is installed

Press the ON/OFF button to switch the appliance on (fig 7)

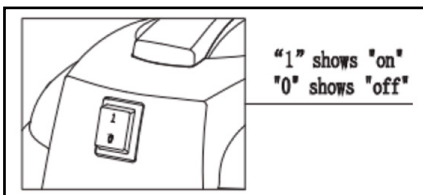


Fig-7

Adjust the air power control knob on handle to adjust the suction. (Fig 8)


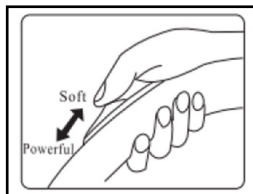


Fig-8

Note: Please take out the dust bag when used against water (Fig 9)

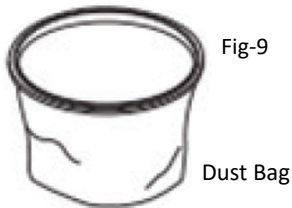

Safety device

- When there is full of water in the barrel, the float will be rise and the appliance would stop working. In addition you will hear an abnormal sound. Cut off-the power supply immediately. Spill out the water from the barrel. Then restart the machine.
- If the vacuum cleaner gets overturned, the float will rise. In that case, cut off the power supply immediately and upturn the vacuum.
- If you run the vacuum or leave it alone while the float is risen, it may damage the motor and lead to fire.

Maintenance

Clean the dust barrel

When the suction pressure decreases, cut off the power supply and empty the barrel in time.

Refer to the following steps (Fig 10)

- (1) Release the lock button and lift the top cover.
- (2) Before remove the dust bag, hold the center edge of the bag and shake it around 20 time up and down.

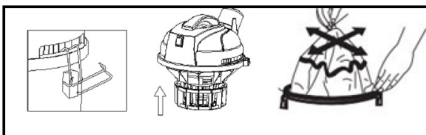


Fig-10

Remove the dust bag and clean the dust from the barrel (Fig 11)

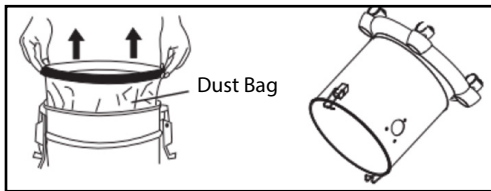


Fig-11

If you do not empty the barrel timely, the dust in the barrel will emit smell. So please clean the barrel periodically. Before use again, dry it

Clean the dust bag

1. If the dust bag gets blocked, clean it with water.
2. Remove the dust bag. Clean it. Dry it.

Note: Do not use boiled water to clean it or dry near fire.

Clean the vacuum cleaner and the accessories

1. Clean the accessories and the vacuum with soft wet cloth or neutrality cleanser.
2. Do not clean the body of vacuum cleaner with petrol or oil-like liquid. Please wipe it with water or neutral detergent. When you wipe the appliance, please dry with soft cloth.
3. Remove the sun-dries adhering to the floor brush with old tooth brush every month. (Fig12)

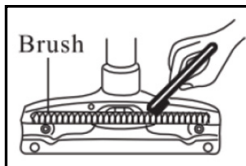


Fig-12

Troubleshooting

Trouble	Check part	Resolve
Motor doesn't work	Power plug	If it doesn't plug in, plug in
Suction decrease	Hose	If it is blocked, clean it; If straight tube doesn't connect well, connect it well
	Dust barrel	If there is full of water, empty it.
	Dust bag	If it is blocked, clean it.
Hose comes away from the seat	Hose connection	Plug the hose into the seat.

LIMITED ONE YEAR WARRANTY

WARRANTY CARD

Product Name : Agaro Wet & Dry Vacuum Cleaner
Model : ACE (Item No - 33290)
Name, Address & Contact no of customer :
Name, Address & Contact no of dealer :
Date of Purchase :
Warranty Valid upto :

Scan - For Warranty Registration



or visit: www.agarolifestyle.com/product-registration

**(Must register within 30 days
from date of purchase to avail
6 MONTHS EXTENDED WARRANTY)**

- Please scan the **QR CODE** for product registration and avail "**6 MONTHS EXTENDED WARRANTY**" on product
- Please preserve the invoice for product warranty claim. Customer purchasing from online platforms needs to produce the Online Partner's Invoice copy to claim the warranty

Scan - To File Complaint



or visit: www.agarolifestyle.com/service

**(Fill & submit the form if you are
facing any product related issues)**

For any feedback or complain, you can also connect us at:
**UNIVERSAL CORPORATION LIMITED, 4/1 Middleton Street, Sikkim Commerce
House, Kolkata-700071**
Email Address : info@uclindia.com
Customer Care No: 9821486487

.....
Dealer's Stamp & Signature

To checkout wide range of AGARO products,
please visit www.agarolifestyle.com



Home Appliances



Electric Tooth Brush



Massager



Hair Dryer



Trimmer



Healthcare



Music & Sound



Luggage



Treadmill

& much more...