

LET'S GO.

wemo  
MINI  
Quick Start Guide


1



**GET THE APP**

Download (but don't launch)  
the latest Wemo app.

2

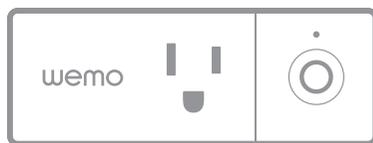

**THE HARD PART**

Plug your Mini into any outlet. Wait until the  
Wi-Fi® indicator light flashes white and amber.

3



**FIND YOUR SETTINGS**

Open up your phone's settings  
and select Wi-Fi.

4



### GET CONNECTED

In your smartphone's Wi-Fi settings, connect to "Wemo.Mini."


5



### ALMOST DONE

Launch the Wemo app to complete setup. (Whew!)

6

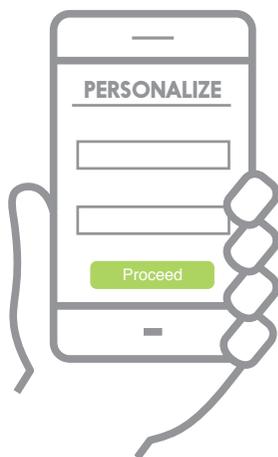

### PERSONALIZE

Press "Proceed" to complete the setup process.

## TROUBLESHOOTING

wemo<sup>®</sup>  
MINI

### **I can't find the Wemo network in my Wi-Fi list.**

Make sure your Mini is plugged in and the LED is alternating white and amber. If the LED is not alternating white and amber, unplug your Mini and plug it back in to reboot.

### **My Wi-Fi network doesn't appear in the Wemo app.**

Use your smartphone to confirm that you have at least two Wi-Fi bars in the vicinity of your Mini. If not, move your Mini closer to your router. (The list will refresh every 10 seconds.)

### **My Wemo appears as "Unavailable" in the app.**

Refresh the device list.

### **My Wemo app is frozen.**

Force quit and re-launch the Wemo app.

### **I just replaced my router.**

To reset the W-Fi without losing your Mini settings, hold down the power button and wait for the LED to change from amber to blinking white, then release. When the LED begins to alternate white and amber, follow steps 3–5 to associate your Mini with your new network.

### **I'm still having trouble!**

Wi-Fi networks come in a lot of shapes and sizes with many quirks of their own. It doesn't mean your Mini is malfunctioning. If problems persist, please try these steps, in this order:

1. Force quit and re-launch the Wemo app. Check to see if this fixes the issue.
2. Unplug your Mini and plug it back in. Check to see if this fixes the issue.
3. Unplug your router and plug it back in. Check to see if this fixes the issue.
4. Delete and reinstall the Wemo app. Check to see if this fixes the issue.
5. If all else fails, restore your Mini to factory defaults: First, unplug your Mini. Press and hold power button while you plug it back in. Keep holding until the LED starts blinking white, then release. Wait for your Mini to reboot (about 20 seconds). When the LED starts alternating white and amber, repeat steps 3–6 of the setup process.

### **What do all these blinking lights mean?**



The Wi-Fi indicator light is off when your Mini is connected and working normally.



The Wi-Fi indicator light alternates white and amber when it's ready for setup.



Solid white for 30 seconds means setup was successful and your Mini is on.



Blinking white means the firmware is updating.



Solid amber tells you the Wi-Fi signal is weak. Try moving your Mini closer to the router.



Blinking amber means your Mini is not connected to the Wi-Fi network. Try unplugging your router and/or Mini and plugging them back in.

Need more help?  
Visit [wemo.com/support.html](http://wemo.com/support.html)

wemo®