

AKAI

TOMORROWS TECHNOLOGY TODAY

INSTRUCTION MANUAL DVD PLAYER

MODEL: A51002

Need help?

For advice, spares and returns,

Call: +44 (0)333 220 6042

8.30am to 6.00pm Monday-Friday

Visit: www.akaionline.co



80
YEARS OF

**JAPANESE
TECHNOLOGY**

3 YEAR GUARANTEE

TECHNICAL DATA

MODEL NO:	A51002
POWER	
INPUT:	110-240V ~50 / 60HZ
WATTAGE:	15W



DECLARATION OF CONFORMITY

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive
2009/125/EC	Eco-Design of Energy Related Products.
2014/53/EU	Radio Equipment Directive.

RKW Quality Assurance.

GUARANTEE

This product is guaranteed for 12 months from the date of the original purchase.

If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

The product must be returned to the retailer with the proof of purchase.

The product must be installed and used in accordance with the instructions contained in this instruction guide.

This item is for domestic purposes only. This guarantee does not cover wear and tear, damage, misuse or consumable parts.

PFD has limited responsibility for incidental or consequential loss or damage.

Valid in the UK and Eire only.

IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

SAFETY INFORMATION

Important safety instructions – read carefully before use.

It is important that this instruction manual should be retained with the appliance for future reference. These warnings have been provided in the interest of safety. You **MUST** read them carefully before installation or use.

WARNING

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the power cord.
- Do not use the appliance outdoors.

IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Do not block any ventilation openings & Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Battery usage CAUTION. To prevent battery leakage which may result in bodily injury or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.)
 - Remove batteries when the unit is not used for a long time.
- If the appliance is not going to be used for a period of time please ensure that it is fully disconnected, from the mains power.
- Press the battery cover back to close until it is tight.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department: +44 (0) 333 220 6042

Battery installation (for the remote control)

- Open the Battery cover on the underside of the unit.
- Insert 2 "AAA" 1.5V batteries (not included) following the polarity as indicated in the compartment. Alkaline batteries are recommended for long using time.



Class 1 Laser Product
Luokan 1 Laserait
Klasse 1 Laser Apparat
Laser Klasse 1




CAUTION
RISK OF ELECTRIC
SHOCK



FEATURES AND CONTROLS


FRONT PANEL

- | | |
|-----------------------------|----------------------|
| 1. CD TRAY | 5. PLAY/PAUSE BUTTON |
| 2. INFRARED RECEIVER WINDOW | 6. POWER BUTTON |
| 3. OPEN/CLOSE BUTTON | |
| 4. USB PORT | |

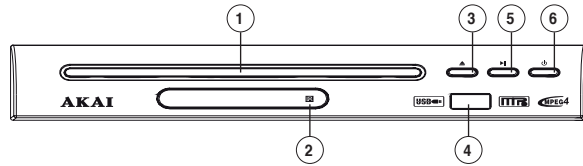


REAR PANEL

- SCART OUTPUT
- AC IN

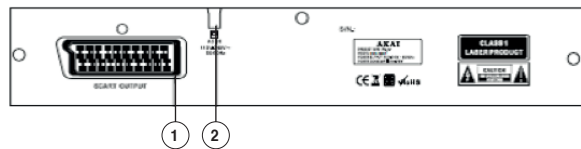

REMOTE CONTROL

- | | |
|----------------|--------------|
| 1. STANDBY | 21. AUDIO |
| 2. 0-9, 10+ | 22. ANGLE |
| 3. SETUP | 23. SUBTITLE |
| 4. UP | 24. GOTO |
| 5. LEFT | 25. ZOOM |
| 6. DOWN | 26. RIGHT |
| 7. TITLE | 27. OK |
| 8. PLAY | 28. MENU |
| 9. L/R | 29. PAUSE |
| 10. STOP | 30. VOL + |
| 11. N/P | 31. MUTE |
| 12. STEP | 32. VOL - |
| 13. REPEAT | 33. SLOW |
| 14. A-B | 34. RETURN |
| 15. REV | 35. PROG |
| 16. FWD | 36. DVD/USB |
| 17. PREV | 37. CLEAR |
| 18. NEXT | 38. PBC |
| 19. OPEN/CLOSE | 39. RESET |
| 20. OSD | |

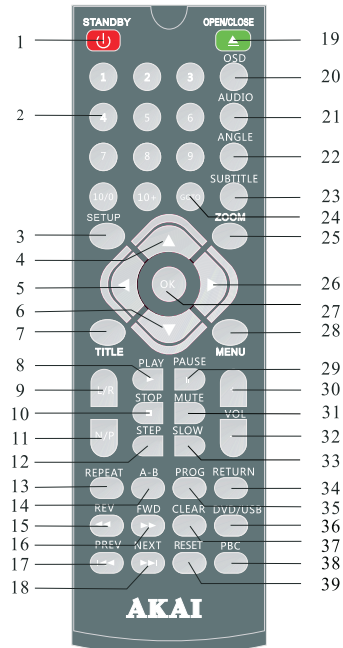

USING YOUR APPLIANCE

REMOTE CONTROL SETUP:

- Remove the battery cover on the back of the remote control and insert 2 X AAA batteries (not supplied) and then close the cover.
- When using the remote control, please point the remitting port (at the top of the remote control) directly at the receiver window on the DVD player.
- If the remote control will only function a short distance from the DVD player, replace the batteries. Always replace both batteries at once.
- Check the batteries regularly. Any leakage can damage the remote control.

REMOTE CONTROL:

- **STANDBY** – Press to put the DVD Player on standby, or turn to it on.
- **NUMBER BUTTONS:** Use for entering numbers to choose DVD chapters, set the time etc.
- **SETUP:** Press to enter the Setup menu.
- **UP:** Press to move up through a step.
- **LEFT:** Press to move back a previous step.
- **DOWN:** Press to move down a step.
- **TITLE:** Press to open the selection menu of the DVD disc. Use the UP/DOWN/LEFT/RIGHT arrow buttons to move through the menu. Press ENTER to confirm your selection.
- **PLAY:** Press to play a disc.
- **L/R:** For use with VCDs or DVCDs. Press to select left/right/stereo etc. For multi-output modes, press this button to switch between channels.
- **STOP:** Press to stop the playback.
- **N/P:** Toggle between AUTO/PAL/NTSC.
- **STEP:** When playing DVD/SVCD/VCD discs press once to move to the next frame.
- **REPEAT:** Press repeat when watching a DVD to repeat the chapter, repeat the title or turn off repeat.
- **A-B:** Press the A-B button at the point where you want to begin repeat play, and then press again at the point where you want to stop repeat play. The selected section will be repeated until you press clear.
- **REV:** Press to rewind quickly.
- **FWD:** Press to fast forward quickly.
- **SKIP BACKWARD:** Press to skip to the previous chapter or track.
- **SKIP FORWARD:** Press to skip to the next chapter or track.
- **OPEN/CLOSE:** Press once to eject the disc tray. Press again to close the disc tray.
- **OSD:** Press the OSD button repeatedly to cycle through different options of on-screen display.
- **AUDIO:** Select the right or left output option.
- **ANGLE:** Some discs have multiple angle options. Press the angle button repeatedly to cycle through different camera angles.
- **SUBTITLE:** If the disc is equipped with subtitles, press this button repeatedly to select a subtitle language, or to turn off the subtitles.

- **GOTO:** Press to select or view the title, chapter, audio, subtitle language, angle, title time, chapter mode and display time.
- **ZOOM:** Press to select 2X, 3X or 4X Zoom. Press again to turn off Zoom.
- **RIGHT:** Press to navigate right between menu options.
- **OK:** Press to confirm a selection.
- **MENU:** Press to return to the main menu of a disc or DVD.
- **PAUSE:** Press the pause playback.
- **VOL +:** Press to increase the volume.
- **MUTE:** Press to mute the sound.
- **VOL -:** Press to decrease the volume.
- **SLOW:** Press to play disc is slow motion, without sound. Press again to turn off the slow motion.
- **RETURN:** For any discs that are not DVDs, press to return to the track list menu during playback.
- **PROG:** Press to program the playback order.
- **DVD/USB:** Use to toggle between DVD and USB options.
- **CLEAR:** Press to clear a selection.
- **PBC:** Press to return to the PBC menu.
- **RESET:** Press to revert to default settings.

INSTALLATION:

Select a stable, flat surface to the side or near a TV set to install the DVD player.

Do not install on top of a TV or monitor.

Do not block the vents by placing the DVD player directly on to carpet, a bed, a sofa or by covering it with a cloth.

Do not place any objects on top of the DVD player.

Do not move the DVD player during playback.

Do not install the DVD player and speaker system in any place that is:

- Exposed to direct sunlight
- Extremely hot or cold
- Poorly ventilated or exposed to humidity
- Exposed to dust
- Exposed to smoke, steam or heat (such as a kitchen or bathroom)

USING YOUR APPLIANCE:

Connecting with the SCART lead (not included):

1. Connect the DVD player to your TV using a SCART lead.
2. Plug the DVD player in at the mains and turn on using the Standby button.
3. Turn your TV on. If the TV does not automatically show the DVD player loading screen, use your television remote to select the required input channel. Alternatively, press the source button on the DVD remote repeatedly to enter AUX/Line mode, indicated by a white light.
4. Use the eject button to eject the loading tray in the DVD player and insert a DVD. Close the loading tray.

USING YOUR APPLIANCE

SETUP:

The following tables show the different on-screen setup options.

1. Press set up key to access the set up menu
2. Press direction key to an item, then press select to confirm.
3. Press set up or return key to exit setup menu.

USB

With the USB function, you can play video files directly from a USB flash drive. Insert the USB flash drive into the USB port and press the DVD/USB button on the remote control to select the USB function.

LANGUAGE:

DVD Menu Language	Audio	Subtitles	MPEG 4 Subtitles
English	English	English	Western European
Spanish	Spanish	Spanish	Central European
Italian	Italian	Italian	
		Auto	
		Off	

VIDEO :

Aspect Ratio	View Mode	TV System	Video Output
4:3	Fill	Pal	CVBS
16:9	Original	NTSC	RGB
	Auto Fit	AUTO	
	Pan Scan		

PARENTAL CONTROL:

Rating
1. Kid Safe
2. G
3. PG
4. PG-13
5. PG-R
6. R
7. NC-17
8. Adult

MISC:

Password	Screen Saver	Default Setting
Set Password	On	Select

PARENTAL CONTROLS:

In order to use the internal rating feature, the Parental Control and password must be on. The default password is '0000'.

- Select Parental Control and choose the required age rating. Then, select Set Password, press OK and input the code 0000.
- Select Set Password to change the password. Input the new password and press confirm.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Power connected but DVD player does not work.	Plug not inserted correctly.	Connect the power supply again.
Disc inserted, but no tracks and the play time shown on the TV screen.	Disc inserted upside down, Disc is dirty or cracked.	Correctly insert the disc, clean or replace the disc.
No sound	The AV cable is not correctly connected or is loose.	Reconnect the AV cable and ensure the TV is on the correct channel.
No picture.	The cables are not inserted correctly.	Re-insert the cables, check the SCART lead or AV cable is connected correctly.
The remote control does not work.	The battery does not have enough power, the remote controller is not correctly pointed at the remote sensor or the remote sensor is dirty.	Change the battery. Point the remote controller directly at the remote sensor, clean the surface of the remote sensor.
During playing, the picture stops moving, skips or the sound is abnormal.	The disc is not in good condition - cracked or dirty The speaker is interfering with DVD playback.	Clean or replace the disc, move the speaker away from the player.

NOTE:

1. In order to prolong the player life, please restart the DVD player after 30 seconds when power off.
2. Please pull the plug out if the player is not being used.
3. This player must be connected to a matching rated voltage.


CLEANING & MAINTENANCE

DVD PLAYER:

Use a soft slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

CLEANING DVDs:

When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out. Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

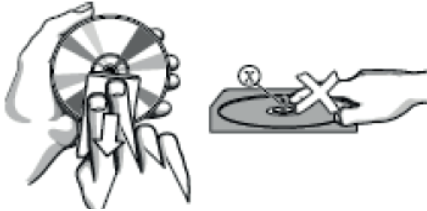

GLOSSARY OF TERMS


A-B Repeat:	The A-B button on a remote control, not to be confused with the Repeat button. Pressing the A-B button allows you to manually select a section to repeat.	Ratings:	
AC IN:	AC Input socket for AV Cables	G Rating:	Suitable for all audiences.
AV Cable:	AV Cables are used to transmit audio/visual signals.	PG Rating:	Parental guidance suggested; some material may not be suitable for children.
CVBS:	Composite Video Blanking and Sync. A type of video signal which is mainly analogue.	PG-13 Rating:	Parental guidance strongly cautioned; some material may be inappropriate for children under 13.
DVD:	A compact disc that stores large amounts of high-resolution audio-visual data.	R rating:	Restricted; contains some adult material, under 17's require an accompanying parent or adult guardian.
DVCD:	Double Video Compact Disc - a type of VCD that holds video and audio.	NC-17:	Adults only.
FPS:	Frames per second.	RCA Cable:	A type of connector used to transit audio/visual signals.
L/R VIDEO OUTPUT:	Left and Right video outputs for RCA Cable input. Colour coded red and white to match with corresponding cable connections.	RGB:	Video input in which red, green and blue colour information is transmitted separately from the picture information of an image. A common Video Output option.
NTSC:	A television display system used in the U.S and Canada. Delivers a frame rate of 30 fps using 525 lines.	SVCD:	Super Video Compact Disc - a digital format for storing video on standard compact discs.
OSD:	On-screen Display. A control panel that allows you to select and edit the display (such as brightness and contrast) and select viewing options.	SCART OUTPUT:	A 21 pin socket used to connect video equipment.
PAL:	A television display system commonly used in Europe and parts of Asia. Delivers a frame rate of 25 fps with 625 lines.	SCART LEAD:	Cable commonly used to connect televisions and DVD players, VCR or games consoles.
PBC:	Playback Control.	USB:	Universal Serial Bus. A popular connection for sharing and transferring data from external devices.
		USB PORT:	A port to connect a USB flash drive to.
		VCD:	Video Compact Disc, designed to hold MPEG-1 video data and to include interactive capabilities.

ELECTRICAL SAFETY

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

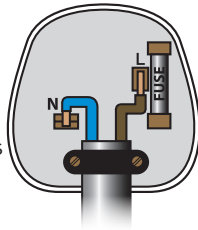


Blue neutral [N] **Brown** live [L]

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - and then cut it off the mains lead and immediately dispose of its safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance is double insulated.
Do not connect any wire to the earth terminal.

RECYCLING

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



NOTES

NOTES

AKAI
TOMORROWS TECHNOLOGY TODAY

80

YEARS OF

**JAPANESE
TECHNOLOGY**

Need help?

For advice, spares and returns.

Call: +44 (0)333 220 6042

8.30am to 6.00pm Monday-Friday

Visit: www.akaionline.co

Distributed throughout the UK by RKW LTD

3^{*} YEAR GUARANTEE

*REGISTER YOUR PRODUCT ONLINE AT WWW.AKAIONLINE.CO
AND ENJOY 3 YEARS PEACE OF MIND

AKAI CUSTOMER SERVICES
+44 (0) 333 220 6042